


COHIBA User Manual

Version 7.0

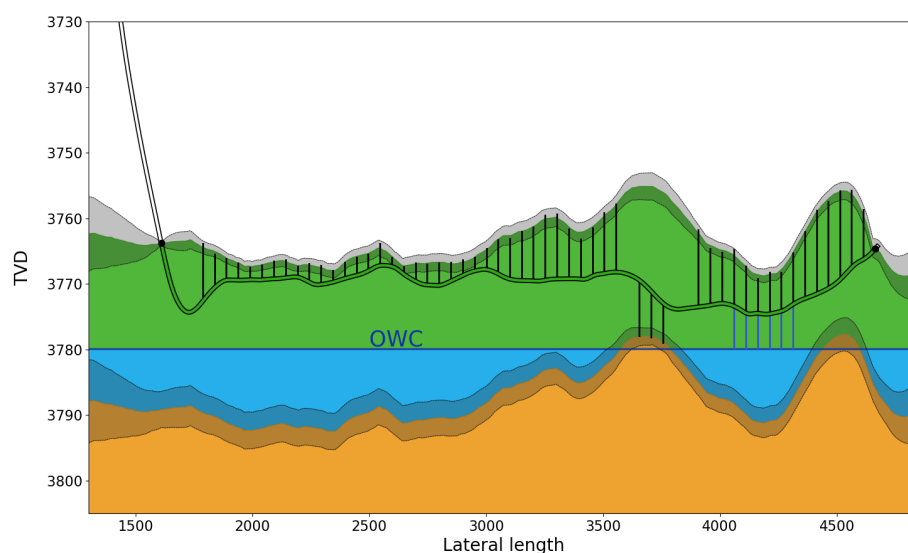

Note no
Authors

Date

SAND/04/21

Petter Abrahamsen
Pål Dahle
Vegard Berg Kvernelv

Audun Sektnan
Ariel Almendral Vázquez
Ingrid Aarnes

May 5, 2021

Norwegian Computing Center


Norsk Regnesentral (Norwegian Computing Center, NR) is a private, independent, non-profit foundation established in 1952. NR carries out contract research and development projects in information and communication technology and applied statistical-mathematical modelling. The clients include a broad range of industrial, commercial and public service organisations in the national as well as the international market. Our scientific and technical capabilities are further developed in co-operation with The Research Council of Norway and key customers. The results of our projects may take the form of reports, software, prototypes, and short courses. A proof of the confidence and appreciation our clients have in us is given by the fact that most of our new contracts are signed with previous customers.

Title	COHIBA User Manual Version 7.0
Authors	Petter Abrahamsen , Pål Dahle , Vegard Berg Kvernelv , Audun Sektnan , Ariel Almendral Vázquez, Ingrid Aarnes
Date	May 5, 2021
Publication number	SAND/04/21

Abstract

This user manual describes the COHIBA surface modeling software. It consists of:

Part I	Introduction:	Basic ideas and terminology
Part II	User manual:	Usage, input data, and results
Part III	Tutorials:	Special topics such as volumes, simulation, and faults
Part IV	Reference manual:	Descriptions of all COHIBA model file elements
Part V	Theory:	Methods used by COHIBA
Part VI	Appendix:	Release notes, known issues, references, list of acronyms, tables and figures, and an index

Advanced topics and technicalities are marked by the warning symbol  in the right margin. [COHIBA model file](#) elements marked by this warning symbol should be used with some care.

The latest version of this document is available at: www.nr.no/COHIBA. For COHIBA support contact Pal.Dahle@nr.no or Ariel.Almendral.Vazque@nr.no.

The following scientists at Norwegian Computing Center has contributed to the development of COHIBA:

Petter Abrahamsen	Pål Dahle	Frode Georgsen
Vera Louise Hauge	Gudmund Hermansen	Odd Kolbjørnsen
Lars Bakke Krogvik	Vegard Berg Kvernelv	Inge Myrseth
Audun Sektnan	Arne Skorstad	Harald Soleng
Ariel Almendral Vázquez	Maria Vigsnes	Ingrid Aarnes

The front page shows a cross section along a horizontal well. The black dots are well points and the vertical lines are *distance data* usually obtained from [deep directional resistivity \(DDR\)](#) data. See [Section 8.5](#) for more details on distance data and [Figure 8.12](#) for an explanation of the front page picture.

Keywords	mapping, surfaces, kriging, depth conversion, prediction, deterministic, stochastic simulation, horizontal wells, gross rock volume, spill point, well path uncertainty, DDR
Target group	COHIBA users
Availability	Open
Number of pages	254
Copyright © 2021	Norwegian Computing Center

Contents

I	Introduction	1
1	What is COHIBA?	2
1.1	COHIBA basic idea	2
1.2	COHIBA main features	3
1.3	COHIBA methodology	10
1.4	COHIBA input data	11
1.5	Quality control	12
1.6	Robust estimation of trends	13
1.7	Platforms and portability	13
1.8	The name	13
2	Terminology and concepts	14
II	User manual	18
3	Getting started	19
4	COHIBA command line options	22
4.1	Specifying the random seed	22
4.2	Specifying number of realizations	22
4.3	Spill point detection	22
5	The COHIBA model file	24
5.1	Editing the COHIBA model file	24
5.2	Errors reading the COHIBA model file	24
6	Files and directories	26
6.1	File directory structure	26
6.2	Surface file formats	28
6.3	Well data file formats	28
7	The COHIBA output	33
7.1	Output surfaces and maps	33
7.2	The log files	37
7.3	Files in the cross-validation/ directory	46
7.4	Files in the spill-points/ directory	47

7.5	Files in the target-points/ directory	48
7.6	Files in the well-logs/ directory	48
7.7	Files in the well-points/ directory	48
7.8	Files in the zonation-points/ directory	50
7.9	Files in the dip-points/ directory	50
7.10	Files in the distance-points/ directory	50
7.11	The expert/ directory	53
8	Well data	56
8.1	Using well path with zone logs	56
8.2	Close well points	57
8.3	Extracting well points from zone logs	58
8.4	Horizontal wells	64
8.5	Distance data	68
8.6	Dip data	71
III	Tutorials	73
9	Volume calculations	74
9.1	Calculating the volumes	76
10	Stochastic simulation example	77
10.1	Acceptance criteria	77
10.2	Results	79
11	Multiple models	84
11.1	Example from the Brent Group	84
12	Faults	92
13	Free surfaces	94
13.1	Linking free surfaces to other surfaces	94
14	Correlated intervals	95
14.1	Calculating correlations	95
14.2	Correlating the trend coefficients using thickness ratios	96
14.3	Example	97
15	Polynomial trends	99
15.1	Model specification	99
15.2	Technical details	100
15.3	Estimating the trend coefficients	100

16	The linear velocity model	104
16.1	Model specification	104
16.2	Modeling options	105
16.3	Linearization	107
IV	Reference manual	108
17	COHIBA model file elements	109
17.1	<project-settings> (required)	110
17.2	<model-settings>	123
17.3	<well-data>	142
17.4	<surfaces> (required)	148
17.5	<intervals> (required)	158
17.6	<volumes>	166
18	List of all elements	169
19	COHIBA model file example	177
19.1	COHIBA log file example	181
V	Theory	194
20	Prediction of surfaces	195
20.1	Surfaces and intervals	195
20.2	Stochastic model for surfaces and intervals	196
20.3	Estimating the trend coefficients	197
20.4	Prediction of surfaces using kriging	202
20.5	Depth conversion	206
20.6	Gridding effects	209
21	Stochastic simulation	211
21.1	Unconditional simulation	212
21.2	Depth conversion	212
21.3	Stochastic simulation versus prediction	212
21.4	Rejection sampling	214
22	Variogram examples	215
23	Conditioning to zone logs	219
23.1	Procedure for conditioning to zone logs	219
23.2	Well path TVD uncertainty	221
23.3	Procedure for conditioning to zone logs with well path TVD uncertainty	223
23.4	Clusters of surface constraints	225

VI	Appendix	227
A	Release notes	228
B	The future.	233
B.1	Ongoing funded developments	233
B.2	Possible developments lacking funding	233
B.3	Known issues	234
	References	235
	Acronyms	237
	List of Figures.	239
	List of Tables	241
	Index	242

Part I

Introduction

1 What is COHIBA?

COHIBA is a computer program that provides a fast and accurate method for generating a set of deterministic surfaces using prediction, or a set of random realizations of the surfaces using stochastic simulation. COHIBA can use information from:

- Surface observations in wells (well points)
- Horizontal well paths with zone logs
- Distance data from well path to surface
- Dip at well points
- Travel time maps
- Interval velocity models
- Geological interpretation of depositional thickness
- Spill point depth

COHIBA uses the available data in a consistent manner to minimize the uncertainty. The accuracy is further improved by linking together all surfaces in a consistent multi-layered model.

COHIBA provides two ways of evaluating uncertainty:


- A local depth uncertainty at every surface location can be calculated.
- Stochastic (Monte Carlo) surface realizations can be generated. A set of these span the uncertainty range.

COHIBA can update uncertain well paths to ensure consistency with the surfaces. This is done by modifying the **true vertical depth (TVD)** values along the well paths.

COHIBA can calculate the volumes between surfaces and hydrocarbon contacts.

1.1 COHIBA basic idea

Surfaces are modeled as a sum of a *trend* and a *residual*. The trend captures the large scale shape of the surface and the residual captures (small) deviations between the trend and the unknown *true* surface. This is illustrated here:

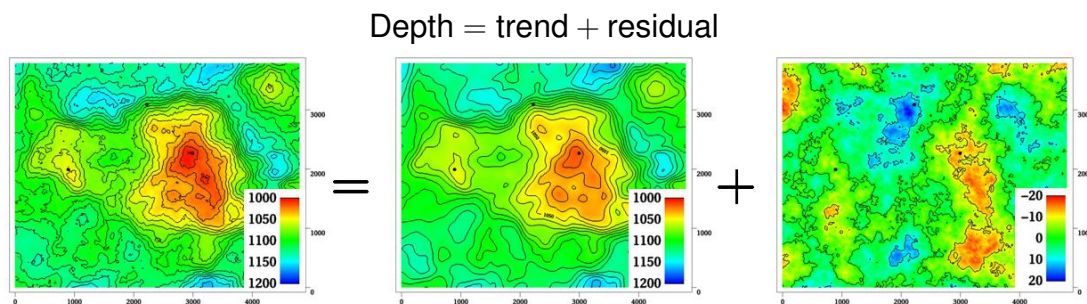


The trend can be a single known map or a linear combination of many known maps. The trend determines the main shape of the surface so the choice of trend maps is very important. The residual is usually small compared to the trend. The residual is specified by a residual uncertainty and a spatial continuity determined by a variogram. The residual is in principle unknown and random.

COHIBA will adjust the specified trends to match well data. The remaining difference will be described by the residual. The residual will be irregular and random for stochastic simulation,

just like the figure above. For deterministic surfaces, the residual surface is a smooth interpolation of the residuals at the wells. This is illustrated on [page 17](#).


1.2 COHIBA main features

Deterministic surfaces. COHIBA finds the most likely surface given all available data. This is called prediction of surfaces and is typically used for well planning. The prediction uncertainty can be calculated and displayed as a map. A predicted deterministic surface with corresponding prediction uncertainty is illustrated here:

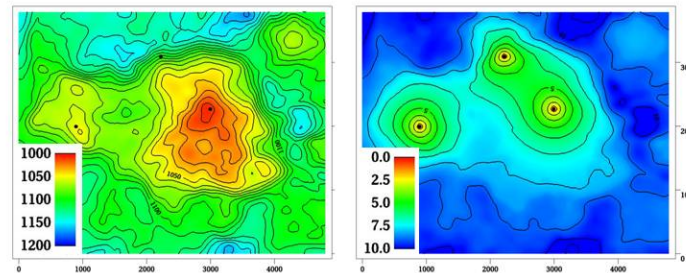

Note how the prediction uncertainty drops to zero at the three well points. COHIBA always use [standard deviation \(SD\)](#) to quantify uncertainty.

Stochastic surfaces. COHIBA can generate one or many stochastic realizations that are consistent with all available data. The stochastic realizations are generated using stochastic simulation. Stochastic simulation is sometimes called Monte Carlo simulation. Stochastic realizations are typically used for sensitivity, uncertainty, and volumetric studies. Three stochastic simulations are illustrated here:

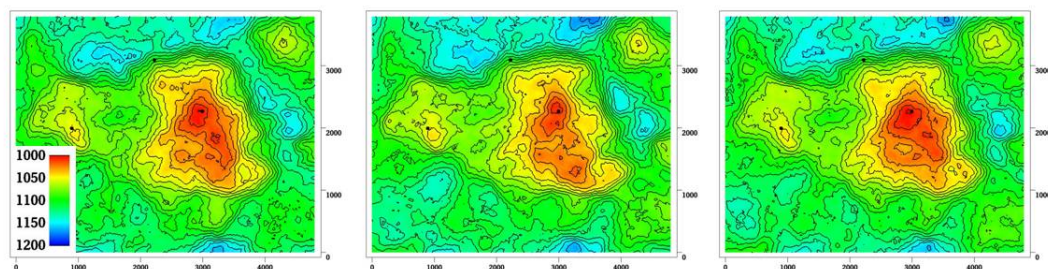

The average of a large set of stochastic simulations will approximate a deterministic surface obtained using prediction¹. The [SD](#) of a large set of stochastic simulations will approximate the prediction uncertainty.

Stochastic simulated surfaces should look like the true surface. The details are of course not correct since they are unknown and random, but the irregularity should have the same geometric properties as the true surface.

It is impossible to see where the stochastic simulated surfaces are conditioned on well data provided the specified residual is consistent with the well data. That is, the specified residual has a realistic uncertainty. COHIBA provides an estimate of this.


It is common to say that the realizations from stochastic simulations are *equiprobable*. This is true in the sense that they all have probability zero. However, they are not equally *likely*. It is in principle possible to calculate how likely each simulated surface is. The most likely surface is the deterministic surface obtained using prediction. It is irrelevant how likely a

1. See [Section 21.3](#) for a discussion on why the average will be different from the deterministic surface.

simulated surface is. For practical purposes they can be treated as having identical statistical properties.

It is possible to add *acceptance criteria* to the simulated realizations. These are typically related to restrictions on the spill point of the surfaces. If the surface fail to meet the acceptance criteria, the realization is rejected, and new realizations are generated until the acceptance criteria is fulfilled.

Horizontal wells. COHIBA ensures that surfaces are correctly positioned according to zone logs in horizontal wells. COHIBA uses an advanced technique where surfaces are conditioned to constraints along the well paths. This ensures correct location of surfaces and reduction of the surface uncertainty along the wells. Here is an example to show the effect of using information from well paths:

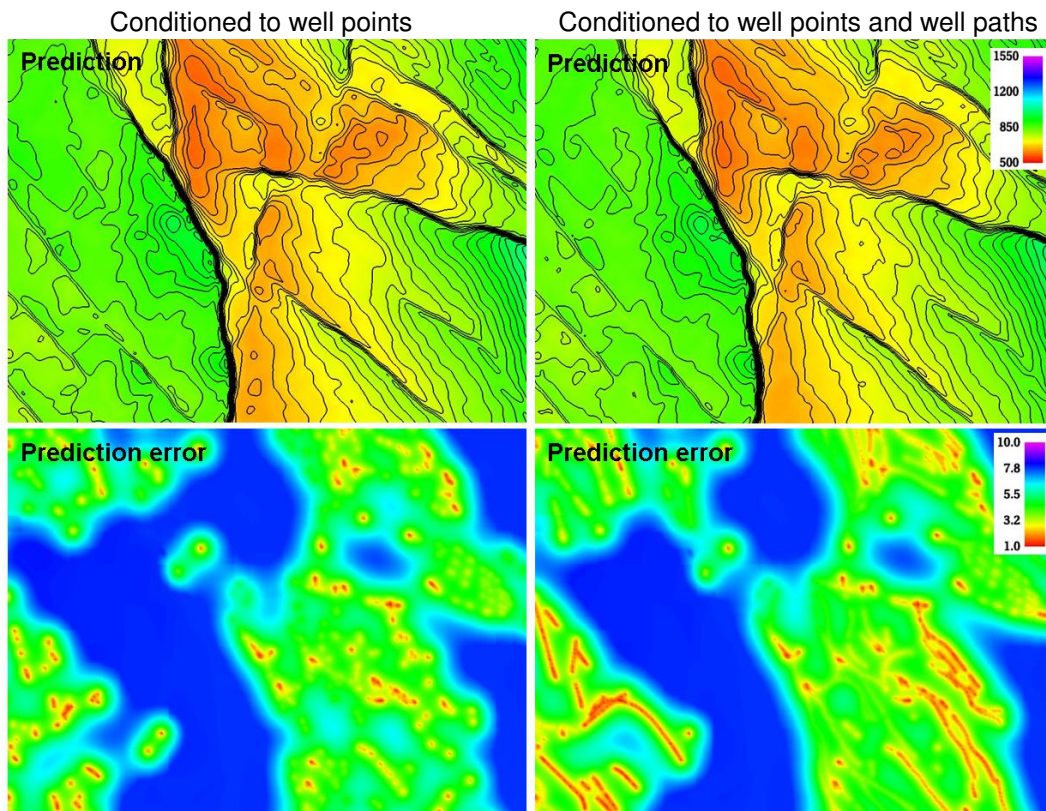


The two upper figures are the deterministic surfaces and the two lower figures are the corresponding prediction uncertainties. The deterministic surfaces have changed and the prediction uncertainty is significantly reduced along the well paths.

This approach works in complex situations with many surfaces and layers and will ensure correct results even when well paths follow very thin layers.

If a well path TVD uncertainty is specified, then COHIBA will modify the TVD values along the well path to improve consistency and accuracy of well paths and surfaces. As well path TVD uncertainty increases along the well path modifications are typically larger at the well toe than at the well heel. Modifications are done such that well paths remain smooth. This also applies to multilateral wells.

Multi layer models. COHIBA considers models for all surfaces (reflecting and non-reflecting) in a stratigraphic model *simultaneously*. This has two nice implications:


1. A particular surface is constrained by observations from surfaces above and below. This improves precision and reduces the uncertainty. The impact of observations below a surface is illustrated here:

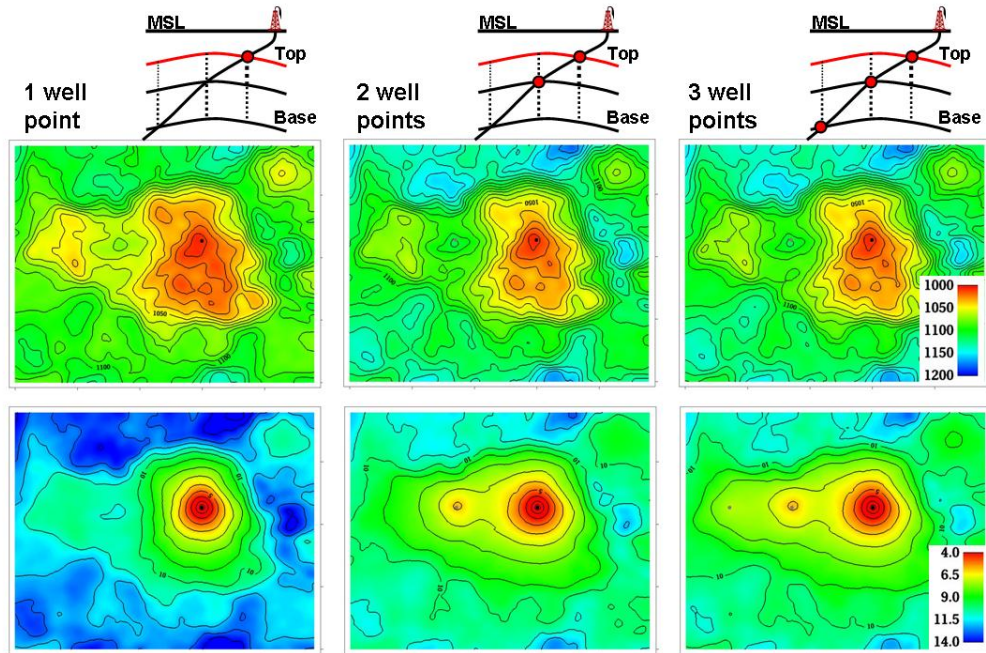

The illustration shows the top surface (and its prediction uncertainty) from a model with three surfaces. This is the red surface in the schematic cross sections above the contoured maps. The three columns show how the deterministic (prediction) surface and prediction uncertainty are modified as a deviated well is drilled into the two lower surfaces. The lateral location of the well points are easily seen on the prediction uncertainty maps. It is clearly seen that the prediction uncertainty is reduced by the observations of deeper surfaces.

2. Sufficient well data are well points and zone logs. Unobserved interval thicknesses in deviating or horizontal wells are not needed.

Ambiguous multi layer models. It is sometimes unclear when it is best to add layers from above or from below. This is solved by specifying multiple models and let COHIBA automatically combine the alternatives so that the precision is optimized. A typical example is a layered reservoir outlined by two accurate seismic reflectors. COHIBA solves this by automatically fitting the layers inside the envelope of seismic reflectors. This is illustrated here:

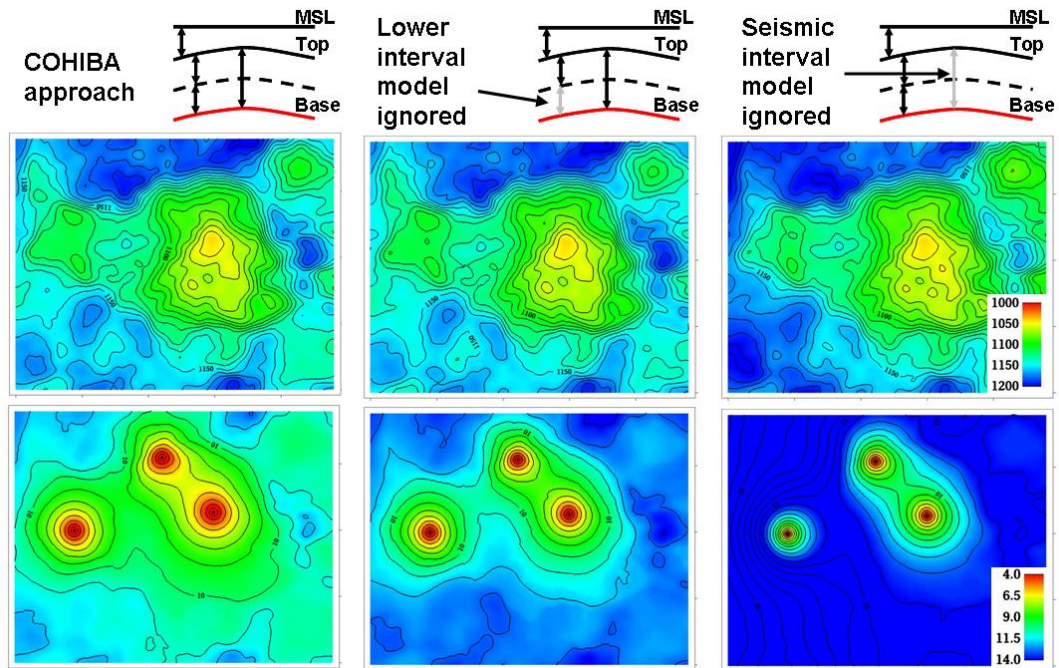


The illustration shows the base surface (and its prediction uncertainty) from a model with three surfaces. This is the red surface in the schematic cross sections above the contoured maps. The top and base surfaces are seismic reflectors. The intermediate surface (dashed line) is not a seismic reflector. The left figures show how COHIBA handles this situation. The two figures in the middle show a typical solution where the model for the lowest layer is ignored. The figures to the right shows what happens if the information from the seismic travel times between the top and base surfaces is ignored.

[Section 11](#) includes a discussion of multiple models.

Depth conversion. Seismic reflectors are described using interpreted travel time maps, often using **two-way travel time (TWT)** in milliseconds, and an interval velocity model for each interval. The interval velocity model can be fitted to depth observations taking prior information and spatial correlation into account.

Example of two alternative depth conversion models:

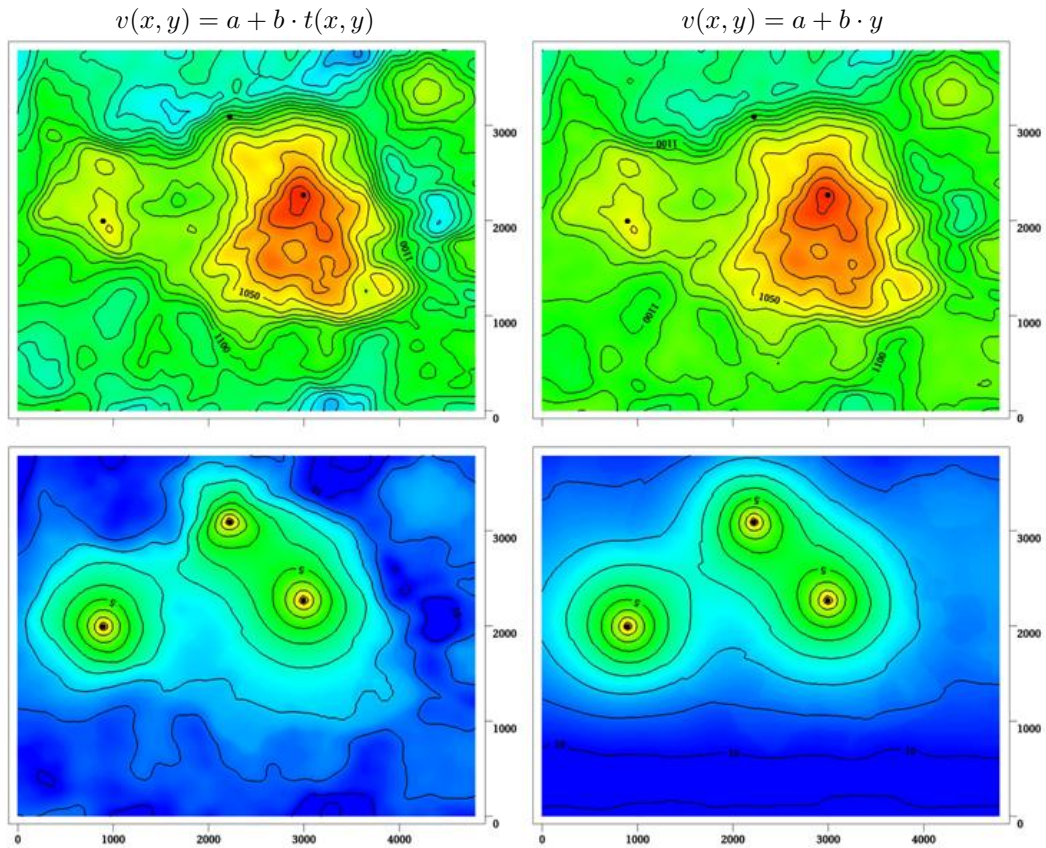


The left deterministic surface and prediction uncertainty are obtained using an interval velocity that increase with the travel time, $t(x, y)$. The right figure shows a result using a north-south interval velocity trend (depend on the y -coordinate). Both interval velocity trends are fitted to the three well points.

Interval velocity maps. Interval velocities from e.g. stacking velocities can be used as the interval velocity model in the depth conversion.

The linear velocity model. This model is linear in depth but non-linear in travel time. Both V_0 and k will be fitted to all well data, including horizontal wells. See [Section 16](#).


Isochores. Reservoir layers are typically described by smooth isochores or trends. Isochores are fitted to depth observations taking prior information and spatial correlation into account.

Spill point detection. Spill point and the corresponding trapped area can be found for any surface. Spill points can be detected in a single imported surface or on any surface generated by COHIBA. Here is an example of a spill point and the corresponding trap:

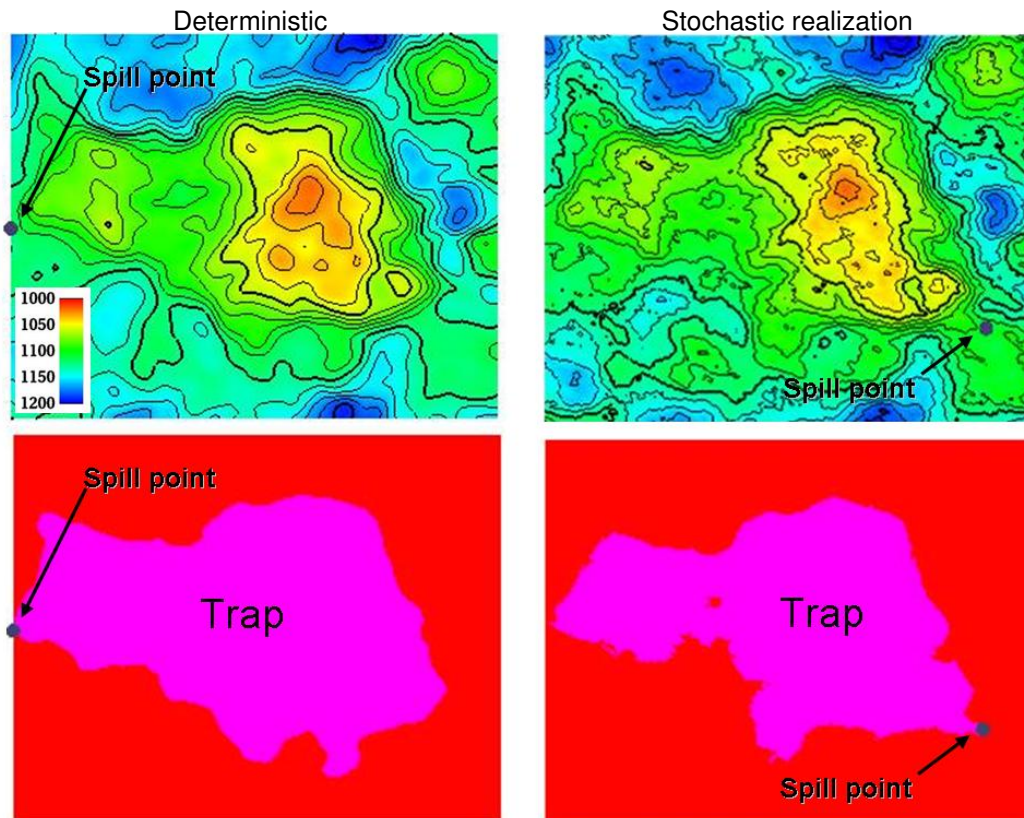

The spill point is detected and written to file (x-, y-, and TVD-coordinate). Also the trapped area can be written to an output grid file. Note that the spill point for the predicted and the simulated surfaces can be quite different.

Volume calculations. The gross rock volume between two surfaces and two hydrocarbon contacts can be calculated. The results are volumes in cubic meters and rock column maps. It is possible to ensure that the hydrocarbon contact is consistent with the spill point and that only trapped or connected volumes are considered. Average maps from multiple stochastic realizations are generated:

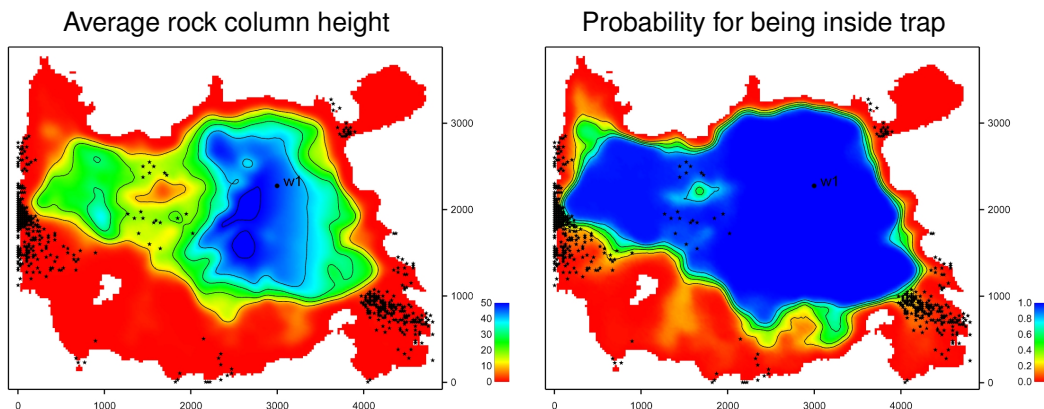

These maps are the average of 1000 realizations. The small black dots are the 1000 different spill points. For an extensive discussion of the possibilities see [Section 10](#).

1.3 COHIBA methodology

Deterministic surfaces are obtained using *kriging* for prediction, and stochastic simulation (Monte Carlo) is used for creating alternative realizations. The conditioning data are the well data while seismic data and isochores can be included as trend maps. Kriging with trend maps fitted to well points are called *universal kriging* or *kriging with trends*. COHIBA also offers *Bayesian kriging* which is more robust when few well points are available. For more information on kriging and stochastic simulation see for instance the books by [Isaaks and Srivastava \(1989\)](#), [Cressie \(1993\)](#), [Chilés and Delfiner \(1999\)](#), and [Lantuéjoul \(2002\)](#). COHIBA uses multiple linear regression (see e.g. [Weisberg, 1985](#)) to fit the trends to well points. Spatial correlations are taken into account so that the information from closely located well points are given less importance than well points scattered evenly in the area.

Different surfaces are *covariates* so cokriging is used if more than one surface is considered. The interval velocities are also correlated to the surfaces. Therefore surfaces and interval velocities are also covariates.

The residuals (differences between data and trends) are assumed to be *Gaussian random fields* allowing a fast and accurate FFT stochastic simulation technique ([Abrahamsen et al., 2018](#)). Experience has shown that the Gaussian assumption is reasonable as long as well points are consistent with trends for isochores and interval velocities.

The basic methods for handling several surfaces and intervals simultaneously were developed by [Abrahamsen \(1993\)](#). The extension to handling alternative ways of combining layers to obtain a surface was published by [Abrahamsen \(2005\)](#). The original idea on how to constrain the surfaces to zone logs along well paths was published by [Abrahamsen and Benth \(2001\)](#). COHIBA combines all these ideas into a consistent and robust framework for accurate surface prediction.

Spill point detection can be applied to any surface in the model or to a single imported surface. The algorithm is described in [Abrahamsen et al. \(2000\)](#). The algorithm requires a starting point known to belong to the trap.

Kriging requires the solution of linear equation system the size of the number of well data. The number of well data can be many thousands so calculations can take a lot of time for large so COHIBA splits the well data into overlapping subsets to reduce CPU time. The approach is similar to the ideas presented in [Vigsnes et al. \(2017\)](#).

Some theoretical details are supplied in [Part V](#).

1.4 COHIBA input data

Well data:

Well paths with zone logs:

- Well points are extracted and surfaces will be adjusted according to the zone log information. This includes ensuring consistency with horizontal wells.
- It is possible to specify the well path **TVD** uncertainty. This is the vertical component of the well path *positioning* uncertainty.

Well points:

- Locations of intersections between well paths and surfaces.
- It is possible to specify a well point **TVD** pick uncertainty. This is the vertical component of the pick (measurement) uncertainty along the well path.

Distance points:

- Vertical distance between a point along a well path and a surface. These are typically obtained from **DDR** measurements.

Dip:

- Dip angle of a surface at a well point and the azimuth direction.
- Uncertainty of the dip angle.

Travel time maps:

- Interpreted travel time maps for seismic reflectors.
- Uncertainty in the interpreted travel time maps either as a constant value (say 4 ms) or as a map describing the interpretation in different areas.
- Variograms describing the spatial correlation of the uncertainty for each travel time map.

Interval velocity models:

- Interval velocity trend. Typical example is $v(x, y) = a + b \cdot t(x, y)$, where a and b are trend coefficients, and $t(x, y)$ is the seismic travel time at location (x, y) . (Any linear function of maps can be used.)
- Interval velocity maps.
- Uncertainty in interval velocities either as a constant value or as a map.
- Variograms describing the spatial correlation of the uncertainty for each interval velocity.

Interval thickness models:

- Interval thickness trend. Any linear trends of coordinates and known maps are possible. For instance: $\Delta z(x, y) = a + b \cdot x + c \cdot y + d \cdot m(x, y)$, where a , b , c , and d are trend coefficients and $m(x, y)$ is any known map.
- Interval thickness trend using an isochore map: $\Delta z(x, y) = a \cdot m(x, y)$, where $m(x, y)$ is a user specified isochore map. Note that pinch outs are possible so $m(x, y)$ can be zero in large areas.
- Uncertainty in interval thickness either as a constant value or as a map.
- Variograms describing the spatial correlation of the uncertainty for each interval thickness.


Ordering of surfaces. The surfaces in the model must be ordered according to their depth. This makes it possible to check if well observations are in correct order. Moreover, this ensures that erosion, onlap, and pinch outs, can be handled properly. Free surfaces ([Section 13](#)) do not have any ordering.

1.5 Quality control

COHIBA has methods for performing [quality control \(QC\)](#) of the input data. Conflicts and ambiguities in the data are handled automatically and reported, so that actions can be taken when necessary. [QC](#) includes:


Model conflicts. Well points that are in conflict with the model are flagged. Well points are removed if the conflict may corrupt the results.

- *Outliers.* These are well points that fit the model assumptions poorly. This can be caused by errors in the well data or by inconsistencies between well data and model assumptions. The red point in the following figure could be an outlier:

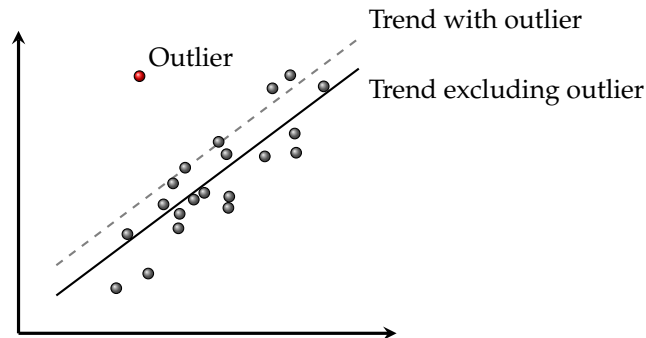

Outliers will often have significant impact on the trends and cause "bulls eyes" in surfaces. Outliers are classified as *outlier*, *severe outlier*, *error* or *extreme error* depending on severity. Outliers are tagged, severe outliers are given a well point [TVD](#) pick uncertainty, and errors and extreme errors are excluded from all calculations. See [Section 20.3.5.1](#) for details on how outliers are classified.

- *Leverage points.* These are data that *could* be outliers but influence the trend model so strongly that they appear to fit nicely. The following picture shows how a leverage point (the green point) will influence the regression line:

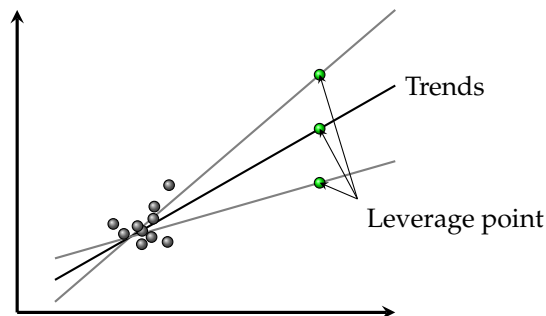

Conflicting observations. A common problem is that two or more well points are at the same location. There are two ways to handle this, depending on the situation:

1. If two well points are identical (same well, same surface, same [TVD](#)), only one well point is kept in the calculations.
2. If two well points are identical except for different [TVD](#) values they are retained but given a well point [TVD](#) pick uncertainty determined by their [TVD](#) difference.

Detected outliers, leverage points, and conflicts are flagged for inspection. In severe cases COHIBA removes data that otherwise would corrupt the surfaces. The results from the COHIBA [QC](#) are reported in several files. The most important ones are the [COHIBA log file](#) and [wellpoints.csv](#). The COHIBA output is described in [Section 7](#).

1.6 Robust estimation of trends

The trends are fitted to well points using (generalized) linear regression. Outliers and leverage points may corrupt the fitted trends. Therefore, outliers that are classified as errors or extreme errors are removed prior to the fitting of the trend. This is done in an iterative way: First the trends are fitted using all well points and outliers are classified. Extreme errors are removed one-by-one and the trends are re-fitted to the remaining well points. This is repeated until there are no extreme errors left. Finally, all the remaining well points classified as errors are removed and the trends are re-estimated.

The iterative method of fitting the trends ensures a complete removal of inconsistent data so that trends becomes reasonable. Note that well points classified as errors or extreme errors are also removed from the kriging step where the trends are locally fitted to the well points.

Well points removed from the estimation are flagged and reported. It is recommended to inspect the log files provided by COHIBA to check for errors and inconsistencies. The log files can be read into and analyzed in e.g. Excel..

1.7 Platforms and portability

COHIBA has been developed and tested on 64 bits Linux and Windows. 32 bits operating systems are not supported. We recommend Windows 7 and later and Red Hat Enterprise Linux 5 or later, but Windows XP/Vista and any Linux distribution using kernel 2.6 or newer should work.

In this manual, directory paths are specified using the slash: /. On Windows systems the backslash, \, is the normal directory separator used in paths. COHIBA will usually accept both alternatives on both platforms. This is slightly dependent on context since Windows usually, but not always, accept both directory separators.

1.8 The name


COHIBA is an acronym for **C**orrelated **H**orizon Intervals and **B**ayesian Analysis. But more important it is a nice word that is easy to remember. [Cohiba](#) is also known to be the most luxurious Cuban cigar. The previous versions of COHIBA were called HORIZON.

2 Terminology and concepts

This manual contains a lot of terminology. Some of these concepts, such as *interval*, are commonly used words but they have specific meaning in this document. This section tries to define exactly what is meant when certain words are used in this manual.

Surface. The surfaces in COHIBA are a set of depth surfaces in a specific depth order. The depth may coincide in pinch out situations. Every surface has a unique name used to identify the surface and data that belongs to it. A surface can be a *seismic reflector* with an associated travel time map. Surfaces can be *erosive* to surfaces below, and *onlapped* by surfaces above.


Interval. An interval in COHIBA has a top surface and a base surface. The top and base surfaces are two arbitrary surfaces but they must be in correct depth order (top above base). Any surface can be both a top surface and a base surface in several intervals. A common example is to have one interval spanning the whole reservoir and a set of smaller intervals spanning each individual reservoir zone. This is illustrated here:

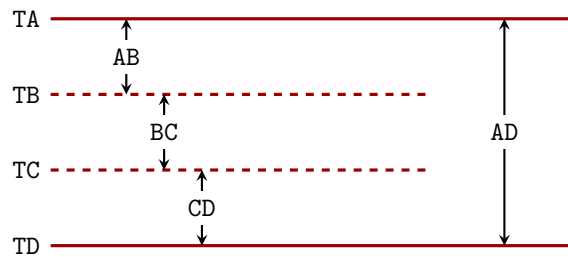

The figure shows a schematic cross section of surfaces (TA, TB, TC, TD) and intervals (AB, BC, CD, AD). Note that surface TA is the top for intervals AB and AD, and surface TD is the base of intervals AD and CD.

Intervals are the most important building blocks in COHIBA. Surfaces are obtained by adding (or subtracting) the relevant intervals above (or below). The depth to any surface is the sum of interval thicknesses. The user must specify the depth sequence of the surfaces, the top and base surface for each interval, and how to build the interval thickness models. From this information, COHIBA knows how to assemble the intervals to obtain the surfaces in the best possible way.

Model. A model in COHIBA means a *stochastic model* for the intervals and the surfaces. The model is made up of two parts: The trend and the residual. Trends describe large scale behavior whereas the residual describes variations around the trend on a smaller lateral scale (typically less than 2000 m). This is illustrated by the following picture:

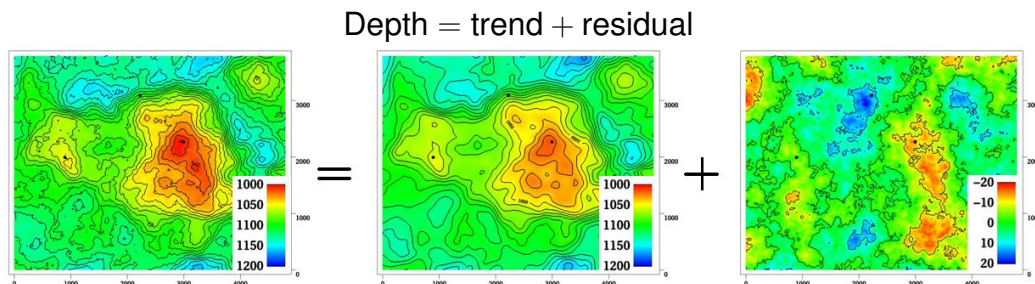

This trend is obtained from a seismic travel time map and a model for the interval velocity trend. The residual is a stochastic simulation of a possible realization of the mismatch between the trend and the real depth to the surface.

Given the model *and* the available data, COHIBA can predict or simulate the depth to surfaces.

Trend. The trend for a thickness can be constructed as a linear combination of known *trend maps* such as

$$\Delta z = a \cdot 1 + b \cdot x + c \cdot y + d \cdot m(x, y).$$

The three first trend maps, 1, x , and y , are simple, but the last trend map, $m(x, y)$, could for instance include a sedimentological interpretation of the depositional thickness. The values a , b , c , and d are called *trend coefficients*.


Similarly, interval velocity trends are used in combination with travel time maps for seismic depth conversion.

COHIBA supports any number of trend maps in the linear combination. But, most trends are quite simple and usually contains one or two trend maps.

Trend coefficients. The trend coefficients are assumed to have a Gaussian distribution. COHIBA offers three options of determining the values of the trend coefficients:

1. COHIBA can adjust the trend coefficients to the well points using linear regression by minimizing the [generalized least squares \(GLS\)](#). This is similar to ordinary least squares but it takes into account the variation in precision of the well observations and their spatial clustering. This approach requires that there are enough well points. Otherwise, the estimation might fail or give very uncertain results. This option amounts to using *universal kriging*.
2. The user can specify the trend coefficients. This amounts to *simple kriging*.
3. COHIBA can make a balance between a *prior specification* by the user and the estimates obtained from adapting the trend coefficients to data using linear regression. This is the recommended approach since it handles few (even zero) well points and will approach universal kriging if there is a lot of well points. This approach is called *Bayesian kriging*.

The differences between the three ways of specifying the coefficients and the corresponding kriging types are illustrated here:

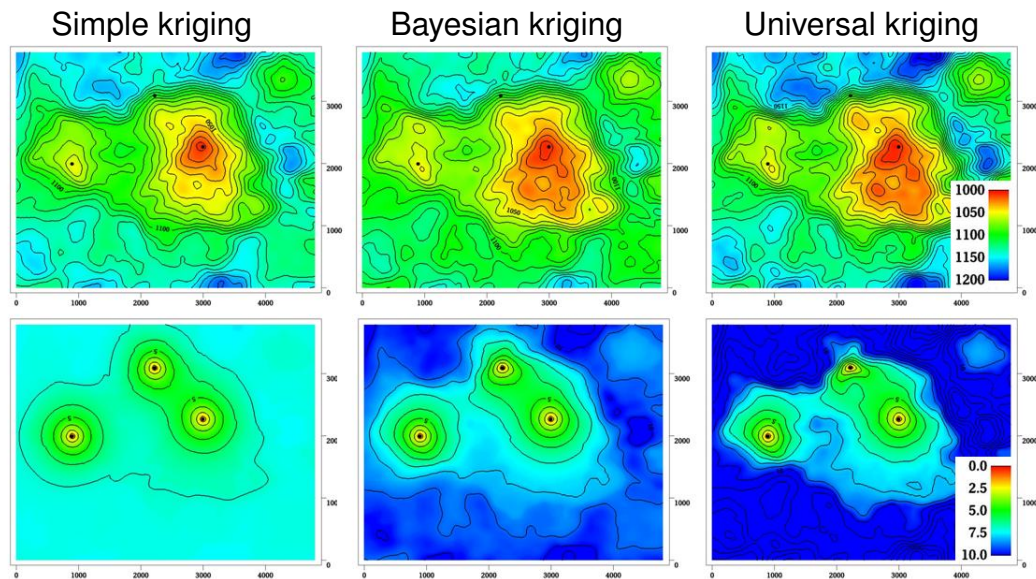

The upper row contains the surface depths and the lower row the corresponding prediction uncertainty. There are two trend coefficients in this example that corresponds to surface

depth and surface curvature respectively. There are only three well points in this example and that makes it difficult to estimate the coefficients accurately. In particular the trend coefficient determining the curvature is very uncertain. This is clearly seen on the prediction uncertainty for universal kriging. The opposite extreme is simple kriging where the trend coefficients are assumed to be known. Bayesian kriging is a balance between the two extremes. Universal kriging is unbiased and will perform better with more well points. Simple kriging will adapt locally to additional well points but the trend coefficients initial prior guess will not be modified by additional well points.

The user must specify a prior distribution for the trend coefficients. This amounts to specifying the prior mean values (expectation) and the prior uncertainty (SD) for each trend coefficient. The prior specifications are not used by the universal kriging approach. However, it is very important to always specify reasonable values for the prior mean values because these are used when evaluating depth uncertainties caused by travel time uncertainty and interval velocity uncertainty.


Trend map. The individual trend map(s) must be chosen by the user. This is where the geophysical and geological knowledge enters. Good choices of trend maps will reduce the residual uncertainty and therefore improve precision. The trend maps can be a simple constant (say 200 meters) or complex maps related to geophysical measurements and geological interpretations.

Residual. The residual is added to the trend to capture the difference between the trend and reality. The residual is assumed to be a *Gaussian random field* with known properties that must be specified by the user. The properties include a variogram (spatial correlation function) and an uncertainty (SD). The variogram determines the continuity and smoothness of the residual whereas the uncertainty is a measure of how much we believe in our trend. The uncertainty can be specified by a single value or by a map.

There are three types of residuals used by COHIBA:

1. For seismic reflectors, a *travel time residual* must be specified. This residual describes the interpretation uncertainty. Typical uncertainties are in the range 2–20 msec.
2. For a velocity interval, the *interval velocity residual* must be specified. Typical uncertainties are in the range 10–200 m/s.
3. For a thickness interval, the *thickness residual* must be specified. Typical uncertainties are 0–50 meters. (0 is used for pinch outs.)

Here is four examples of simulated residuals with different spatial smoothness¹:

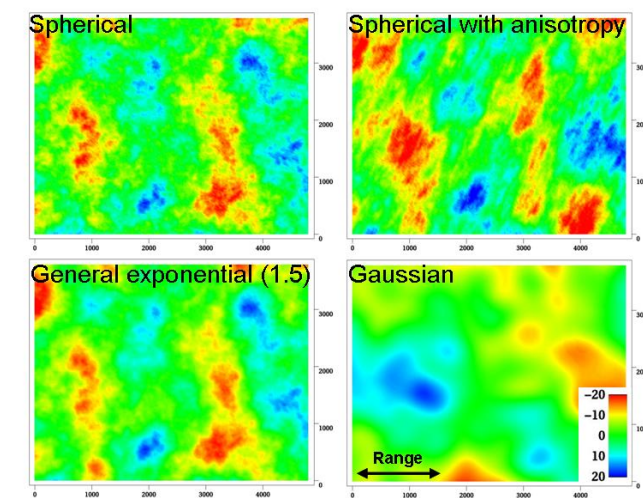

1. Some additional examples are found in [Section 22](#).

Depth conversion. The top and base surfaces of some intervals can be seismic reflectors. COHIBA offers the possibility of specifying interval velocities models rather than interval thickness models. COHIBA will depth convert the travel times using the specified interval velocity model for these intervals. Any mixture of interval thickness and interval velocity models is possible.

An interval velocity trend can typically look like


$$v = a \cdot 1 + b \cdot t(x, y).$$

The thickness of the corresponding interval is obtained by multiplying the interval velocity by the travel times for that interval:

$$\Delta z = \left(a \cdot 1 + b \cdot t(x, y) \right) \cdot \Delta t(x, y).$$

Prediction. Prediction means to find the *most likely* set of surfaces given the model specifications *and* the data. This is a unique set of surfaces. It is common to call this deterministic surfaces.

A surface model is made of two parts, the trend and the residual. Prediction uses the fitted trend and the interpolated residuals at the well points. This is illustrated here:

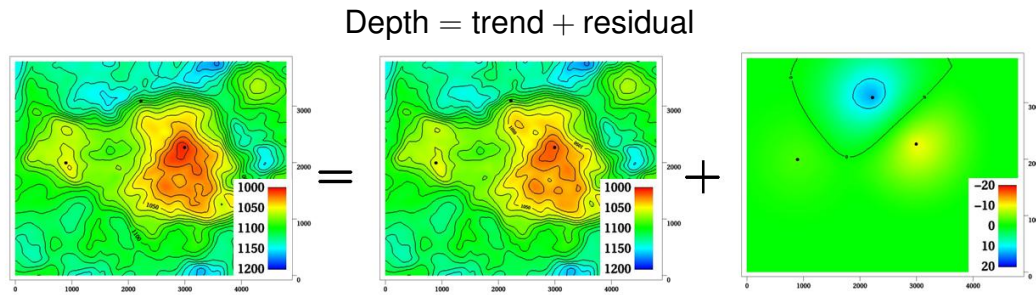

Stochastic simulation. Stochastic simulation is a *stochastic* approach where trend coefficients and residuals are sampled from probability distributions to obtain a *realization*. The realization is *conditioned* to data, that is, the realizations are consistent with all the data. A realization is not unique—using a new random seed provides a new set of surfaces. The average of a large set of realizations will coincide with the deterministic surfaces obtained using prediction.

The stochastic simulation can be thought of as a two step procedure. First, the trend coefficients are drawn stochastically from their estimated distribution and multiplied with the trend maps to form the simulated trend. Then the residuals are drawn stochastically according to their spatially correlated distribution and added to the trends. See illustration on [page 14](#).

Note that the uncertainty from the trends have a global impact whereas the uncertainty in the residual is more local. During this process COHIBA ensures that the result is in correspondence with the well data.

Uncertainty. Uncertainty is a somewhat loose term used to describe lack of knowledge, mismatch between reality and model, and the fact that no observations are exact. All COHIBA input concerning uncertainty is given as [standard deviation \(SD\)](#). All output concerning uncertainty is also given as [SD](#).

Well data. There are two types of well data used by COHIBA: *Well points* and *well paths* with a *zone log*. Well points are the intersections between a well path and a surface. Well points can be imported directly from a file. Alternatively, well points can be extracted from a well path (well trajectory) using a zone log. COHIBA will detect all zone transitions and record a well point if the transition is associated with a surface. COHIBA can also ensure that the surfaces are located correctly according to the zone log. This is convenient for horizontal wells.

Part II

User manual

3 Getting started

COHIBA is started from the command line with the [COHIBA model file](#) as an argument:

```
> cohiba.exe1 model-file.xml
```

A COHIBA project consists of a [COHIBA model file](#), well data, and a set of trend maps. The [COHIBA model file](#) is written using [Extensible Markup Language \(XML\)](#) syntax. We start by running a very simple example, with a constant surface and one well point. We follow the steps:

1. Copy the COHIBA executable to the current directory and create a sub-directory test/.
2. Create a file model-file.xml in test/ using the following [COHIBA model file](#):

```
<cohiba>
  <project-settings>
    <project-directory>          test </project-directory>
    <output-grid>
      <format>                   roxar binary </format>
      <xstart>                   448300 </xstart>
      <xlength>                  1000 </xlength>
      <ystart>                   6736000 </ystart>
      <ylength>                  3000 </ylength>
      <xinc>                     50 </xinc>
      <yinc>                     50 </yinc>
    </output-grid>
  </project-settings>

  <model-settings>
    <mode>                       prediction </mode>
    <kriging-method>            bayesian </kriging-method>
  </model-settings>

  <well-data>
    <well-points>
      <files>                   wellpoints.dat </files>
    </well-points>
  </well-data>

  <surfaces>
    <!-- Specification of surface TopSurf -->
    <surface>
      <name>                     TopSurf </name>
      <travel-time>
        <value>                  1 </value>
      <variogram>
```

1. Typical names for the COHIBA executable are cohiba_5.3._Win64_CompanyName.exe (Windows) or cohiba_5.3.0_Linux64_RH6_CompanyName (Linux). These files can of course be renamed.


```

        <type>                spherical </type>
        <range>                3500 </range>
        <SD>                  0.01 </SD>
    </variogram>
</travel-time>
<output>
    <depth>                  yes </depth>
    <depth-uncertainty>      yes </depth-uncertainty>
    <depth-trend>            yes </depth-trend>
</output>
</surface>
</surfaces>

<intervals>
    <interval>
        <top>                MSL </top>
        <base>                TopSurf </base>
        <interval-type>      velocity </interval-type>
        <trend>
            <coefficient-mean> 1.0 </coefficient-mean>
            <coefficient-SD> 0.1 </coefficient-SD>
            <value>            1000 </value>
        </trend>
        <variogram>
            <type>                spherical </type>
            <range>                2500 </range>
            <SD>                  5 </SD>
        </variogram>
    </interval>
</intervals>
</cohiba>

```

3. Create the directory `test/input/` and create a [COHIBA well points file](#) called `wellpoints.dat` in `test/input/` with the following content:

```
TopSurf well 448800 6737500 1220 0.0
```

4. From the command line type: `cohiba.exe test/model-file.xml`

COHIBA will start by reading the [COHIBA model file](#), `model-file.xml`, and generate output and surfaces according to the specifications. In this case, COHIBA is asked to make a deterministic surface called TopSurf using Bayesian kriging. This will make the surface interpolate the well point with coordinates (448800, 6737500, 1220). Several directories are created under `test/output/`: [surfaces/](#), [log-files/](#), and [well-points/](#). The depth map `d_TopSurf.rxb`, the depth uncertainty map `de_TopSurf.rxb` and the depth trend map `dt_TopSurf.rxb` are written to the directory [surfaces/](#) using the [ROXAR BINARY](#) grid format. Log files are written under [log-files/](#) and [well-points/](#) contains [ROXAR ATTRIBUTES TEXT](#) files.

In [Section 9: Sampling well paths and logs](#) of the screen output you may find the following table:

Interval	Coef	PriorMean	PostMean	PostMeanUpd	PriorSD	PostSD	PostSDUpd
MSL-to-TopSurf	1	1.000	1.217	-	0.100	0.011	-

This shows prior and posterior mean and [SDs](#) for the trend coefficient. The single data at 1220 m has moved the prior guess at 1000 m to 1217.3 m and the uncertainty has dropped from $0.1 \times 1000 \text{ m} = 100 \text{ m}$ to $0.011 \times 1000 \text{ m} = 11.1 \text{ m}$. This uncertainty should be compared to the residual uncertainties: $0.01 \text{ s} \times 1000 \text{ m/s} = 10 \text{ m}$ (travel time) and $5 \text{ m/s} \times 1 \text{ s} = 5 \text{ m}$ (interval velocity). Combining these gives a total uncertainty of $(10^2 \text{ m}^2 + 5^2 \text{ m}^2)^{1/2} = 11.2 \text{ m}$. This is not a coincidence. A larger residual uncertainty would imply less impact from the well point and a larger posterior [SD](#).

4 COHIBA command line options

The normal way of running COHIBA is with a single [COHIBA model file](#) as the argument:

```
> cohiba.exe model-file.xml
```

The [COHIBA model file](#) can of course have any name.

4.1 Specifying the random seed

COHIBA offers a few ways of setting the random seed for stochastic simulation. One option is to use the flag `-s`:

```
> cohiba.exe -s 123 model-file.xml
```

where 123 is the random seed. The random seed can also be specified in the random seed file (default is [seed.dat](#)) or in the [COHIBA model file](#) using the `<seed>` element.

4.2 Specifying number of realizations

COHIBA can generate a set of simulated realizations in one run. There are two options for specifying the number of realizations. It can be given in the command line using the `-n` option:

```
> cohiba.exe -n 100 model-file.xml
```

where 100 is the number of realizations. The number of realizations can also be specified in the [COHIBA model file](#) using the `<number-of-realizations>` element.

4.3 Spill point detection

COHIBA can find the spill point of a surface using `<spill-point>`. COHIBA also has a special mode where it reads a single surface and reports the spill point:

```
> cohiba.exe -g spillpointgrid.rxb
```

The essential output will look like:

Xstart	Ystart	XSpill	YSpill	ZSpill
333092.09	6434195.50	333092.09	6434195.50	1942.75

The input file with an added prefix, `trap_`, is written to file. This file contains ones inside the trap and zeros outside the trap.

The format of the input file is automatically detected. The output file has the same format as the input file. The possible file formats are described in [Section 6.2](#).

The following command line options are available:

Flag: `-g`

Description: Input surface file. Trigger the spill point detection algorithm for a single surface.

Argument: A string specifying the input file name.

Default: No default.

Flag: -x
Description: Starting point x-coordinate for the spill point searching algorithm.
Argument: Real
Default: The x-coordinate where the surface has a minimum (highest point in surface).

Flag: -y
Description: Starting point y-coordinate for the spill point searching algorithm.
Argument: Real
Default: The y-coordinate where the surface has a minimum (highest point in surface).

Flag: -m
Description: Missing as wall flag. See [Section 17.4.2.9.1](#).
Argument: yes / no.
Default: yes

5 The COHIBA model file

The COHIBA model file is an [XML](#) file. The file name is typically `model-file.xml`. The basic [XML](#) syntax for one *element* is

```
<name>
  argument
</name>
```

where `name` is the name of the element and the `argument` is a value (text, number) or other elements. Often `argument` contains further elements in a nested structure. Comments in [XML](#) starts with `<!--` and ends with `-->`. A comment can not include `'--'` for historical reasons. COHIBA also accept `#` as a start-of-comment symbol. Text after `#` on the same line is ignored when interpreting the COHIBA model file.

The COHIBA model file is divided into six major elements:

```
<project-settings> ... </project-settings>
<model-settings>   ... </model-settings>
<well-data>        ... </well-data>
<surfaces>         ... </surfaces>
<intervals>        ... </intervals>
<volumes>          ... </volumes>
```

There is a hierarchy of elements belonging to each of these six main elements. The sequence of the elements within a hierarchy is arbitrary¹ but it is recommended to stick to the suggested order to avoid confusion. [Figure 5.1](#) shows an example of the skeleton of a COHIBA model file.

Note that many of the elements can be repeated. E.g. there will be one `<surface>...</surface>` element for every depth surface considered in the model.

A detailed description of all [COHIBA model file](#) elements is provided in [Section 17](#). Most elements are optional and default values are provided if the element is omitted.

A list of all the [COHIBA model file](#) elements is provided in [Section 18](#).

An extensive example of a [COHIBA model file](#) is given in [Section 19](#).

5.1 Editing the COHIBA model file

An [XML](#) file is a simple text file and almost any text editor (WordPad, Notepad, Word, Emacs,...) can edit the file. However, the structure of the [XML](#) file is easier to read in a more specialized [XML](#) editor. For instance the [Microsoft XML Notepad 2007](#) or [Notepad++](#) text editors may be freely downloaded.

5.2 Errors reading the COHIBA model file

COHIBA will detect most spelling and syntax errors in the [COHIBA model file](#). If COHIBA encounters an error corrupting the structure of the [XML](#) syntax, then a message will be issued to screen and the [COHIBA log file](#). The message can look like:

```
XML error: ln 287, col 1
```

1. An important exception is the order of surfaces. These *must* be specified in correct stratigraphic order (with the exception of free surfaces, cf. `<free-surface>`) to obtain correct ordering of the generated surfaces.

```

<cohiba>
  <project-settings>
    :
  </project-settings>
  <model-settings>
    :
  </model-settings>
  <well-data>
    :
  </well-data>
  <surfaces>      # Surfaces MUST be listed in stratigraphic order
    <reference>
      :
    </reference>
    <surface>
      :
    </surface>
    :
  </surfaces>
  <intervals>
    <interval>
      :
    </interval>
    :
  </intervals>
  <volumes>
    <volume>
      :
    </volume>
    :
  </volumes>
</cohiba>

```

Figure 5.1. Skeleton of a COHIBA model file.

while parsing 'benchmark/model_file.xml'.
 Error reading end tag of <project-settings>: found </cohiba>

Fatal error: Could not read XML file

In this case, the final tag, </project-settings>, was forgotten.

If COHIBA finds an unknown element a message will be issued. It can look like:

Error: Unknown tag <variograms> encountered at line 274, column 7.
 Select one of: <name>, <top>, <base>, <interval-type>, <trend>, <variogram>,
 <correlations> or <output>

Parsing error on line 264. Missing <variogram> entry under <interval>

Fatal error: Invalid model file.

In this case the <variogram> element has been misprinted as <variograms>. Note that COHIBA suggests the possible supported element names.

6 Files and directories

6.1 File directory structure

COHIBA reads a lot of information from files and writes results to numerous files. It is partly up to the user to organize the input files in a convenient way. [Figure 6.1](#) shows an overview of the recommended directory structure and some input files and [Figure 6.2](#) shows an overview of output files and directories.

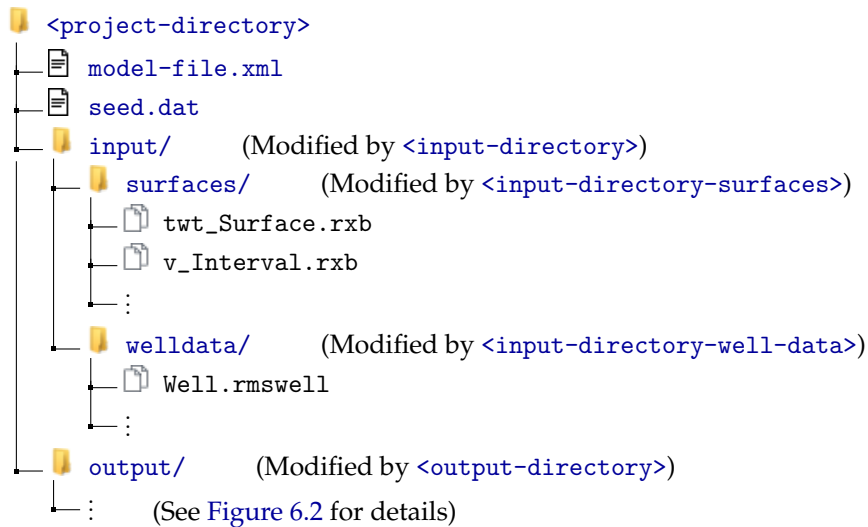


Figure 6.1. Recommended and default directory structure. Surface, Interval, and Well will be replaced by specified surface, interval and well names.

The three top directories can be specified in the [COHIBA model file](#) using elements `<project-directory>`, `<input-directory>`, and `<output-directory>`. If a project directory has not been specified by the user, it defaults to the current working directory. The default input directory is `input/` and the default output directory is `output/`.

By default, input surfaces are stored in `surfaces/` and well data in `welldata/` in the `<input-directory>`. The default values for these sub-directories can be overridden using `<input-directory-surfaces>` and `<input-directory-well-data>`.

Results are by default stored in `output/` that contains a lot of sub-directories. See [Figure 6.2](#) for an overview and [Section 7](#) for details. All sub-directories and most of the output files have fixed names and can not be modified by the user.

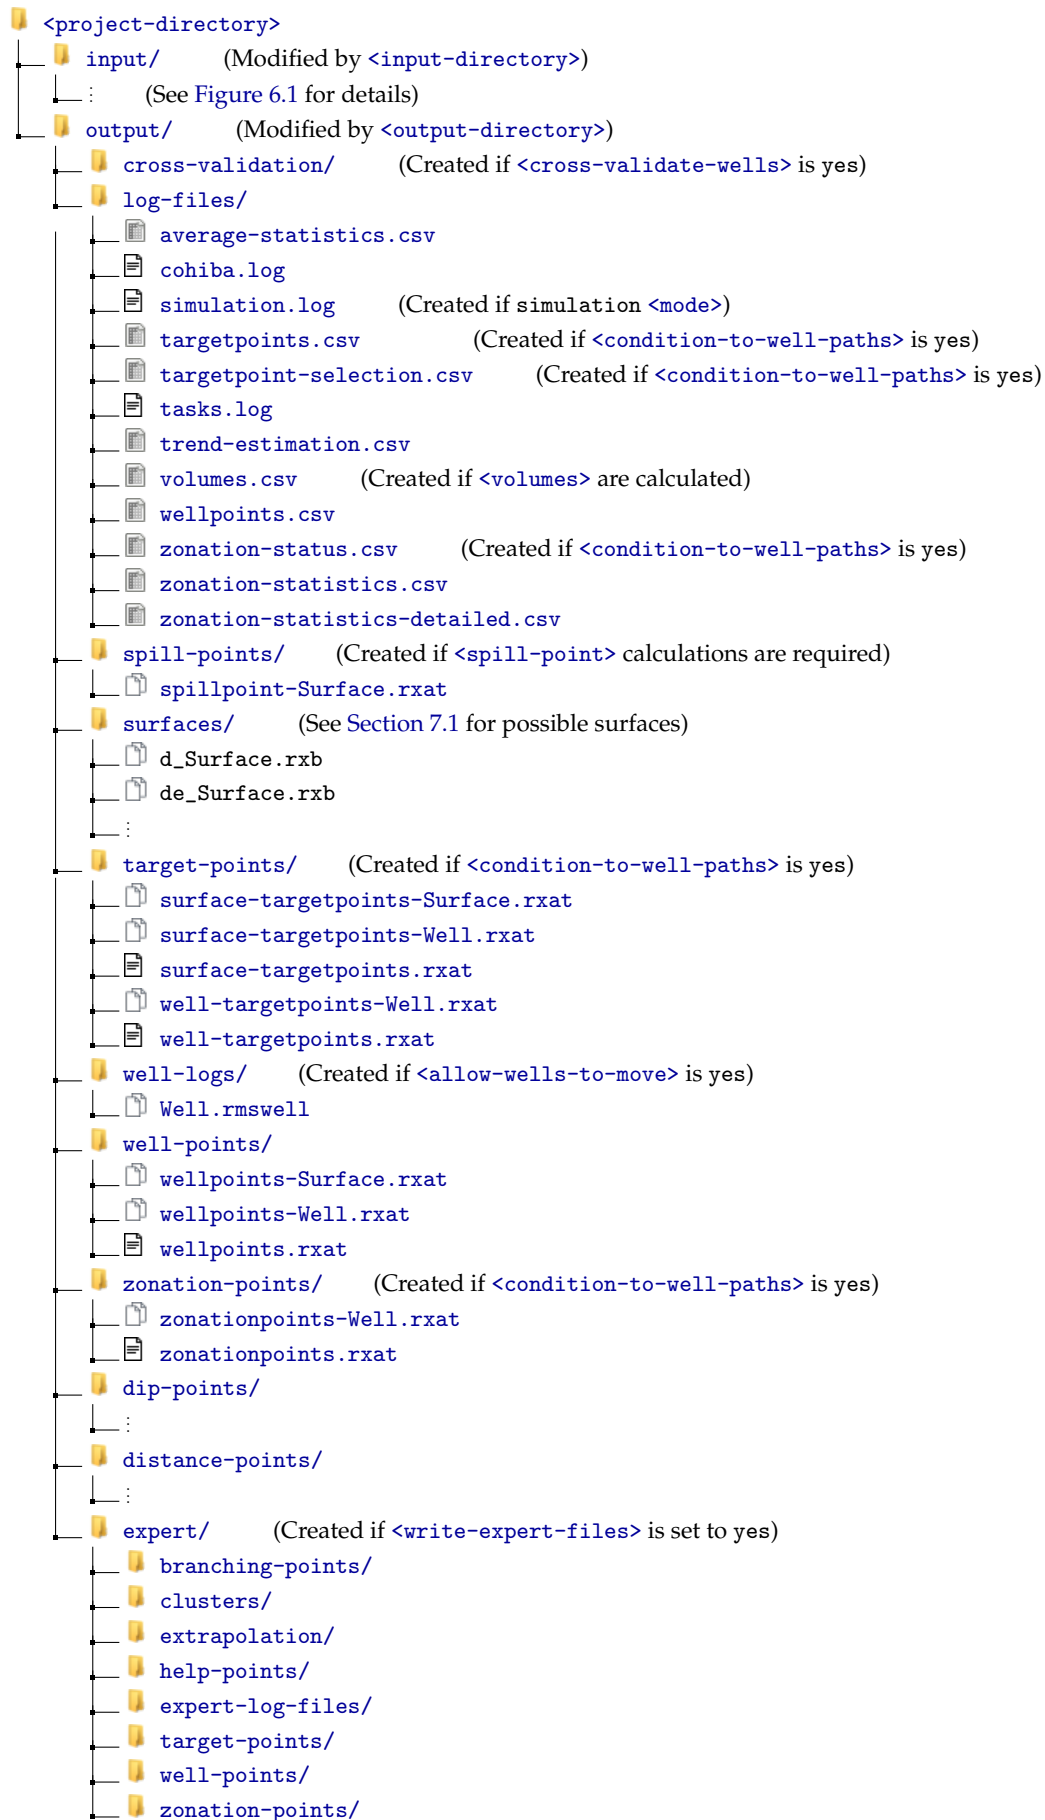


Figure 6.2. Output directory structure. Surface and Well will be replaced by specified surface and well names.

6.2 Surface file formats

COHIBA represents surfaces as regular grids. The following grid file formats are supported:

ROXAR BINARY This is a binary file format that supports rotated grids. File extensions for output is `.rxb`. This is the default format.

ROXAR TEXT This is an [ASCII](#) text file format that supports rotated grids. File extensions for output is `.rxt`.

STORM BINARY This is a binary file format that does not support rotated grids. File extensions for output is `.storm`.

ROXAR PATCH BINARY This is a binary file format that supports general surfaces given as overlapping surface patches. This is the format that ROXAR RMS and COHIBA use to exchange surface data for use in the ROXAR RMS structural model.

Constant Allows to define a constant surface value in the [COHIBA model file](#).

ROXAR RMS supports all these grid file formats. Petrel supports [ROXAR BINARY](#) and [ROXAR TEXT](#)¹.

The input file formats are automatically detected when reading from file. The format detection does not depend on the file extensions.

The output file format and grid dimension are specified by `<output-grid>`.

6.3 Well data file formats

6.3.1 Well path with logs

Well path with zone log files contain the well path (x-coordinate, y-coordinate, [TVD](#)), zone logs and other logs along the well path. COHIBA supports

ROXAR RMS well: This [ASCII](#) text format is used for input and output. Output files use the extension `.rmswell`.

LAS 2.0 well: This [ASCII](#) text format is used for input and output. The Log [ASCII](#) Standard (LAS) file format is documented by www.cwls.org/las/. The standard file extension is `.las`.

ROXAR RMS and Petrel support both file formats².

The input well log files are specified using `<files>` under the `<wells>` element. COHIBA detects the file formats automatically. Wells are exported in the same file format as they were imported.

See [Section 7.6](#) for details on well files exported to `well-logs/`.

6.3.2 Well points file formats

COHIBA supports three well points formats:

ROXAR ATTRIBUTES TEXT: This is a flexible [ASCII](#) text format that supports any number of attributes. This file format is recommended for input of well points. This format is used for output using the file extension `.rxat`. This input format is described in [Table 6.1](#).

PETREL POINT WELL DATA: This is an [ASCII](#) text format that can be used for input. It is similar to ROXAR ATTRIBUTES TEXT but does not require x-, y- and [TVD](#)-coordinates if [measured depth \(MD\)](#) is specified. A commonly used file extension is `.ppwd`. This input format is described in [Table 6.2](#).

1. Petrel use the old names Irap classic grid (BINARY/([ASCII](#))) for [ROXAR BINARY](#) and [ROXAR TEXT](#).

2. Petrel uses the old name Irap RMS well ([ASCII](#)) for [ROXAR RMS WELL](#).

COHIBA well points: This is an [ASCII](#) text format described in [Table 6.3](#). This format can be used for input. A commonly used file extension is `.dat`.

Input well points file(s) are specified using the `<well-points>` element. File formats are detected automatically.

6.3.3 CSV-files

These are [ASCII](#) text files containing [comma-separated-values \(CSV\)](#) used for output.

The format can be modified using `<csv-file-style>`. Using `fixed` with is convenient when looking at files in normal text editors. It is recommended to choose `comma-separated` (the default) before trying to import files into a spreadsheet³. Note that COHIBA uses a dot "." as the decimal mark in numerical values. This requires some extra care if the spreadsheet uses a comma "," as the decimal mark.

Typical files are `trend-estimation.csv` and the `wellpoints.csv` that are intended for [QC](#). The file extension is `.csv`.

6.3.4 xyz-files

This is a simple [ASCII](#) text file format that contains the x-coordinate, y-coordinate and [TVD](#) on each row. The file extension is `.xyz`. All xyz-files are found in the `expert/` directory. The file name will generally explain the content. Typical examples are `zonationpoints-special.xyz` and `targetpoints-Surface.xyz`. These files are numerous and are not written unless `<write-xyz-point-files>` is set to `yes`.

6.3.5 Undefined values

Undefined values are marked by missing codes that differ for various file formats. COHIBA detects and handles missing codes automatically. For [ASCII](#) output files, COHIBA uses the missing code `-99999.0` for depths and coordinates and `-999.0` for log values.

3. Import of [CSV](#) files into Excel is best done from the Data ribbon (Office 2016 and Office 2019).

Table 6.1. The **ROXAR ATTRIBUTES TEXT** well points file format is an **ASCII** text file format with one row per well point. The three first columns always specify x-coordinate, y-coordinate and **TVD**. The next columns are specified in the header by a single line containing column type (String, Float, or Discrete) and a text description of the column. There can be any number of columns and the order of the columns is arbitrary. The file extension is **.rxat**.

For input files, there *must* be columns "String Surface" and "String Well" to identify surface and well names. It is also mandatory to specify "Float Well point TVD pick uncertainty". The "Float Well path TVD uncertainty" is optional. If well path **TVD** uncertainty is specified there must be a column containing "Float Measured depth". Uncertainties are specified as **SD**.

Dip data can be specified using additional columns "Float Surface dip angle" and "Float Surface azimuth of dip". The dip uncertainty (**SD**) can be specified using "Float Surface dip angle uncertainty". All angles are in degrees. See [Section 8.6](#) for more details on dip data.

Uncertainties:

```

Float Measured depth
String Surface
String Well
Float Well point TVD pick uncertainty
Float Well path TVD uncertainty
535045.09 6742547.10 1255.12 1275.12 "Top A" w1 0.00 0.00
535045.09 6742511.36 1383.87 1403.87 "Top B" w1 0.00 0.00
535045.09 6742515.42 1400.23 1420.23 "Top C" w1 0.00 0.00
532273.48 6737634.37 1194.15 1219.15 "Top A" w2 0.00 0.00
532223.72 6737667.37 1284.10 1309.10 "Top B" w2 0.00 0.00
532203.58 6737694.37 1301.15 1326.15 "Top C" w2 0.00 0.00
536393.00 6736356.62 1155.23 1175.23 "Top A" w3 0.00 0.00
536194.01 6736389.87 1255.60 1275.60 "Top B" w3 0.00 0.00
536168.78 6736397.00 1300.75 1320.75 "Top C" w3 0.00 0.00

```

Dip data:

```

Float Measured depth
String Surface
String Well
Float Surface dip angle
Float Surface azimuth of dip
Float Surface dip angle uncertainty
473379.88 6771838.49 4026.35 4051.07 Top_Tarbert_2 34_11-1 4.9 137.0 0.0
468480.24 6770010.41 4184.01 7085.98 Top_Tarbert_2 34_11-A-14 5.8 162.0 2.0
474979.30 6771359.53 4024.49 4709.01 Top_Tarbert_2 34_11-A-10 7.7 236.0 3.0
473764.96 6773641.35 4009.58 4544.00 Top_Tarbert_2 34_11-A-6 19.0 154.0 5.0
473745.00 6775034.11 3969.76 5371.48 Top_Tarbert_2 34_11-A-7 7.1 83.8 0.3
471482.30 6773490.45 3916.17 4715.49 Top_Tarbert_2 34_11-A-15 5.6 94.0 1.0

```

Table 6.2. The **PETREL POINT WELL DATA** is an **ASCII** text file with one row for each well point. The header specify the columns in the file. The format is identical to the **ROXAR ATTRIBUTES TEXT** format except for small differences in the header. See [Table 6.1](#) for a comparison.

Example:

```
# Petrel Point Well Data format
# Not all attributes are necessary
# i.e.X, Y and Z can be left out, as they are derived from md and the well
# The attributes can also have a different order than described here
# Lines starting with # are comments
VERSION 1
BEGIN HEADER
x
y
z
Measured depth
Well
Fault block
Contrast surface
Distance to contrast
Distance to contrast uncertainty
Mismatch
END HEADER
449000.00 6737050.00 1020.00 -999.00 "w4" "-" "C" -4.00 3.00 -1.13
449050.00 6737050.00 1020.00 -999.00 "w4" "-" "C" -4.00 3.00 -0.23
449100.00 6737050.00 1020.00 -999.00 "w4" "-" "C" -4.00 3.00 0.02
449150.00 6737050.00 1020.00 -999.00 "w4" "-" "C" -4.00 3.00 0.34
449200.00 6737050.00 1020.00 -999.00 "w4" "-" "C" -6.00 3.00 -0.36
449250.00 6737050.00 1020.00 -999.00 "w4" "-" "C" -6.00 3.00 0.16
449300.00 6737050.00 1020.00 -999.00 "w4" "-" "C" -8.00 3.00 -0.60
449350.00 6737050.00 1020.00 -999.00 "w4" "-" "C" -8.00 3.00 -0.60
```

Table 6.3. The COHIBA well points file format use one line for each observation. The two first columns identify the observations by surface name and well name. The next three columns specify the well point coordinates in space, and the last column allows a TVD pick uncertainty (SD). The ordering of the observations is arbitrary and has no effect on the generated surfaces. Lines beginning with a # are treated as comments. The entries can be separated by blanks, tabs or commas. Do not mix comma separated values and white space separated values in the same file.

White space separated (space and/or tabs):

```
#-----
# Surface   Well           x           y           TVD           TVD
# name      name                               pick SD
#-----
TopA        w1           535045.09  6742547.10  1255.12         0.00
TopB        w1           535045.09  6742511.36  1383.87         0.00
TopC        w1           535045.09  6742515.42  1400.23         0.00
#-----
TopA        w2           532273.48  6737634.37  1194.15         1.00
TopB        w2           532223.72  6737667.37  1284.10         1.00
TopC        w2           532203.58  6737694.37  1301.15         2.00
#-----
TopA        w3           536393.00  6736356.62  1155.23         0.50
TopB        w3           536194.01  6736389.87  1255.60         0.65
TopC        w3           536168.78  6736397.00  1300.75         2.98
#-----
```

Comma separated:

```
#-----
# Surface   Well           x,           y,           TVD,           TVD
# name      name                               pick SD
#-----
Top A,      well 1,      535045.09,  6742547.10,  1255.12,         0.00
Top B,      well 1,      535045.09,  6742511.36,  1383.87,         0.00
Top C,      well 1,      535045.09,  6742515.42,  1400.23,         0.00
#-----
Top A,      well 2,      532273.48,  6737634.37,  1194.15,         1.00
Top B,      well 2,      532223.72,  6737667.37,  1284.10,         1.00
Top C,      well 2,      532203.58,  6737694.37,  1301.15,         2.00
#-----
Top A,      well 3,      536393.00,  6736356.62,  1155.23,         0.50
Top B,      well 3,      536194.01,  6736389.87,  1255.60,         0.65
Top C,      well 3,      536168.78,  6736397.00,  1300.75,         2.98
#-----
```


7 The COHIBA output

COHIBA stores results in multiple files in subdirectories under the `output/` directory. The `output/` directory is changed using `<output-directory>`. The sub-directories are `log-files/`, `surfaces/`, `spill-points/`, `well-logs/`, `well-points/`, `zonation-points/`, `dip-points/`, `target-points/`, and `expert/`. See Figure 6.2 for an overview. Necessary directories are created if they are not already present. COHIBA will overwrite existing files and directories.

The main result of COHIBA are the maps saved in `surfaces/`. The log files in `log-files/` contain important information on the quality of results.

Well data used for generating the surfaces are saved in formats convenient for visualization and QC. The files are stored in directories `well-points/`, `zonation-points/`, and `target-points/`.

The outcome of the spill point detection algorithm is a set of trap surfaces under `surfaces/`, and spill points in `spill-points/`. The `spill-points/` directory is only created when spill points are required.

The `well-logs/` directory contains updated TVD values. This directory is only generated if `<condition-to-well-paths>` and `<allow-wells-to-move>` are both yes.

Note that many predefined file names contains the underscore `'_'`. These are replaced by a dash `'-'` in this manual¹.

7.1 Output surfaces and maps

All output surfaces (maps) are written to files in the `surfaces/` directory. The file names contain the name of the surface, interval, or reservoir volume that they relate to. A prefix depending on the type of map and a possible trailing text in stochastic simulation `<mode>` is appended to the name. See Table 7.1 for a list of possible output surfaces (maps). Only depth surfaces are generated by default. A few special surfaces (maps), listed in Table 7.2, are written to the `surfaces/` directory when they are calculated.

7.1.1 Multiple realizations from stochastic simulation

By default all realizations are saved to file. A trailing text, `_nnnn`, where `nnnn` is the realization number, is added to the file name. File names could look like:

```
d_TopA_0001.rxb, d_TopA_0002.rxb, ..., d_TopA_9999.rxb
trap_TopA_0001.rxb, trap_TopA_0002.rxb, ..., trap_TopA_9999.rxb
v_MSL-to-TopA_0001.rxb, v_MSL-to-TopA_0002.rxb, ..., v_MSL-to-TopA_9999.rxb
```

Additional digits will be added for realizations beyond realization number 9999. For instance: `d_TopA_10001.rxb`. The realization number is only added if `<number-of-realizations>` is more than one. Suppressing writing of individual realizations is possible using `<write-realization-maps>`.

Stochastic simulation of multiple realizations trigger the construction of empirical mean (average) maps and empirical uncertainty (SD) maps if output for the respective maps are requested. These maps are only made if `<number-of-realizations>` is more than one. These maps are updated and written to file for every finished realization. The mean and uncertainty maps get the trailing

1. The reason for using the dash in the file names is that the \LaTeX typesetting system used for this manual makes it utterly complicated to generate cross-links in the document containing the underscore.

texts _mean and _SD in their file names. File names could look like:

```
d_TopA_mean.rxb,      d_TopA_SD.rxb
trap_TopA_mean.rxb,   trap_TopA_SD.rxb
v_MSL-to-TopA_mean.rxb, v_MSL-to-TopA_SD.rxb
```

For intervals, interval trends, interval velocity and interval velocity trends additional minimum and maximum thickness and velocity maps are generated. These have trailing texts _min and _max. File names could look like:

NEW in 7.0

```
t_TopA-to-TopB_mean.rxb, t_TopA-to-TopB_SD.rxb,
t_TopA-to-TopB_min.rxb,  t_TopA-to-TopB_max.rxb.
```

The mean depth surface will be similar to the predicted depth surface if the number of realizations is large². The empirical uncertainty map and the prediction uncertainty map will also be similar if the number of realizations is large although Monte Carlo noise has larger effect on the empirical uncertainty. If an [acceptance-criteria](#) apply, there might be a significant difference between the empirical mean depth surface and the corresponding predicted depth surface. This is illustrated in [Figure 10.6](#) for the empirical mean and in [Figure 10.7](#) for empirical uncertainty.

2. In principal, the mean depth surface will be identical to the predicted depth surface if the number of realizations goes to infinity.

Table 7.1. Output maps found in the [surfaces/](#) directory. The only maps that are written by default are surface depths.

Map (on/off element)	File prefix	Description
Surfaces:		
<depth>	d_	Deterministic (prediction) or stochastic simulated depth to the surface dependent on the specified <mode> . See Eq. 20.37 (deterministic) or Eq. 21.1 (stochastic simulation).
<depth-trend>	dt_	Similar to <depth> but the residual is omitted. See Eq. 20.23 (deterministic) or Eq. 21.2a (stochastic simulation).
<depth-residual>	dr_	Difference between <depth> and <depth-trend> .
<depth-uncertainty>	de_	Prediction uncertainty (SD) at each point on the surface. No output in stochastic simulation <mode> . See Eq. 20.42a – Eq. 20.42c .
<depth-trend-uncertainty>	dte_	Uncertainty (SD) caused by the uncertainty in trend coefficients. No output in stochastic simulation <mode> . See Eq. 20.24 .
<depth-residual-uncertainty>	dre_	Uncertainty (SD) caused by all the residuals in the surface. No output in stochastic simulation <mode> . See Eq. 20.25 .
<trap>	trap_	Trap defined by the spill point calculation. 1 inside trap and 0 outside.
<dip>	dip_d_	Dip map of depth surface.
<dip-trend>	dip_dt_	Dip map of depth trend surface.
<azimuth>	azimuth_d_	Azimuth map of depth surface. Azimuth less than <min-dip-for-azimuth-calculation> (default is 1 degree) is set to undefined.
<azimuth-trend>	azimuth_dt_	Azimuth map of depth trend surface.
Intervals:		
<thickness>	t_	Interval thickness computed as the difference between the two depth surfaces defining the interval (specified in <top> and <base> elements).
<thickness-trend>	tt_	Interval thickness trend computed as the difference between the two depth surface trends defining the interval. See Eq. 20.4 .
<thickness-residual>	tr_	Interval thickness residual computed as the difference between <thickness> and <thickness-trend> .
<velocity>	v_	Interval velocity computed as the difference between the two depth surfaces defining the interval divided by the corresponding travel time difference. Unrealistic velocities are removed by smoothing.
<velocity-trend>	vt_	The posterior interval velocity trend. See Eq. 20.48 .
Volumes:		
<column-map>	column_	The rock column height in a reservoir. Unit is determined by <z-unit> . See Eq. 9.1 in Section 9.1 .

Table 7.2. Special output maps found in the [surfaces/](#) directory. These maps are written when they are calculated.

File prefix	Description
time_truncated_	See <make-time-surfaces-consistent> for details.
Simulated_time_	Specified <travel-time> plus the simulated travel time residual (Section 21.2). Generated in stochastic simulation <mode> if <write-realization-maps> and <simulated-time> is yes.
FilteredVelocityTrend_	See <smoothing-factor-velocity-trends> for details.
FilteredSDMap_	See <smoothing-factor-SD-maps> for details.
Unfiltered_v_	See <smoothing-factor-calculated-velocities> for details.
Scaled_	See <scale-isochores-to-seismic-envelopes> for details.
Scaled_SD_	See <weight-isochore-package-above> for details.
Regridded_	These are the input trend maps re-gridded to the resolution of the output maps. These maps are generated when there is a mismatch between the input and output grid resolutions.

7.2 The log files

The log files are written to the `log-files/` directory under the `output/` directory. The log files can be used for [QC](#) and inspection of COHIBA results. See [Figure 6.2](#) for a quick overview of the available log files.

7.2.1 The `average-statistics.csv` file

This file is a [CSV file](#) containing average statistics for each surface. The columns are explained in [Table 7.3](#).

Table 7.3. Columns in the `average-statistics.csv` file.

Column name	Description
Surface	Surface name.
PriorRes	Average difference (RMSE) between prior trend and well points.
PostRes	Average difference (RMSE) between posterior trend and well points .
SpecRes	Average specified residual uncertainty (SD) at well points (contribution from all specified variograms).
TotRes	Total residual. To be removed in future releases.
RelPriorRes	Prior residuals divided by specified residual uncertainty.
RelPostRes	Posterior residual divided by specified residual uncertainty.
RelPriorTrendErr	Relative prior trend error. To be removed in future releases.
RelPostTrendErr	Relative posterior trend error. To be removed in future releases.

7.2.2 The COHIBA log file

The name and content of the COHIBA log file is specified in the `<logfile>` element. The default name is `cohiba.log`. An extensive example is given in [Section 19.1](#).

These are the sections in the COHIBA log file:

Section 1: Model settings

Reports the settings in the [COHIBA model file](#). Detail level set by `<model-settings>`.

Section 2: Loading input data

Reports what data has been read from file and possible errors. Detail level set by `<data-loading>`.

Section 3: Pre-processing input data

Detail level set by `<pre-processing>`.

Section 4: The alternative ways to build each surface

Reports what intervals are used to build the surfaces. This includes all alternative models and their weights. See [Figure 11.3](#) for an example of the output.

Reports how much weight each interval adds to each surface. The weights can be normalized by setting `<normalize-interval-weights-table>` in `<advanced-settings>` to yes.

Detail level set by `<surface-models>`.

Section 5: Processing well points

Reports redundant data and possible merging of duplicate well points. Reports potential conflicts and lists well points that have been removed or given additional uncertainty. Reports on pinch outs. Detail level set by `<well-points>`.

Section 6: Processing erosion/onlap constraints

Reports possible control points that are needed to constrain eroded and onlapping surfaces at observations of the eroding and onlapped surfaces. Detail level set by `<extra-points>`.

Section 7: Processing distance constraints

Reports possible distance data. Detail level set by `<distance-points>`.

Section 8: Well branching

Reports how different well branches (side tracks) are connected into a single multilateral well. The zonation point at the branching is called a *branching point*. COHIBA automatically identifies all branching points. The branching points are used to ensure consistency when moving uncertain wells (see [Section 8.4.2](#)). Branching points are always added to the zonation points. Inconsistent zone logs in common sections of side tracks are listed. Detail level set by `<well-branching>`.

Section 9: Sampling well paths and logs

Reports on processing of well paths with zone logs. Detail level set by `<well-paths>`.

Section 10: Trend coefficients based on well[/distance] points points

Reports the estimated values for the trend coefficients in the trends. Detail level set by `<trend-coefficients>`.

Section 11: Checking specified residual uncertainties

This is a way of checking that the specification of interval uncertainties are consistent with well points. The specified residual uncertainties are compared to residual uncertainties estimated from well points. This is done by extracting linear combinations³ of the well points that correspond to observations of the true residual uncertainty.

The specified residual uncertainties for each interval are classified as OK, Low, High, Too low, or Too high. Especially the two latter classifications is a sign of a wrongly specified residual uncertainty.

The identification of useful linear combinations can be time demanding so the element `<check-specified-residual-uncertainties>` can be used to omit the calculation.

Detail level set by `<residual-uncertainties>`.

Section 12: Well[/distance] points quality control

Reports poor matches between well points and trend model. These are classified as outliers or leverage points. Bias in the residuals is reported. Detail level set by `<outliers>`.

Section 13: Processing dip constraints

Reports dip points where uncertainty is added to resolve conflicts. Uncertainty is added if there is a mismatch between trends and dip data larger than 15°. The same uncertainty is added to all the dip points belonging to a well point. Uncertainty is not added if `<add-dip-uncertainty-for-trend-conflicts>` is set to no. Detail level set by `<dip-points>`.

Section 14.x: Conditioning on well[/distance/dip] points along well paths

Reports zonation status for zonation points along the well paths and the associated surface help points used to condition surfaces to the well paths. See [Table 7.4](#) for an explanation of the codes used to classify the surface help points. Detail level set by `<well-point-conditioning>`.

Section 15.x: Finding surface constraints for well path conditioning

Reports on help points and surface constraints that will be used to ensure correct conditioning to zone logs. See [Section 23](#) for details. Detail level set by `<help-points>`.

3. It is not always possible to find such linear combinations and the number of linear combinations can be few making the estimates unreliable. The number of such linear combinations are reported. The element `<min-generalized-eigenvalue-for-residual-uncert>` modifies a threshold used for selecting the linear combinations that correspond to the interval.

- Section 16.x Trend coefficients based on well[/distance] points and well paths
Reports the estimated values for the trend coefficients in the trends based on well points *and* well paths. Detail level set by [<trend-coefficients>](#).
- Section 17.x: Conditioning surfaces on all available points
Makes a final report on the quality of the surfaces. Detail level set by [<well-path-conditioning>](#).
- Section 18.x: Target point quality control
Detail level set by [<target-point-qc>](#).
- Section 19.x: Post-process surfaces
Detail level set by [<post-processing>](#).
- Section 20.x: Checking zonation
Reports possible problems with conditioning surfaces to well paths. Detail level set by [<zonation-checking>](#). Table 7.5 contain the various status of help points. This is also written to the file [zonation-status.csv](#).

Reports length of correct zonation for each zone. Detailed results are also written to [zonation-statistics.csv](#) and [zonation-statistics-detailed.csv](#) in [log-files/](#). A log called Mismatch reports the TVD mismatch. It is added to the output well log files in the [well-logs/](#).
- Section 21.x: Updated well paths
Detail level set by [<updated-well-paths>](#).
- Section 22.x: Spill points
Detail level set by [<spill-points>](#).
- Section 23.x: Volume calculations
Detail level set by [<volume-calculations>](#).
- Section 24.x: Make and export interval thickness maps and velocities
Include information about filtering of calculated velocities. Detail level set by [<interval-export>](#).
- Section 25.x: Export surfaces
Reports export of output surfaces. Detail level set by [<surface-export>](#).
- Section 26: Timings summary
Reports the amount of CPU time and real time spent on different operations. Note that the real time can be shorter than the CPU time when using parallel processes. Detail level set by [<timings>](#).
- Section 27: Suggested tasks
This is a task list of possible problems the user should look into. Detail level set by [<tasks>](#).

Section 14 – 25 are repeated for every simulated realization. For stochastic simulation [<mode>](#), the realization number, and a possible rejection sampling iteration, is added to the section number:

***** Section 18.3.5: Target point quality control

So 15 is the Section number, 3 is the realization number, and 5 is the iteration number. The iteration number is omitted if there are no rejection criteria.

The [COHIBA log file](#) is intended for catching problems during execution and for examining the main results. The output to screen is identical to the log file output provided the same detail

levels have been specified. The [COHIBA log file](#) can be large. The task list is intended to give a quick way to identify possible problems. The task list is also written to [tasks.log](#).

More detailed analysis are provided in the files [trend-estimation.csv](#) and the [wellpoints.csv](#).

7.2.3 The simulation.log file

This file contains a list of realization number and the random seed used to generate the realization. In case of rejection sampling, the number of rejected realizations are included in the list. This file is only generated in simulation [<mode>](#).

7.2.4 The tasks.log file

This file contains a task list of possible problems the user should look into. Detail level set by [<tasks>](#). This is an extraction of the [Section 27: Suggested tasks](#) in the [COHIBA log file](#). This file is only generated if there are some suggested tasks.

7.2.5 The volumes.csv file

This file is a [CSV file](#) giving a list of calculated volumes. It is formatted for easy import into spreadsheets. The file contains volumes from each [<reservoir-name>](#) and [<area-names>](#) which is specified in the model file. In case of simulation [<mode>](#), the volumes from all realizations are listed. In addition, realization number and seed is included in each row. See [Section 9](#) for more details and an example.

7.2.6 The trend-estimation.csv file

This file is a [CSV file](#) that contains an analysis of the trend coefficients. There is one line for each trend coefficient. The file is organized in columns described in [Table 7.6](#). Missing or undefined entries are marked by an ‘-’.

Use the trend-estimation.csv file to inspect the quality of the trend coefficient estimates. Trend coefficients with low UncertRed might introduce too much uncertainty and could be removed if the *t*-value (tEstim or tPost) is small.

7.2.7 The targetpoint-selection.csv file

This is a [CSV file](#) with the zonation summary in [Section 14.x: Conditioning on well\[/distance/dip\] points along well paths](#) in the [COHIBA log file](#). See [Table 7.4](#) for explanation of classification values.

7.2.8 The zonation-status.csv file

These is a [CSV file](#) with the zonation summary in [Section 20.x: Checking zonation](#) in the [COHIBA log file](#). See [Table 7.5](#) for explanation of classification values. This file is only generated if [<condition-to-well-paths>](#) is set to yes (default).

7.2.9 The zonation-statistics.csv and zonation-statistics-detailed.csv file

These files are [CSV files](#) that show the length of correct or incorrect zonation for each well (and zone). The files contains the following columns:

Well: Well name

Zone: Zone name (only for zonation-statistics-detailed.csv)

Correct: Length of correct zonation

Incorrect: Length of incorrect zonation

< 1.0: Length of incorrect zonation that is equal or less than 1.0 (of depth units)

> 1.0: Length of incorrect zonation that is more than 1.0 (of depth units)

Avg miss: Average [TVD](#) miss for the well path points that have incorrect zonation

Correct (%): Correct length / (Correct length + Incorrect length)

These files are only generated if [<condition-to-well-paths>](#) is set to yes (default).

Table 7.4. Classification of initial zonation status for the well path zonation points and classification of surface help points in [Section 14.x: Conditioning on well\[/distance/dip\] points along well paths](#) in the COHIBA log file and in the file `targetpoint-selection.csv`.

Well path zonation points:		
Column		
Match	Zonation status	Explanation
Y	Zonation correct:	Well path zonation point is initially in the correct zone.
N	Zonation incorrect:	Well path zonation point is initially in the wrong zone and must be corrected.
-	Undefined zonation:	Well path zonation point can not be classified due to crossing surfaces or zero thickness isochores.
Surface help points (ZoneTop and ZoneBase):		
Column		
Need	Classification	Explanation
N	Not needed:	Not needed since the well path point is initially in the correct zone.
Y	Needed:	Needed since the well path point is initially in the wrong zone or to close to the surface.
CY	Not needed:	Same as Y but not needed since neighboring correlated surface help points will ensure correct zonation. The correlation threshold can be modified by <threshold-for-help-point-deactivation> .
XY	Impossible to use:	This is either because the zone is extremely thin or because a correction requires the surface to move more than 3.09 SDs (see <t-value-error>).
-	No ZoneTop surface:	The top surface is the reference surface (the default is mean sea level (MSL)).

Table 7.5. Classification of final zonation status for the well path zonation points in [Section 20.x: Checking zonation](#) in the COHIBA log file and in the file `zonation-status.csv`.

Well path zonation points:		
Column		
Fix	Zonation status	Explanation
-	Unchanged zonation:	Well path point was initially in correct zone and has ended in the correct zone.
Y	Zonation corrected:	Well path point was initially in wrong zone and has ended in the correct zone.
N	Correction failed:	Well path point was initially in wrong zone and has not been corrected.
B	Broken zonation:	Well path point was initially in correct zone but has ended in a wrong zone.
F	Fixable broken zonation:	Well path point was initially in wrong zone and has not been corrected. It might be corrected if COHIBA is allowed to iterate the process by switching on <minimize-broken-zonation> .
X	Non-correctable zonation:	Well path point was initially in wrong zone and it is impossible to bring it into the correct zone. This is either because the zone is extremely thin or because a correction requires a surface to move more than 3.09 SDs (see <t-value-error>).
U	Invalid zonation:	There are no valid zonation code at the well path point.
=	Undefined zonation:	The zonation code is undefined at the well path point.

Table 7.6. The `trend-estimation.csv` file. Description of columns. The formulas used are found in Table 20.2.

Tag	Description
Interval	Interval name.
TopSurface	Name of top surface.
NumObs	Number of observations in top surface.
BaseSurface	Name of base surface.
NumObs	Number of observations in base surface.
Coef	Coefficient names: a, b, c... The labeling will follow the sequence of the <code><trend></code> elements. Different labels are used for <code><polynomial-trend></code> (Cij, Lij, or Mij) and <code><linvel-trend></code> (V0 and k, or a1, b1, and c1).
TrendMapMean	The mean of the trend specified by <code><value></code> .
TrendMapSD	The SD of the trend specified by <code><value></code> . This is a measure of the variation in the trend map. This will be zero if <code><value></code> is a constant.
PriorMean	Prior <code><coefficient-mean></code> .
EstimMean	Estimated mean value for the trend coefficient. This value is estimated using GLS which amounts to linear regression where the spatial correlation in the well data is accounted for. This value may fail to exist if there are too few data in some of the intervals. It is not calculated if simple kriging is specified.
PostMean	Posterior mean value for the trend coefficient. This value is estimated using a Bayesian approach which amounts to a weighting between the prior specification and the GLS estimate. Note that this estimate exist even if the GLS estimate fails to exist. It is not calculated unless Bayesian kriging is specified.
PostMeanUpd	Posterior mean value for the trend coefficient estimated using well points <i>and</i> information from the zone-logs along the well path.
SimMean	Simulated (Monte Carlo) value for the trend coefficient. The simulated values are drawn from the estimated distribution. For simple kriging it will be identical to the value specified in the <code><coefficient-mean></code> element unless the <code><simulate-simple-kriging-trends></code> element is given the value yes. Only calculated in stochastic simulation <code><mode></code> .
PriorSD	Prior SD for the trend coefficient. The value is specified by <code><coefficient-SD></code> .
EstimSD	Estimated SD for the trend coefficient. This value is estimated using GLS. Not calculated if simple kriging is specified.
PostSD	Posterior SD for the trend coefficient. This value is estimated using a Bayesian approach. This value will always be less than PriorSD and EstimSD. Not calculated unless Bayesian kriging is specified.
PostSDUpd	Posterior SD for the trend coefficient estimated using well points <i>and</i> information from the zone-logs along the well path.
UncertRed	For universal kriging: $(\text{PriorSD} - \text{EstimSD}) / \text{PriorSD}$. For Bayesian kriging: $(\text{PriorSD} - \text{PostSD}) / \text{PriorSD}$. Uncertainty reduction in percent from the prior specification. Value is always in the range 0 to 100 % for Bayesian kriging. For universal kriging negative values occur when the prior specification is more certain than the estimate. A small (or negative) value signals that well data has minor impact. Consider increasing the prior SD of the trend coefficients if well data has minor impact. Consider using Bayesian kriging if a negative value occurs.
tPrior	$ \text{PriorMean} / \text{PriorSD}$.
tEstim	$ \text{EstimMean} / \text{EstimSD}$. A large <i>t</i> -value (> 2) shows that this is an important trend for explaining depth or interval velocity variations according to the well points. A small value (< 1) shows that the well points does not support the existence of such a trend. Consider removing it.
tPost	$ \text{PostMean} / \text{PostSD}$. See the comments on tEstim. Note that the conclusions using this <i>t</i> -value are less significant since these estimates can be heavily influenced by the a priori specifications.

A summary for each zone is shown in [Section 20.x: Checking zonation](#) in the COHIBA log file.

7.2.10 The wellpoints.csv file

This is a [CSV file](#) containing an analysis of the well points and how they fit to the surfaces. It also contains a summary of actions taken on well points. There is one line for each well point. See [Table 7.7](#) for a detailed description of the columns.

7.2.10.1 Flags in wellpoints.csv

The user should inspect for possible flags. This is an important [QC](#) step that may detect serious errors in data and inconsistencies between data and models.

When two well points are found to be close, COHIBA checks if there is a potential conflict, that is, the slope between the well points is more than 10 %. A potential conflict is flagged in the Conflict column. This typically happens if side tracks have been inconsistently adjusted. A potential conflict might be a serious error and should be checked by the user. A well point can be removed by adding it to the well point file specified in the `<well-points-to-ignore>` element.

COHIBA automatically adds a well point [TVD](#) pick uncertainty to all close well points to ensure numerical stability.⁴ This is flagged in the AddUncert column. The amount of uncertainty added can be found by comparing the columns TotPickSD and PickSD. The added uncertainty depends on the [TVD](#) difference between the potentially conflicting data.

The LevPoint flag signals that a particular data point is a leverage point. A leverage point has a very strong influence on the trend coefficients in the trends so these data should be inspected to ensure that they are correct. Leverage points are less likely when there is a lot of data.

Mismatches and conflicts between the trend model and the well points are flagged in the Outlier column. If the data had a perfect Gaussian distribution, 5 % of the well points would be classified as outliers. Outliers are classified in four levels depending on severity: *outlier*, *severe outlier*, *error* and *extreme error*. COHIBA adds a well point [TVD](#) pick uncertainty to severe outliers, and removes well points that are classified as an error from kriging. Extreme errors are removed from all calculations. COHIBA handles all these situations automatically but it is strongly recommended to look into the reasons for the inconsistency between well points and the trend model.

The final flag in the Deleted column shows the well points that have been deleted prior to the trend estimation. There are three situations when well points are removed: Well points outside the grid boundary are not used, well points are a pinch out between other surfaces, and if the specified residual uncertainty ([SD](#)) is zero at the well point location.

7.2.10.2 Trend values in wellpoints.csv

The trend values, columns PriorTrend, EstimTrend PostTrend, and SimTrend, are obtained by evaluating the trends at the well point locations. Some of the trend values might be undefined depending on the `<kriging-method>` and the `<mode>` (prediction/simulation).

These values should be compared to the observed [TVD](#) in column TVD.

7.2.10.3 Trend uncertainty in wellpoints.csv

These are given in columns PriorTrendSD, EstimTrendSD and PostTrendSD. These values are obtained by evaluating the impact of the uncertainty in the trend coefficients on the depth uncertainty at the well point locations. Some of these columns may be undefined depending on the `<kriging-method>` and the `<mode>` (prediction/simulation). All values are [standard deviation \(SD\)](#).

For the Bayesian kriging mode the column TrendSDRed is evaluated. It shows

$$(\text{PriorTrendSD} - \text{PostTrendSD})/\text{PriorTrendSD}$$

4. Well point [TVD](#) pick uncertainty is only added if the well point has no initial well pick uncertainty.

Table 7.7. The `wellpoints.csv` file. Description of columns. File contains one line for each well point. See Table 20.1 for exact formulas. Table 7.15 describes additional columns for dip data.

Column name	Value	Description
Surface	Text	Name of surface.
Well	Text	Name of well.
x	Real	UTM coordinate.
y	Real	UTM coordinate.
TVD	Real	Observed TVD. (From COHIBA well points file or transitions in zone logs.)
NewTVD	Real	Modified TVD if <allow-wells-to-move> is set to yes.
DeltaTVD	Real	Difference between TVD and NewTVD.
TravelTime	Real	Travel times (from <travel-time> grids) if Surface is a reflector.
MD	Real	MD calculated along the well.
Duplicate	Int/-	Duplicates have the same number. One well point is kept and the rest are removed from calculations.
Conflict	C/-	Potential conflict with other close well points in same surface. (Slope > 10 %.)
AddUncertWP	U/-	Uncertainty added to well point because it is close to other well points.
AddUncertOL	U/-	Uncertainty added to well point because it is a severe outlier.
Pinchout	P/-	Pinch out. Identical to well point from different surface.
LevPoint	L/-	Leverage point. Large impact on the trend estimation. Check input values!
Outlier	O	Outlier. Inspection recommended.
	U	Severe outlier. TVD pick uncertainty added. Inspection strongly recommended.
	S	Error. Removed from all calculations. Inspection strongly recommended.
	E	Extreme error. Removed one-by-one from all calculations. Inspection strongly recommended.
	T	Severe or extreme outlier. Ignored in trend estimation, included in conditioning.
Deleted	B	Outside grid boundary.
	P	Too highly correlated with another data point.
	E	Specified residual uncertainty is zero.
	X	Error or extreme error. (S or E above.)
	F	Close to fault according to fault indicator log.
	S	Missing values in trends.
	R	Belongs to reference surface. (Uncertainty zero.)
	M	Measured depth is needed but is missing.
	T	Deleted from trend estimation but included in conditioning.
PriorTrend	Real	Depth trend using prior trend coefficients. ('-' if universal kriging mode.)
EstimTrend	Real	Depth trend using estimated (GLS) trend coefficients. ('-' if too few data or simple kriging.)
PostTrend	Real	Depth trend using posterior trend coefficients. ('-' unless Bayesian <kriging-method>.)
SimTrend	Real	Depth trend using simulated trend coefficients. ('-' unless stochastic simulation <mode>.)
PriorTrendSD	Real	Prior depth trend uncertainty (SD). ('-' if universal kriging mode.)
EstimTrendSD	Real	Estimated depth trend uncertainty (SD). ('-' if too few data or simple kriging.)
PostTrendSD	Real	Posterior depth trend uncertainty (SD). ('-' unless Bayesian kriging mode.)
TrendUncertRed	Real	Reduction (in %) between prior and posterior uncertainty (SD). ('-' unless Bayesian kriging mode.)
SpecPickTVD-SD	Real	Well point TVD pick uncertainty (SD) specified by the user.
PickTVD-SD	Real	Well point TVD pick uncertainty (SD) including user specified and automatically added.
WellTVD-SD	Real	Well path TVD uncertainty (SD) at well point.
Residual	Real	Difference between well point TVD and trend.
ResidualSD	Real	Residual depth uncertainty (SD).
TotSD	Real	Sum of trend uncertainty and residual uncertainty.
Mismatch	Real	Mismatch between observed well point TVD and predicted depth in map. Caused by gridding error and TVD pick uncertainty.
h	Real	Used for classifying leverage points. Number between 0 and 1 (Section 20.3.5.1).
t-value	Real	Used for outlier classification. t-value = Residual /ResidualSD.
t-Student	Real	Replaces t-value when h is available.

in percent. The value will be between 0 % and 100 %. A small value indicates that well points has minor impact on the estimated trend in this location. Consider increasing the prior SD of the trend coefficients if well data has minor impact on the trend at many locations.

7.2.10.4 Pick uncertainty in `wellpoints.csv`

Well point TVD pick uncertainty is specified in the last column in the [COHIBA well points file](#). These uncertainties are reported in column PickSD. COHIBA adds additional pick uncertainty if potential conflicts are detected. The resulting total pick uncertainty is reported in TotPickSD. These are reported as SDs.

The automatically added pick uncertainty (SD) is given by

$$\sqrt{\text{TotPickSD}^2 - \text{PickSD}^2}.$$

(Variances add linearly.)

7.2.10.5 Residuals and uncertainties in `wellpoints.csv`

The column Residual contains the difference between the observed TVD (in TVD column) and the trend. The trend depends on the `<kriging-method>` and the `<mode>` (prediction/simulation) specified in the [COHIBA model file](#).

The ResidualSD column shows the model uncertainty obtained by aggregating the uncertainty in all intervals that are needed to obtain this surface. This include uncertainties in travel time, interval velocity, and interval thickness. All these uncertainties are specified in the `<variogram>` elements.

The TotPickSD column contains the total uncertainties and is a combination of ResidualSD and the uncertainty in the trend (i.e. PostTrendSD with Bayesian kriging mode). Comparing the TotPickSD column to the ResidualSD column shows if it is the local residual uncertainty or the global trend uncertainty that dominates.

The Mismatch column shows the difference between the well point and the prediction obtained by using bilinear interpolation between the four nearest predicted values in the grid. The mismatch is the sum of two factors:

1. A *gridding error* that is proportional to the Residual values. The gridding error can be large (several meters) if the residual is large. The gridding error is inevitable unless well points coincide with a grid corner location. See [Figure 20.2](#) for an illustration.
2. Kriging is not a perfect interpolator when well point TVD pick uncertainties are present. Pick uncertainties can be specified in the [COHIBA well points file](#) and the pick uncertainties are estimated from the resolution of the zone logs when well points are calculated from zone logs.

The mismatch between well point TVD values and the predicted surface depth is by default removed in the post processing by adjusting the four grid values closest to each well point. This is not done for well points with a significant TVD pick uncertainty (> 1 meter by default). The adjustment of the grid values can be turned off using `<make-surfaces-interpolate-well-points>`.

7.2.10.6 Statistical measures for outliers in `wellpoints.csv`

Leverage points are well points that influence the estimated trend values strongly. A corrupted leverage point might not be identified as an outlier because the estimates adapts to it. The column `h` contains the diagonal elements of what is called the hat matrix. This is a by-product of linear regression and can be used to identify leverage points. It is not available if the linear regression fails. See [Section 20.3.5](#) for details.


Table 7.8. Columns in the `mismatch-data.csv` file.

Column name	Description	Formula	Definition
DepthTrendMismatch	Trend mismatch	$z^l(\mathbf{x}) - \hat{m}^l(\mathbf{x})$	See Eq. 20.23
DepthTrendUncertainty	Trend uncertainty	$\hat{\sigma}^l(\mathbf{x})$	See Eq. 20.24
DepthPredMismatch	Depth mismatch	$z^l(\mathbf{x}) - Z^{*l}(\mathbf{x})$	See Eq. 20.37
DepthPredUncertainty	Depth uncertainty	$\sigma^{*l}(\mathbf{x})$	See Eq. 20.42a to Eq. 20.42c

The `t` column contains the t -value for each well point:

$$t = |\text{Residual}| / \text{ResidualSD}.$$

The t -value is used for classifying outliers. Large values indicates that there is a severe mismatch between the well point and trend. Values above 1.96 are flagged as outliers, above 2.57 as uncertain, and values above 3.09 is classified as errors⁵. If the well points had a perfect Gaussian distribution this would occur with a frequency of 5 %, 1 %, and 0.2 % respectively.

The `tStud` column is similar to `t` but includes a correction for leverage points. This makes it possible to identify leverage points as outliers even though the trend coefficients have adapted strongly to them. 

7.2.11 The `targetpoints.csv` file

Logs the surface target points used for conditioning on well paths with zone logs. This file is only generated if there are constraints from well paths that COHIBA consider relevant.

7.3 Files in the cross-validation/ directory

Cross validation is used to compare the precision of different COHIBA models. The cross validation is performed by leaving one well out of the calculations and compare trends and predictions to the well points in the ignored well. Calculations are repeated for all wells so this may take some time if there are many wells.

Cross validation is triggered by setting `<cross-validate-wells>` to yes. In this case, the `cross-validation/` directory is created and a minimal version of the [COHIBA log file](#) is written. All other output is suppressed. The output is written to three files.

7.3.1 The `mismatch-data.csv` file

This file contains one line for every well point containing cross validated mismatch and calculated uncertainty. The columns are:

```
Surface Well x y TVD MD DepthTrendMismatch DepthTrendUncertainty DepthMismatch DepthUncertainty
```

The non-obvious columns are explained in [Table 7.8](#). This file contains the raw data used to make the cross validated [Root-mean-square error \(RMSE\)](#) estimates reported in the files described in the next section.

7.3.2 The `rmse-mismatch-surfaces.csv` and `rmse-mismatch-wells.csv` files

These files contain [RMSE](#) estimates for every surface or well respectively based on the data found in `mismatch-data.csv`. Two `rmse-mismatch-surfaces.csv` files are compared in [Table 7.9](#). The two files are generated using one model that includes the surface Seabed directly below [MSL](#) and one model that has the surface Intra1 directly below [MSL](#). The files show that including Seabed in the model reduces all [RMSE](#) estimates for all surfaces. So in this case, including Seabed improves the precision significantly.

5. These thresholds can be modified by the elements `<t-value-outlier>`, `<t-value-severe-outlier>`, and `<t-value-error>`.

Table 7.9. Two alternative `rmse-mismatch-surfaces.csv` files where spaces are added for readability. The columns are explained in Table 7.10. The Seabed surface (green row) is omitted in the second model. All the RMSE estimates are reduced if Seabed is included so the conclusion is to keep this surface in the model.

Surface,	Nobs,	DepthTrendRMSE,	DepthTrendWeightedRMSE,	DepthRMSE,	DepthWeightedRMSE
Seabed,	83,	0.89,	0.94,	0.59,	0.90
Intra3,	82,	10.01,	10.74,	6.12,	5.95
Intra2,	91,	7.65,	7.66,	4.47,	3.85
Intra1,	130,	10.11,	10.21,	5.78,	5.47
BCU,	154,	12.73,	12.42,	8.40,	10.23

Surface,	Nobs,	DepthTrendRMSE,	DepthTrendWeightedRMSE,	DepthRMSE,	DepthWeightedRMSE
Intra3,	82,	13.59,	13.76,	7.33,	6.08
Intra2,	91,	11.95,	11.98,	5.62,	4.00
Intra1,	130,	14.51,	14.80,	6.35,	5.52
BCU,	154,	17.30,	16.92,	9.54,	10.47

Table 7.10. Columns in the `rmse-mismatch-surfaces.csv` and `rmse-mismatch-wells.csv` files.

Column name	Description	Formula
Surface/Well	Surface or well name	
Nobs	# of observations (well points)	N
DepthTrendRMSE	Depth trend, RMSE	$RMSE = \sqrt{\frac{1}{N} \sum_i (\hat{m}_i - z_i)^2}$
DepthTrendWeightedRMSE	Depth trend, weighted RMSE	$WRMSE = \sqrt{\frac{1}{N} \sum_i [\frac{\hat{\sigma}}{\hat{\sigma}_i} (\hat{m}_i - z_i)]^2}$
DepthPredRMSE	Depth prediction, RMSE	$RMSE = \sqrt{\frac{1}{N} \sum_i (Z_i^* - z_i)^2}$
DepthPredWeightedRMSE	Depth prediction, weighted RMSE	$WRMSE = \sqrt{\frac{1}{N} \sum_i [\frac{\sigma^*}{\sigma_i^*} (Z_i^* - z_i)]^2}$

The two 'DepthTrend...' columns measure the cross validated RMSE between estimated trends and well points. These estimates ignore spatial correlation. The two 'Depth...' columns measure the cross validated RMSE between predicted surface depth and well points. Prediction depends on spatial correlation so these estimates take into account spatial correlation. If all well points are separated by more than the variogram ranges, then corresponding 'DepthTrend...' and 'Depth...' columns would have identical values. The Weighted columns take into account the local change in trend and depth uncertainty. See Table 7.10 for details.

7.4 Files in the spill-points/ directory

In addition to the trap output grids written to `surfaces/`, COHIBA generates a set of files for analyzing the trap(s). These files are written to the directory `spill-points/` under the output directory. This directory is only created when spill point calculations are required.

The `spillpoint-Surface.rxat` file contains the spill points coordinates of surface Surface using the ROXAR ATTRIBUTES TEXT format. For stochastic simulation, the spill point coordinates for each realization is listed on a separate line. The realization number is the only attribute and is called SimulationNumber.

The `fillpath-Surface.rxat` file contains the set of points on surface Surface visited by the spill point detection algorithm before it terminates. The trail starts at the starting point (of the algorithm) and finishes at some boundary point. Possible traps will be seen as clusters of points. This file is only generated when spill points are triggered from command line (see Section 4.3).

7.5 Files in the target-points/ directory

For an explanation of surface target points and well target points see [page 221](#). These files are saved in the target-points/ directory under the specified output directory. The file format is [ROXAR ATTRIBUTES TEXT](#).

There is a *surface* target points file `surface-targetpoints.rxat` that contains all surface target points. There are also surface target points files for each well and surface that are named `surface-targetpoints-Well.rxat` and `surface-targetpoints-Surface.rxat` where `Well` and `Surface` is replaced by the well and surface names respectively.

There is one *well* target points file `well-targetpoints.rxat` that contains all well target points. There is also a well target points file for each well that is named `well-targetpoints-Well.rxat` where `Well` is replaced by the well name. These files are only generated if [<allow-wells-to-move>](#) is set to yes.

7.6 Files in the well-logs/ directory

Exported well logs files are saved in the well-logs/ directory under the specified output directory. The file format is [ROXAR RMS WELL](#) or [LAS 2.0 well](#) depending on the input file format. These files can be used to compare the original well logs in the `welldata/` in the `input/` directory.

There is one well logs file for each well and these are named `Well.rmswell` or `Well.las` where `Well` is replaced by the well names.

The well logs files are only exported if [<write-wells>](#) is yes (default is no) or if [<condition-to-well-paths>](#) and [<allow-wells-to-move>](#) are both yes.

The exported well log files are similar to the input well log files. If [<condition-to-well-paths>](#) is yes, an additional log called `Mismatch` is added. The log value is 0.0 if the well is correctly placed in a zone, otherwise the absolute [TVD](#) mismatch is given.

New or modified logs if [<allow-wells-to-move>](#) is yes:

- Predicted well path [TVD](#) values replace the original [TVD](#) values on export.
- The (posterior) well path [TVD](#) prediction uncertainty is exported as the log `PosteriorUncertainty`.
- A log called `RepositioningDifference` is added. This log is the difference between the predicted well path [TVD](#) values and the original well path [TVD](#) values.
- If [<wellpath-TVD-SD-log-name>](#) is used, COHIBA replaces input well path [TVD](#) uncertainty log values that are missing or negative by proper values. The modified logs replace the original well path [TVD](#) uncertainty logs in exported well log files.
- If [<wellpath-TVD-SD-log-name>](#) is *not* used, a parametric well path [TVD](#) uncertainty log is generated. This log is called `Well-path-TVD-SD` in the exported well logs files.

7.7 Files in the well-points/ directory

Well point files are saved in the well-points/ directory under the specified output directory. The file format is [ROXAR ATTRIBUTES TEXT](#). These files can be used to inspect a large number of properties at each well point. The available attributes are described in [Table 7.11](#).

The `wellpoints.rxat` file contains a line for every well point. There are also separate files that only includes well points that belong to a single well or surface. These are named `wellpoints-Well.rxat` and `wellpoints-Surface.rxat` where `Well` and `Surface` are replaced by well and surface names respectively.

These attributes are almost the same as the columns in `wellpoints.csv` that are described in [Table 7.7](#).

Table 7.11. Well point attributes used in the ROXAR ATTRIBUTES TEXT files `wellpoints.rxat`, `wellpoints-Well.rxat` and `wellpoints-Surface.rxat`. Additional dip attributes in Table 7.15.

Attribute name	Type	Description
Original Z-value	Float	TVD input data. Added if <code><allow-wells-to-move></code> is yes.
Change in Z-value	Float	TVD adjustment. Added if <code><allow-wells-to-move></code> is yes.
Measured depth	Float	MD calculated along the well.
Travel time value	Float	Travel times (from <code><travel-time></code> grids).
Surface	String	Name of surface.
Well	String	Name of well.
Fault block	String	Name of fault block (in ROXAR RMS).
Obtained from zone log	Discrete	1 if true and 0 if false.
Point has a duplicate	Discrete	1 if true and 0 if false.
Possibly involved in conflict	Discrete	1 if true and 0 if false.
Close observation uncertainty added	Discrete	1 if true and 0 if false.
Severe outlier uncertainty added	Discrete	1 if true and 0 if false.
Part of pinch-out	Discrete	1 if true and 0 if false.
Leverage point	Discrete	1 if true and 0 if false.
Outlier	Discrete	1 if true and 0 if false.
Deleted	Discrete	1 if true and 0 if false.
Prior trend	Float	Depth trend using prior trend coefficients. ('-' if universal kriging mode.)
Estimated trend	Float	Depth trend using estimated (GLS) trend coefficients. ('-' if too few data or simple kriging.)
Posterior trend	Float	Depth trend using posterior trend coefficients. ('-' unless Bayesian <code><kriging-method></code> .)
Simulated trend	Float	Depth trend using simulated trend coefficients. ('-' unless stochastic simulation <code><mode></code> .)
Prior trend uncertainty (SD)	Float	Prior depth trend uncertainty. ('-' if universal kriging mode.)
Estimated trend uncertainty (SD)	Float	Estimated depth trend uncertainty. ('-' if too few data or simple kriging.)
Posterior trend uncertainty (SD)	Float	Posterior depth trend uncertainty. ('-' unless Bayesian kriging mode.)
Trend uncertainty reduction	Float	Reduction (in %) between prior and posterior uncertainty. ('-' unless Bayesian kriging mode.)
Well point TVD pick uncertainty specified (SD)	Float	Pick uncertainty specified by the user.
Well point TVD pick uncertainty (SD)	Float	Pick uncertainty including user specified and automatically added.
Well path TVD uncertainty (SD)	Float	Well path TVD uncertainty specified by uncertainty log.
Residual	Float	Difference between TVD and depth trend.
Residual uncertainty (SD)	Float	Residual depth uncertainty.
Total uncertainty (SD)	Float	Sum of depth trend uncertainty and residual depth uncertainty.
Mismatch	Float	Mismatch between observed TVD and predicted depth in map. Caused by gridding error and TVD pick uncertainty.
Leverage point indicator	Float	Used for classifying leverage points. Between 0 and 1.
t-value	Float	t-value = Residual /Residual uncertainty. (Used for outlier classification.)
t-Student	Float	Replaces t-value when Leverage point indicator is available.

7.8 Files in the zonation-points/ directory

For an explanation of zonation points see [Section 23.1](#). The zonation points files are saved in the zonation-points/ directory under the specified output directory. The file format is [ROXAR ATTRIBUTES TEXT](#).

The zonationpoints.rxat file contain all zonation points along all well paths. There are also files that only include zonation points for each well, named zonationpoints-Well.rxat where Well is replaced by the well names. See [Table 7.12](#) for details.

7.9 Files in the dip-points/ directory

The dip-points.rxat file contains all dip points. There are also files that only include dip points for each well or surface, named dip-points-Well.rxat and where Well is replaced by the well names. The file format is [ROXAR ATTRIBUTES TEXT](#). See [Table 7.14](#) for details.

The dip-polylines.rxpot file contains a 100 meter long line segment for each dip data. The file is the simple ROXAR RMS polyline format and can be used to visualize dip data locations and directions.

7.10 Files in the distance-points/ directory

The distance-points.rxat contains all the distance data points. In addition, the files distance-points-Well.rxat are written for every Well.

The distance-polylines.rxpot contains vertical lines between the surface and the well for every distance point. In addition, distance-polylines-Well.rxpot is written for every Well.

The distance-points.csv is similar to [wellpoints.csv](#).

Table 7.12. Attributes in the `zonationpoints-Well.rxat` files after the conditioning on well paths.

Attribute name	Type	Description
Measured Depth	Float	MD at zonation point location.
Well	String	Name of the well.
Fault block	Discrete	Fault block number (ROXAR RMS).
Deactivated point	String	See Table 7.13 .
Branching point	Discrete	1 if a branching point. 0 otherwise.
Isochore thickness	Float	Isochore thickness at zonation point location.
Isochore thickness change	Float	Isochore trend thick. at zonation point location.
Distance to top surface	Float	Distance to top surface from zonation point.
Change in distance to top surface	Float	Change in dist. to top surface from zonation point.
Distance to base surface	Float	Distance to base surface from zonation point.
Change in distance to base surface	Float	Change in dist. to base surface from zonation point.
Name of true zone	String	Zone name in well at zonation point location.
True zone	Discrete	Zone number in well at zonation point location.
Name of calculated zone	String	Zone name in resulting surface model.
Calculated zone	Discrete	Zone number in resulting surface model.
Zonation match	String	Match between true and calculated zones? (Table 7.13)
Zonation corrected with zone log conditioning	String	Was zonation corrected? (See Table 7.13 .)

Table 7.13. The possible values for the attributes Deactivated point, Matching zonation and Zonation corrected with zone log conditioning in `zonationpoints-Well.rxat` files.

Attribute name	Description
Deactivated point	Details about possibly deactivated zonation point.
-	Not deactivated.
D	Duplicate of another point.
F	Too close to a fault.
W	Too close to a well point in another well.
U	Associated with undefined surface/interval values.
Matching zonation	Initial zonation status. See Table 7.4 for more details.
Y	Zonation matches.
N	Zonation does not match.
U	Zonation status is undefined.
Zonation corrected...	Final zonation status. See Table 7.5 for more details.
-	Zonation matched without surface help points.
Y	Zonation was fixed by surface help points.
N	Zonation was not fixed. Unknown why.
B	Zonation was broken by introduction of surface help points.
F	Zonation was broken but can be fixed by iterations. Use <code><minimize-broken-zonation></code> to activate.
X	Zonation was not fixed because surface help points could not be used.
U	Zonation is undefined in either well of surface model.

Table 7.14. Attributes in the files `dip-points.rxat` and `dip-points-Well.rxat`.

Attribute name	Type	Description
Original Z-value	Float	Depth of well point.
Change in Z-value	Float	Change in depth due to dip.
Surface	String	Name of surface.
Well	String	Name of well.
Fault block	String	Fault block name.
Deleted	Discrete	1 if true and 0 if false.

Table 7.15. Dip data in `wellpoints.rxat` and `wellpoints.csv`. The column names in `wellpoints.csv` are `InputAzimuth`, `InputDip`, `PostTrendAzimuth`, `PostTrendDip`, `DepthAzimuth`, `DepthDip` and `DipPointSD`. See Table 7.11 for other attributes in `wellpoints.rxat` and Table 7.7 for other columns in `wellpoints.csv`.

Attribute name	Type	Description
Input azimuth	Float	The azimuth specified as input by the user.
Input dip	Float	The dip specified as input by the user.
Posterior trend azimuth	Float	Calculated azimuth of posterior trend surface.
Posterior trend dip	Float	Calculated dip of posterior trend surface.
Depth azimuth	Float	Calculated azimuth of output depth surface. Calculated if <code><condition-to-surface-dip></code> is yes.
Depth dip	Float	Calculated dip of output depth surface. Calculated if <code><condition-to-surface-dip></code> is yes.
Dip point uncertainty (SD)	Float	The uncertainty assigned to dip points.

7.11 The expert/ directory



There is a large number of possible output files that are saved in the expert/ directory under the specified output directory. These are only written if `<write-expert-files>` is set to yes. The default is no. These files are not necessary for normal QC and is mainly intended for special situations such as debugging by developers.

The expert/ directory contains the sub-directories `branching-points/`, `clusters/`, `correlations/`, `expert-log-files/`, `extrapolation/`, `help-points/`, `target-points/`, `well-points/`, and `zonation-points/`.

The content of these are briefly described in the following but note that there might be additional undocumented files and directories in the expert/ directory. Most of the files however are self-explanatory.

7.11.1 Files in the branching-points/ directory

This directory contains the file `branching-points.rxat` in the ROXAR ATTRIBUTES TEXT format that lists all branching points detected by COHIBA in the input wells. Branching points are also logged in the [Section 8: Well branching in COHIBA log file](#). Normally a multilateral well with n branches will have $n - 1$ branching points. A file could look like:

```
Float MD
Float max-merge-distance
String Wells
533526.21 6744757.27 1559.67 2258.89 0.000 "10/2-X-13_Y1H, 10/2-X-13_Y1HT2"
533483.39 6744772.95 1559.36 2228.49 0.005 "10/2-X-13_Y1H, 10/2-X-13_Y2H, 31/2-X-13_Y1HT2"
533393.44 6744807.11 1558.76 2172.78 0.007 "10/2-X-13_Y1H, 10/2-X-13_Y2H, 10/2-X-13_Y3H, 10/2-X-13_Y1HT2"
```

The maximum merging distance is zero when different branches are sampled identically. This is the normal situation.

7.11.2 Files in the clusters/ directory

When finding surface target points and help points to replace the surface constraints, these are grouped into clusters. Each cluster is handled separately. See [Section 23.4](#) for details.

The `cluster-Num-wellpoints.xyz` file contains the well points belonging to cluster number Num. The `cluster-Num-constraints.xyz` file contains the target points belonging to cluster number Num. The file format is `xyz-file`. These files are only written if `<write-xyz-point-files>` is set to yes.

The `cluster-large-mismatch-Num.rxat` and `cluster-large-mismatch-Well.rxat` files contains target points for cluster number Num or well Well for which there is a large mismatch between the target point depth and the (interpolated) surface value. This mismatch is partly due to the gridding error, but may also indicate numerical problems. Mismatches may arise if clusters are incorrectly treated as independent of each other (ref. `<threshold-for-cluster-merging>`), if clusters become too large (convergence problems), or if a too small neighborhood is used in the final surface conditioning. These files are written using the ROXAR ATTRIBUTES TEXT format.

7.11.3 Files in the correlations/ directory

Interval residuals become correlated when using `<correlated-intervals>` ([Section 14](#)). The correlations between interval residuals are written to `residual-correlation-matrix.dat` if `<write-correlation-files>` is set to yes. The size of this matrix is the number of intervals in the model.

7.11.4 Files in the expert-log-files/ directory

The `posterior-correlation-matrix.dat` file contains the posterior correlation matrix between trend coefficients. The diagonal is the posterior uncertainty PostSD given in file `trend-estimation.csv`. The sequence follows the sequence in `trend-estimation.csv`. This is

an [ASCII](#) file.

7.11.5 Files in the `extrapolation/` directory

This directory contains extrapolated

If `<extrapolate-input-surfaces>` is used, then all areas with missing codes in input trends, travel time and [SD](#) maps will be replaced by extrapolated values. The extrapolated input maps can be written to this directory. The file names are the original file names with an additional prefix `extrapolated_`.

In addition, the points used when extrapolating the missing areas are saved in three files with post-fix `_points_control.rxat`, `_points_edges.rxat`, and `_points_stationary.rxat`. These files are written using the [ROXAR ATTRIBUTES TEXT](#) format.

7.11.6 Files in the `help-points/` directory

A surface help point is calculated for each surface constraint. The surface help points are used to push or drag surfaces away from selected zonation points along the well paths. Surface help points are only used when making deterministic surfaces in prediction `<mode>`.

The surface help points enters the kriging equations as ordinary well points but they have associated [TVD](#) pick uncertainty. Surface help points belonging to the same cluster will have correlated [TVD](#) pick uncertainty.

The surface help points are chosen so that the surfaces interpolate the surface target points. Surface target points are the expected location of the (deterministic) surface at the surface constraints. The Data Augmentation Algorithm is used for calculating the surface target points. See [Section 23.1](#) for details.

The `helppoints-Surface.xyz` and `helppoints-Well.xyz` files contains the surface help points that belongs to Surface or Well respectively. The file format is [xyz-file](#). These files are only written if `<write-xyz-point-files>` is set to yes.

7.11.7 Files in the `target-points/` directory

The `targetpoints-Surface.xyz` and `targetpoints-Well.xyz` files contains the surface target points that belongs to Surface or Well. The file format is [xyz-file](#). These files are only written if `<write-xyz-point-files>` is set to yes.

7.11.8 Files in the `well-points/` directory

The `wellpoints-before-processing.dat` file contains all the well points initially considered by COHIBA. It is written as a [COHIBA well points file](#). The well points can be imported from multiple [COHIBA well points files](#) and from well paths containing zone logs. The well points specified in the files in the `<well-points-to-ignore>` element are removed from this list.

COHIBA removes unnecessary or corrupt data, and the remaining data after the pre-process is written to the `wellpoints.dat` file using the [COHIBA well points file](#) format. This file can be used as input to COHIBA. Note however that it does not contain all information from well paths with zone logs; only the zone transitions are kept.

The excluded well points, the difference between between `wellpoints-before-processing.dat` and `wellpoints.dat`, are collected in the [xyz-files](#) `wellpoints-excluded-surface-Surface.xyz`, `wellpoints-excluded-zonelog-Well.xyz`, and `excluded-wellpoints-pointfile-Well.xyz`. The first set of files contains excluded well points belonging to surface Surface, the second set of files contains excluded well points extracted from zone logs in well Well, and the last set of files contain excluded well points read from [COHIBA well points files](#) that belongs to well Well.

Table 7.16. File naming convention for the `zonation-Status-Well.xyz` files. See Table 7.5 for explanation of zonation status codes.

File name	Zonation status
<code>zonation-failed-Well.xyz</code>	N
<code>zonation-broken-Well.xyz</code>	B & F
<code>zonation-noncorrectable-Well.xyz</code>	X
<code>zonation-undefined-Well.xyz</code>	U

7.11.9 Files in the `zonation-points/` directory

Zonation points selected from `LAS 2.0 well` or `ROXAR RMS WELL` files are chosen at approximately twice the lateral grid spacing.

The `zonationpoints.dat` file contains all zonation points along all wells. The file is an ASCII file with x-coordinate, y-coordinate, TVD and the zone code for each zonation point.

The `zonationpoints-Well.rxat` file contains information about zonation points in Well when surfaces have been conditioned to well points only and *not* to surface constraints at the selected zonation points. The files use the `ROXAR ATTRIBUTES TEXT`. The available attributes are listed in Table 7.12.

Well path points where the zone log is inconsistent with the calculated surfaces are written to a set of `xyz-files`. These files are only written if `<write-xyz-point-files>` is set to yes. These files are named `zonation-Status-Well.xyz` where Status is replaced by zonation status type and Well is replaced by well names. The status types are explained in Table 7.5 and the file naming conventions are shown in Table 7.16.

The zonation is *non-correctable* if the zonation points are inside a very thin zone or if the surface must be moved more than 3.09 SDs. (See `<t-value-error>`.)

The *failed* and *broken* zonation refers to zonation points where COHIBA is unable to get the zonation correct. Broken zonation means that the zonation at this well point was correct when surfaces were conditioned to well points alone.

The `zonationpoints-special.xyz` file contains the zonation points at the branching points and the zonation points at the edges of zonation. The edges are where zone log values changes from defined to undefined or at the endpoint of wells. See Section 8.4.1 for some illustrations. This is an `xyz-file`. This file is only written if `<write-xyz-point-files>` is set to yes.

8 Well data

There are two main types of well data used by COHIBA: *Well points* and *well paths with zone logs*. Well points¹ are the intersections between a well path and a surface. A surface in the stratigraphic framework is a zone transition². The zone logs are a representation of the zonation along the well path.

The preferred approach is to use well paths with zone logs. COHIBA analyzes the zone logs and records relevant zone transitions along the well paths as well points. COHIBA will then condition the surfaces on the detected well points *and* ensure that all surfaces are located correctly according to the zonation along the well paths³. Using only well points is possible but the extra information provided by the well paths and zone logs is often of great importance.

The specification of `<well-data>` is done in `<wells>` for well paths with zone logs and in `<well-points>` for well points. It is possible to use multiple well data files with different content⁴. The file formats used for importing well data are described in [Section 6.3](#).

It is possible to specify *dip data* at well points ([Section 8.6](#)) and it is possible to specify *distance data* along well paths ([Section 8.5](#)).

8.1 Using well path with zone logs

well paths with zone logs are imported by using [ROXAR RMS WELL](#) or [LAS 2.0 well](#) files. The files are specified in `<files>` in `<wells>`.

There is no generic relationship between the surfaces in the COHIBA model and the zones in the zone log. The link between surfaces and zones are made by specifying which zone a surface is directly on top of using the `<top-of-zone>` element. Non-unique zone names are discussed in [Section 8.3.5](#).

The well path with zone log files can contain a series of different logs so the particular zone log we want to use must be chosen using `<zone-log-name>`. Zone logs are numbers (non-negative integers) that must be linked to zone names. For [ROXAR RMS WELL](#) files these numbers are linked to zone names in the file header:

```
GM2005a DISC 1 ABOVE 2 DRAUPNE 3 6BC 4 6AC 5 6AM 6 5CC 7 5CM 8 5BC
```

Here GM2005a is the zone log name, DISC specifies that the log is discrete, and the rest is the list of zone numbers and their associated zone names. The zone numbers must constitute a sequence of non-negative integers that increase by one.

The [LAS 2.0 well](#) format does not include the zone names in the header so this must be supplied using `<zone-log-specification>`. This specification is very similar to the header in the [ROXAR RMS WELL](#) files but it allows more general zone names.

Note that the zone name specification must be identical for all zone logs. Files with different zone name specification will be discarded. Also note that well names must be unique. An error is reported if there are multiple files with identical well names. This is to avoid reading the same data repeatedly.

-
1. Well points are sometimes called well picks or well markers.
 2. COHIBA supports `<free-surface>`s that are not zone transition.
 3. Unless `<condition-to-well-paths>` has been set to no.
 4. Repeated observations are detected, reported and removed from calculations.

8.1.1 Using fault indicator logs

COHIBA can not distinguish between a zone transition at a surface or a zone transition at a fault. In both cases, the transition will be interpreted as a zone top. This is not correct if the transition is at a fault.

To avoid this situation, we can add *fault indicator logs* to the existing well logs. These logs are discrete and consist of 0's and 1's. A 1 means that we are close to a fault and that COHIBA should ignore zone transitions.

The fault indicator log is properly specified in the header of the [ROXAR RMS WELL](#) file as

```
FaultIndicator DISC 0 no 1 yes
```

where the structure is fixed except the label `FaultIndicator`. The fault indicator logs are specified using the `<fault-log-name>` in the `<wells>` element.

8.2 Close well points

If two or more well points are close they are likely to either carry *redundant* or *conflicting* information. In both cases COHIBA has to modify the well points to avoid numerical instabilities. Depending on the situation, COHIBA will either delete well points or add uncertainties to well points.

Two well points are considered laterally close if their separation in the x- and y-directions are smaller than the corresponding grid cell sizes. Since this measure is linked to the grid resolution, fewer points will be considered close as the resolution increases. For two well points to be considered *close* they must also be close vertically, and the action taken depends on whether the well points belong to the *same* or *different* surfaces.

8.2.1 Identical well points

COHIBA looks for *identical* well points at two different stages in the calculation: When well points and well logs are read from file, and when well points are checked for internal consistency.

1. Upon reading well point files and well log files, identical well points are identified and one is removed. At this stage, well points are regarded as identical if they belong to the same well and same surface, and if their lateral and vertical coordinates are within one centimeter. Such duplicates are typically encountered because a well point file contains repeated information, or because both well point files and well logs are used as input.
2. When well points are checked for internal consistency, COHIBA looks for points that, for all practical purposes, are the same surface observation. In this case, well points are treated as identical if their lateral distance is less than 5.0 meters, and their vertical distance is less than 0.5 meters. The points may belong to different wells. Only one point is used for calculations, but the other point is later reintroduced for logging/visualization purposes and given the same attributes as the point that was kept. The threshold for being considered identical can be controlled by keywords `<max-dxy-for-identical-well-points>` and `<max-dz-for-identical-well-points>`.

If both well points are taken from zone logs or both well points are taken from well points files ([Section 6.3.2](#)) COHIBA keep the well point with the lowest specified TVD pick uncertainty. If one well point is from well points file and one well point is from a zone log, the well point from the well points file is kept. Well points files can therefore be used to specify the TVD pick uncertainty of well points extracted from a zone log.

8.2.2 Close well points belonging to different surfaces — pinch outs

If two or more well points belong to different surfaces, they are considered close if they are laterally close and their TVD difference is smaller than one centimeter.

This situation creates a *pinch out*. When pinch outs are encountered, the correlation between all pairs of points are calculated, and if the correlation is larger than 0.999, only the uppermost point is retained.

Well points that are part of a pinch out are flagged by a P in the PinchOut column of the `wellpoints.csv` file. If the point has been deleted the P is given in the Deleted column instead.

8.2.3 Close well points belonging to the same surface

If two or more well points belong to the same surface, they are considered close if they are laterally close. They are considered *similar* if the slope between them are less than 10 %, that is, $\Delta z / \Delta xy < 0.1$. They are considered *potentially conflicting* if the slope is larger than 10 %. When two well points are involved in a potential conflict, these points, their lateral and vertical distance as well as their intermediate slope are written to the COHIBA log file, provided the log level is sufficiently high. A well point involved in a potential conflict is also indicated by a C in the Conflict column of the `wellpoints.csv` file.

To ensure numerical stability and to reflect the actual uncertainty, close well points are assigned a TVD pick uncertainty (SD) given by:

$$(8.1) \quad \sigma_z = \frac{1}{\sqrt{2}} |\Delta z|.$$

If one or both of the well points already have higher TVD pick uncertainties, no action is taken. Well points with increased TVD pick uncertainties are flagged by a U in the AddUncert column of the `wellpoints.csv` file.

8.2.4 Well points giving model error

If a residual uncertainty is set too low, a diagonal element of the kriging matrix may become small and lead to numerical instabilities. When this happens, COHIBA deletes the well point and reports this by giving an E in the Deleted column of the `wellpoints.csv` file.

This error is avoided by ensuring that the residual uncertainty is larger than zero.

8.2.5 Well points in undefined areas

Well points become redundant if at least one of the input surfaces (usually a time surface) has an undefined value in one of the four grid nodes around the observation. In such cases the well point is removed. To avoid this, the surface with undefined values should be interpolated or extrapolated in this area.

Well points removed because of undefined values are flagged by S in the Deleted column of the `wellpoints.csv` file.

The region outside the output grid is also treated as undefined. In this case the well point is flagged by a B.

8.3 Extracting well points from zone logs

Consider the 5 zones: Overburden, A, B, C, D, and refer to the surfaces (transition between zones) as TA, TB, TC, and TD. See Figure 8.1.

8.3.1 Simple zonation

If all zones have thicknesses larger than zero, it is straight forward to extract surfaces from zone transitions. The well passing through Figure 8.1 makes the zone transitions Overburden→A, A→B, B→C, and C→D, and the corresponding well points belongs to surfaces TA, TB, TC, and TD. The

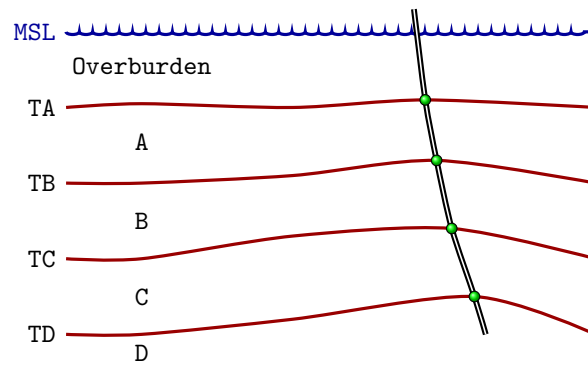


Figure 8.1. Transitions between a simple set of zones. The well points are given as green bullets.

direction of the transition is irrelevant for the assignment of surfaces. The transition $A \rightarrow B$ and $B \rightarrow A$ are both observations of surface TB.

The zone log values are typically defined at one feet intervals. COHIBA will extract a well point in the middle between the two log values at the transition. Also COHIBA will use a TVD pick uncertainty that is $1/4$ the vertical difference between the two TVD values at the transition.

8.3.2 Zones with pinch outs

If a zone has zero thickness in some area, it is said to have a *pinch out*. When a zone transition is made in a pinch out, two surfaces are observed.

In Figure 8.2, we have depicted a well crossing a set of zones where zone B has zero thickness in an area. The three zone transitions reported in the zone log are $above \rightarrow A$, $A \rightarrow C$, and $C \rightarrow D$. While the former and latter of these transitions refer to surfaces TA and TD respectively, the middle transition is really the joint transition $A \rightarrow B \rightarrow C$, and is consequently an observation of the two surfaces TB and TC.

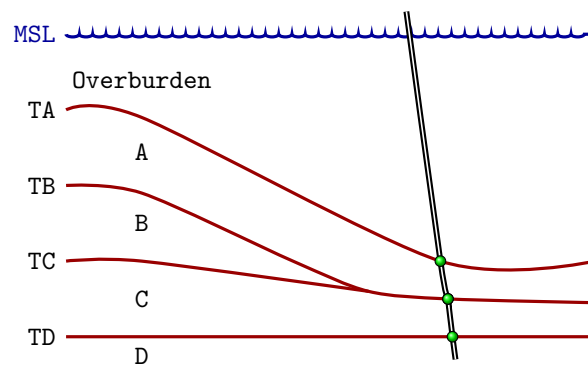


Figure 8.2. Zones with pinch out. The well points are given as green bullets.

A total of 12 different zone transitions may be observed between 5 zones. These are summarized in Table 8.1. Note that the table is symmetric in the "From" and "To" zones.

A well passing through a pinch out is a challenge as two well points get exactly the same coordinates. This may lead to numerical instabilities, requiring one of the observations to be removed. COHIBA is implemented to allow observations of different surfaces to coincide.

Table 8.1. Surfaces observed for different zone transitions.

From	To			
	A	B	C	D
A	—	TB	TB, TC	TB, TC, TD
B	TB	—	TC	TC, TD
C	TB, TC	TC	—	TD
D	TB, TC, TD	TC, TD	TD	—

Table 8.2. Surfaces observed for different zone transitions if surface TB is erosive.

From	To			
	A	B	C	D
A	—	TB	TB	TB
B	TB	—	TC	TC, TD
C	TB	TC	—	TD
D	TB	TC, TD	TD	—

8.3.3 Erosive and onlapped surfaces

If we encounter a zone transition of type $A \rightarrow C$, it is not always true that this transition may be interpreted as the transition $A \rightarrow B \rightarrow C$. For this relation to hold, surface TB cannot be erosive. If TB is erosive, the transition $A \rightarrow C$ will be an observation of TB alone and *not* TB and TC.

A similar situation occur when there is a surface with onlapping zones/surfaces. This surface is called *onlapped*. The situation is almost identical to the situation with erosion except that erosive surfaces truncate surfaces below whereas onlapped surfaces truncate surfaces above. Note that a surface can be both erosive and onlapped.

In [Figure 8.3](#), we have illustrated a set of zones where the surface TB is erosive. The zone transitions observed in the well, are $\text{above} \rightarrow A$, $A \rightarrow B$, $B \rightarrow C$, and $C \rightarrow A$. As argued above and illustrated in the figure, the latter of these transitions is an observation of surface TB only. Note how the erosiveness of surface TB, implies that one or more zones may be completely undefined (as opposed to being defined but with zero thickness).

[Figure 8.4](#) illustrates the concept of an onlapped surface. Surface TD is onlapped by zones A, B, and C. As the onlapped surface truncate from below, the zone transition $B \rightarrow D$ becomes an observation of surface TD only.

In [Table 8.2](#), we have summarized the different zone transitions that may be encountered with zones A, B, C, and D, where surface TB is erosive, and listed what surface-observation each transition corresponds to. The difference between this table and [Table 8.1](#) is that, in all zone transitions involving zone A, only surface TB is observed. This is a result of the erosion. The symmetry in the “From” and “To” zones is maintained, however.

Whether a surface is erosive and/or onlapped or neither of these, is specified by the elements `<erosive>` and `<onlapped>`. When two or more surfaces are erosive, the upper surfaces erode the lower. In COHIBA, an erosive surface will erode an onlapped surface.

8.3.4 Faults

A transition between zones can be caused by a fault rather than a surface. This situation is illustrated in [Figure 8.5](#).

Interpreting a zone transition caused by a fault as a well point could give corrupt results. The well shown in the figure enters from zone A into zone B via the fault. This zone transition is not

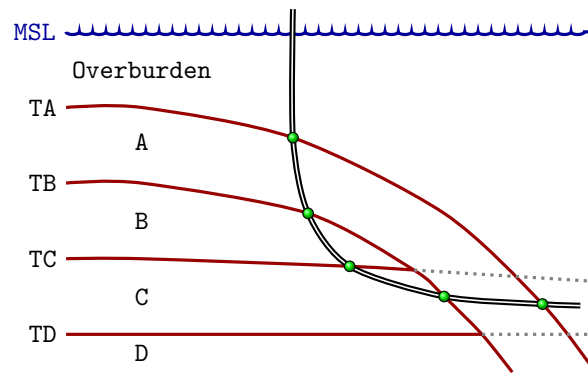


Figure 8.3. Zones where surface TB is erosive. The well points are given as green bullets.

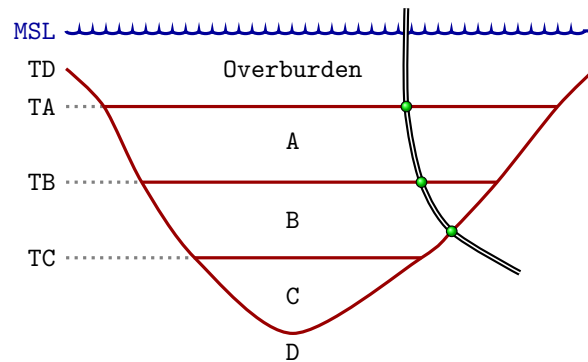


Figure 8.4. Zones where surface TD is onlapped. The well points are given as green bullets.

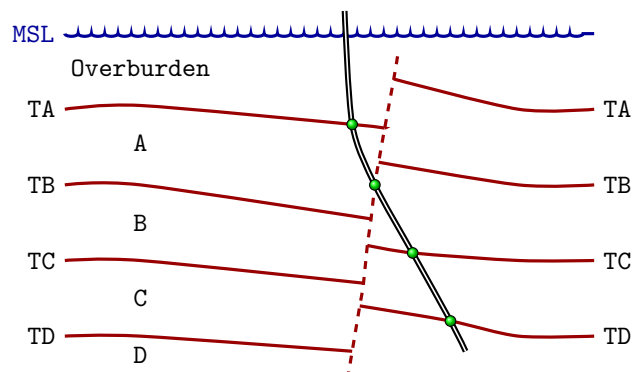


Figure 8.5. A set of faulted zones. The well points are given as green bullets.

an observation of TB.

It is impossible to distinguish a transition caused by a fault from an ordinary transition using a zone log alone. Therefore, some extra information must be supplied. This can be done by supplying *ignore points* using the element `<well-points-to-ignore>`. These are well points that should be excluded if found in the zone logs. An alternative is to specify a fault indicator log using the element `<fault-log-name>` in the element `<wells>`.

8.3.5 Non-unique zone names

A zone log must be expected to contain more zones than those included in the [COHIBA model file](#). [Figure 8.6](#) illustrates a situation with nine zones and surfaces, but only four of these surfaces are

of interest; the red surfaces labeled TA, TB, TC, and TD.

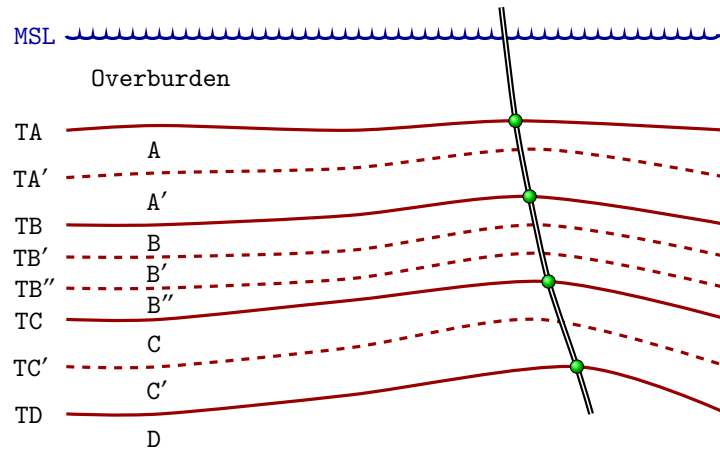


Figure 8.6. A simple set of zones with a zonation finer than the surface model. The well points are given as green bullets.

To be able to extract the well points for these surfaces COHIBA needs to know the sequence of the surfaces and the name of the zones that are directly below the surface. The [COHIBA model file](#) specification use `<top-of-zone>` to associate a surface name as the top of the zones. The situation in [Figure 8.6](#) could be specified as:

```
<surface>
  <name>      TA      </name>
  <top-of-zone> A, A'  </top-of-zone>
  ...
</surface>
<surface>
  <name>      TB      </name>
  <top-of-zone> B, B', B'' </top-of-zone>
  ...
</surface>
<surface>
  <name>      TC      </name>
  <top-of-zone> C, C'  </top-of-zone>
  ...
</surface>
<surface>
  <name>      TD      </name>
  <top-of-zone> D      </top-of-zone>
  ...
</surface>
```

It is sufficient to specify only the first zone since we require that zone numbers increase with increasing depth. So it is equivalent and simpler to write:

```
<surface>
  <name>      TA </name>
  <top-of-zone> A </top-of-zone>
  ...
</surface>
<surface>
  <name>      TB </name>
```



```

    <top-of-zone> B </top-of-zone>
    ...
</surface>
<surface>
    <name> TC </name>
    <top-of-zone> C </top-of-zone>
    ...
</surface>
<surface>
    <name> TD </name>
    <top-of-zone> D </top-of-zone>
    ...
</surface>

```

This alternative is better since it reduces the risk of introducing errors like typing errors or zonation errors. It requires that zone names are listed in the well-header in the correct depth order. By correct depth order we mean a consecutive increasing sequence of non-negative integers.

Example: Valid zone log:

```
LOGNAME DISC 1 ABOVE 2 A 3 B 4 C 5 D
```

Example: Valid zone log:

```
LOGNAME DISC 1 ABOVE 2 A 3 A' 4 B 5 B' 6 B'' 7 C 8 C' 9 D
```

Example: Valid zone log:

```
LOGNAME DISC 10 ABOVE 11 A 12 A' 13 B 14 B' 15 B" 16 C 17 C' 18 D
```

Example: Invalid zone log:

```
LOGNAME DISC 9 ABOVE 11 A 12 A' 13 B 14 B' 15 B" 16 C 17 C' 18 D
```

(The number 10 is missing.)

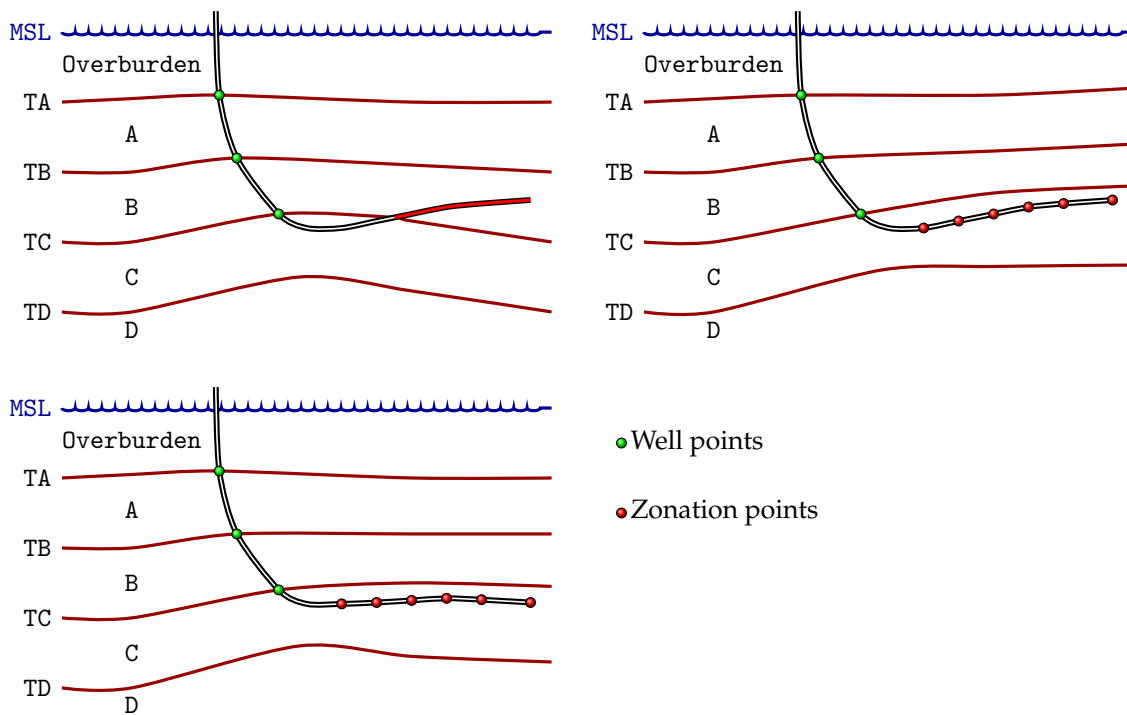


Figure 8.7. In the top left figure a part of the well (colored red) have ended up in the wrong zone. In the top right figure, the surfaces have been modified using surface constraints at selected zonation points along the well. In the lower figure the surfaces *and* the well path have been modified to obtain consistent results. Modifying the well path is possible if a well path TVD uncertainty is specified and `<allow-wells-to-move>` is set to yes.

8.4 Horizontal wells

In parts of a well where the well runs parallel to a surface, the well points alone are not enough to guarantee that surfaces are consistent with the zone logs. This is illustrated in the left part of [Figure 8.7](#), where the well is colored red in the region with incorrect zonation.

To avoid that surfaces cross well paths at incorrect locations, COHIBA makes a series of *zonation points* along the well paths and impose surface constraints at selected zonation points when necessary. In the right part of [Figure 8.7](#), six zonation points have been introduced. Surface constraints at selected zonation points force the surface TC to lie above the well path in accordance with the zone log. The surface constraints do not state explicitly where the surface TC is located, they only force TC to stay above the well. Also note that the other surfaces will also be influenced by the constraints imposed on TC. The bottom figure COHIBA have modified the surfaces *and* the well path. This is possible if there is specified a well path TVD uncertainty and wells are allowed to move (see [Section 8.4.2](#)).

COHIBA handles surface constraints from zone logs according to the method developed in [Abrahamsen and Benth \(2001\)](#). Without going into details, the approach boils down to finding some additional surface help points used in the kriging equations. The additional surface help points are chosen so that surfaces are consistent with trends, residuals, well points and surface constraints at selected zonation points. For details see [Section 23](#).

8.4.1 Undefined sections in the zone log

Many zone logs have sections that contain missing codes. This is usually the situation in the upper part of the well path. This is illustrated in [Figure 8.8](#). It is also common that there are sections with undefined zonation in the middle of wells. This is illustrated in [Figure 8.9](#). COHIBA

will add zonation points at the edges of the undefined sections. This includes the endpoints of wells when the zonation extends to the end. This will introduce surface constraints at the edges if these zonation points are among the selected zonation points. See [Section 23](#) for more details on how the zonation points are used to ensure consistency between zone logs and surfaces.

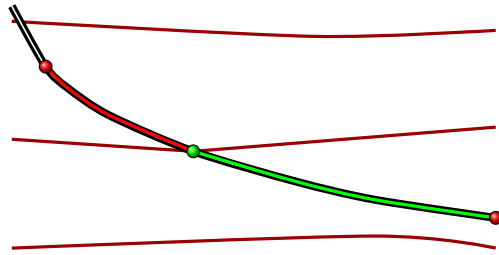


Figure 8.8. Cross section of three surfaces along a well path. A well point is marked by a green dot. Zonation points (red dots) are added at the end of sections with defined zonation. These zonation points may impose necessary surface constraints.

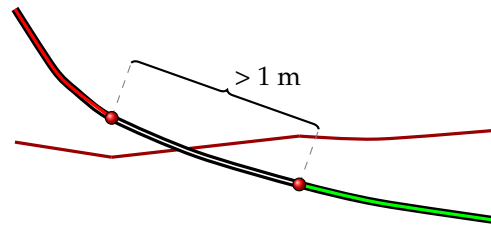


Figure 8.9. Cross section of one surface along a well path. Zonation points (red dots) are added at the edges of the undefined zone log section if the undefined section is long ($\Delta MD > 1$ meter). These zonation points may impose necessary surface constraints.

COHIBA will handle a *short* undefined section as an ordinary zone log transition. That is, the zone log transition introduces a well point. Since the vertical gap could be slightly larger than normal zone log transition, the added well point TVD pick uncertainty⁵ is usually larger. This is illustrated in [Figure 8.10](#). The reason for replacing two close constraints by a single well point is to make calculations simpler and faster.

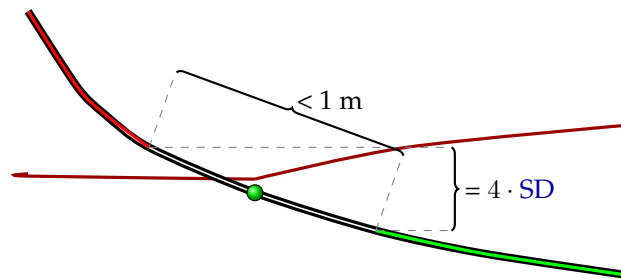



Figure 8.10. Cross section of one surface along a well path. A short ($\Delta MD \leq 1$ meter) undefined zone log section is replaced by a well point (green dot) at the center with TVD pick uncertainty (SD) equal to $\frac{1}{4} \Delta TVD$.

COHIBA considers an undefined section as short if the distance (MD) between the endpoints of the undefined section is less than one meter (default). This distance can be changed using the element `<threshold-for-removing-undefined-well-sections>`. 

8.4.2 Well path TVD uncertainty

COHIBA will take into consideration the well path TVD uncertainty if `<allow-wells-to-move>` is set to yes (default is no). Then, COHIBA will predict well path TVD values that are consistent with predicted surfaces. The predicted well path TVD values are calculated using kriging in the same way COHIBA predict surfaces. The prediction of TVD values along the well path depend on the specified well path TVD uncertainty and the uncertainty of the surfaces constrained by the well path. This is illustrated in [Figure 8.7](#). An example demonstrating the effect of well path TVD uncertainty on distance data is found in [Figure 8.12](#).

5. The SD is $1/4$ times the vertical gap (ΔTVD).

The predicted well path TVD values are exported to well log files in `well-logs/` together with logs for the well path TVD prediction uncertainty. See [Section 7.6](#) for more details.

The well path TVD uncertainty is specified using `<wellpath-TVD-SD-log-name>`. This TVD uncertainty log must contain positive values and should be monotonically and smoothly increasing along the well paths. Well path TVD uncertainty logs that belong to different branches in the same multilateral well should have the same values along the common sections. COHIBA makes a number of QC checks on the well path TVD uncertainty logs and give warnings if unreasonable or inconsistent values are detected.

The well path TVD uncertainties must be smooth since the drill pipe is rigid. Moreover, the uncertainty must increase along the well path since the survey uncertainties accumulate for geomagnetic and inclination tools⁶ along the well path. So the true well path has a tendency to drift away from the measured well path. [Figure 8.11](#) illustrates this behavior. The smoothness is determined by `<wellpath-TVD-SD-range>` that has the default value of 300 meters.

Spatial smoothness and accumulation of survey uncertainty is modeled using a continuous stochastic process known as the *integrated Ornstein-Uhlenbeck process* ([Barndorff-Nielsen, 1997](#)). This is a Gaussian process so the well path TVD uncertainty has a Gaussian distribution at any point along the well path. Stochastic realizations from the integrated Ornstein-Uhlenbeck process are continuous and smooth (differentiable). There is no direct way of measuring the smoothness since there is no way to observe the difference between the true well path and the measured well path. The default choice of 300 meters for `<wellpath-TVD-SD-range>` has been chosen because it gives reasonable results.

If `<allow-wells-to-move>` is yes and `<wellpath-TVD-SD-log-name>` is not used, a parametric well path TVD uncertainty log is used. The increase in the well path TVD uncertainty can be modified by `<wellpath-TVD-SD-increase-rate>`. The default value is 0.002 which corresponds to two meters for every 1000 meters of lateral distance along the well.

See [Section 23.2](#) for some theoretical details on the integrated Ornstein-Uhlenbeck process.

6. See for instance the [Industry Steering Committee on Wellbore Survey Accuracy](#) (ISCWSA).

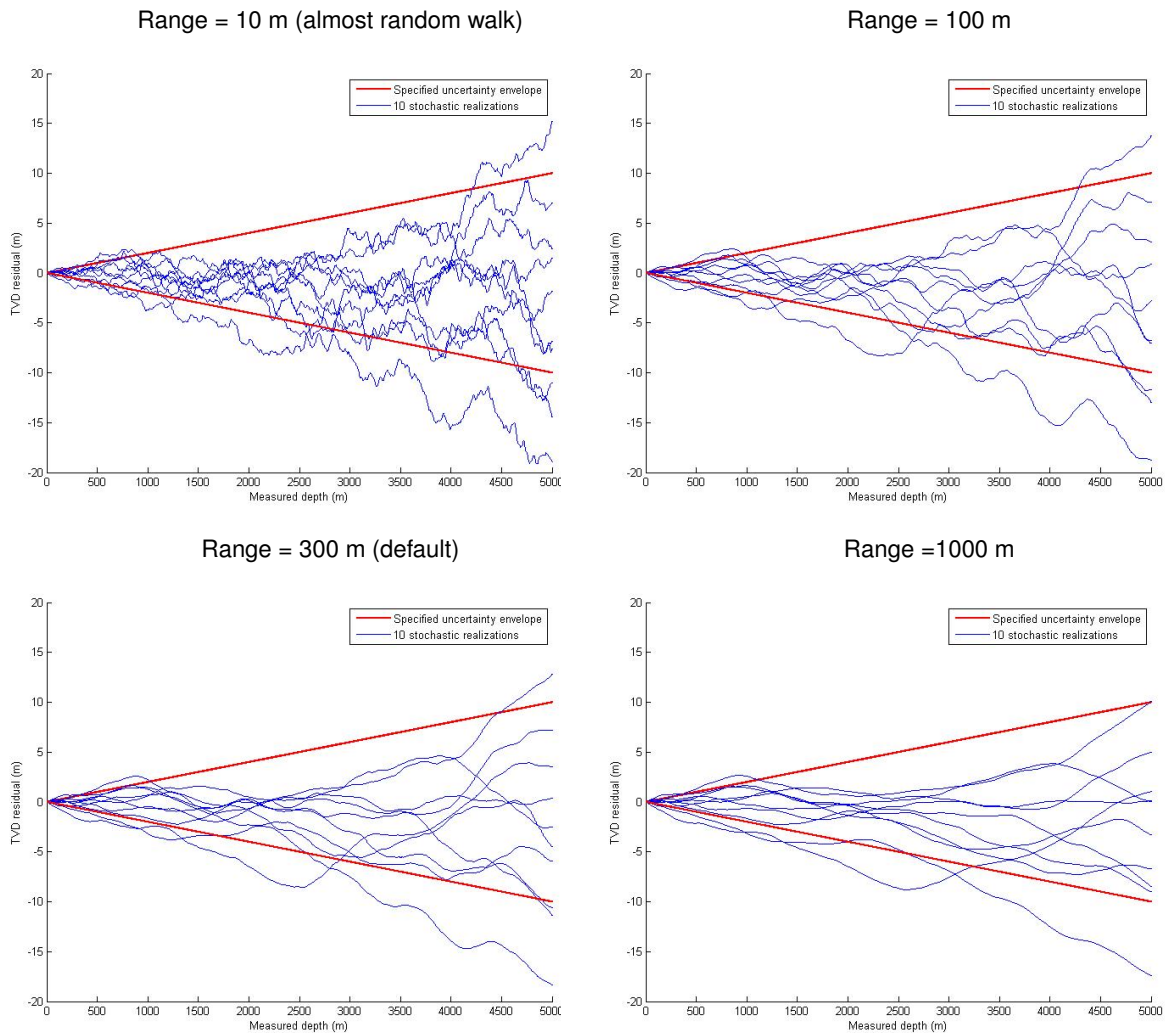


Figure 8.11. Well path TVD uncertainty as a function of MD. The red lines are the TVD uncertainty envelope ($\pm 2SD$) specified by `<wellpath-TVD-SD-log-name>`. The blue lines are simulated realizations of possible TVD residuals, that is, the difference between the true TVD and the measured TVD. The simulated realizations follow the probability distribution of the integrated Ornstein-Uhlenbeck process. The same random seeds have been used in the four different figures so similar curves with varying smoothness can be recognized in the different figures. The smoothness is specified by `<wellpath-TVD-SD-range>`.

8.5 Distance data

NEW in 7.0

COHIBA can condition on the distance from a well path to a particular surface. Such data are usually collected from [DDR](#) tools. The distance data are seldom accurate so COHIBA offer the possibility to have a vertical uncertainty on the distance. It is possible to set a global [<min-uncertainty>](#) on all distance data.

If [<allow-wells-to-move>](#) is yes a possible well path uncertainty will adapt both surfaces and well paths to the distance data.

The use of distance data is activated by importing well point files that contain distance data. These files are specified in [<files>](#) in [<distance-points>](#). COHIBA supports two well point file formats: [ROXAR ATTRIBUTES TEXT](#) and the [PETREL POINT WELL DATA](#). The file format is detected automatically.

The distance data must belong to wells with properly defined well paths so it is sufficient to specify [MD](#) and omit the [x-](#), [y-](#), and [TVD](#)-coordinates. The [PETREL POINT WELL DATA](#) format supports omitting the coordinates whereas [ROXAR ATTRIBUTES TEXT](#) will accept missing codes replacing the coordinate values.

Here is an example of an [ROXAR ATTRIBUTES TEXT](#) file containing distance points:

```
String Contrast surface
String Well
Float Distance to contrast
Float Distance to contrast uncertainty
448550.00 6737000.00 1020.0 "B" "w3" 8.00 0.0
448600.00 6737000.00 1020.0 "B" "w3" 7.00 0.0
448650.00 6737000.00 1020.0 "B" "w3" 7.50 0.0
448650.00 6737000.00 1020.0 "C" "w3" -10.50 2.0
448700.00 6737000.00 1020.0 "B" "w3" 7.50 1.0
448700.00 6737000.00 1020.0 "C" "w3" -10.00 2.0
448750.00 6737000.00 1020.0 "C" "w3" -7.00 1.0
```

The corresponding [PETREL POINT WELL DATA](#) file looks like:

```
VERSION 1
BEGIN HEADER
x
y
z
Contrast surface
Well
Distance to contrast
Distance to contrast uncertainty
END HEADER
448550.00 6737000.00 1020.0 "B" "w3" 8.00 0.0
448600.00 6737000.00 1020.0 "B" "w3" 7.00 0.0
448650.00 6737000.00 1020.0 "B" "w3" 7.50 0.0
448650.00 6737000.00 1020.0 "C" "w3" -10.50 2.0
448700.00 6737000.00 1020.0 "B" "w3" 7.50 1.0
448700.00 6737000.00 1020.0 "C" "w3" -10.00 2.0
448750.00 6737000.00 1020.0 "C" "w3" -7.00 1.0
```

The sign convention is that positive distances means that the surface is above the well path and negative distances that the surface is below the well path.

COHIBA offer an option for thinning distance data. This is controlled by `<sampling-type>`, `<sampling-distance>`, and `<width-of-smoothing-kernel>`.

8.5.1 Example with distance data

The example is illustrated in Figure 8.12 and consist of two stratigraphic surfaces and an oil water contact (OWC). The OWC is a flat horizontal surface `<free-surface>` with practically zero uncertainty. The well path uncertainty is almost zero at the heel of the well and approximately 7 meters at the toe of the well.

The top figure shows predicted surfaces conditioned on the two well points and the constraint that the well path follows inside the green zone. Note that the prediction uncertainty increase towards right since the well path uncertainty increase towards the right.

The middle figure shows the effect of adding distance data between the well and the two surfaces. The distance data adds detail to the top surface and reduce the uncertainty slightly. Note that there is a small uncertainty in the distances so the tip of the vertical lines will rarely match the predicted surfaces exactly.

The bottom figure show the effect of detecting the distance between the well path and a *known* OWC. In this case the uncertainty in the well path is dramatically reduced and this has a profound impact on the accuracy of the predicted surfaces. The uncertainty will not drop to zero since there is a small uncertainty in the distance data.

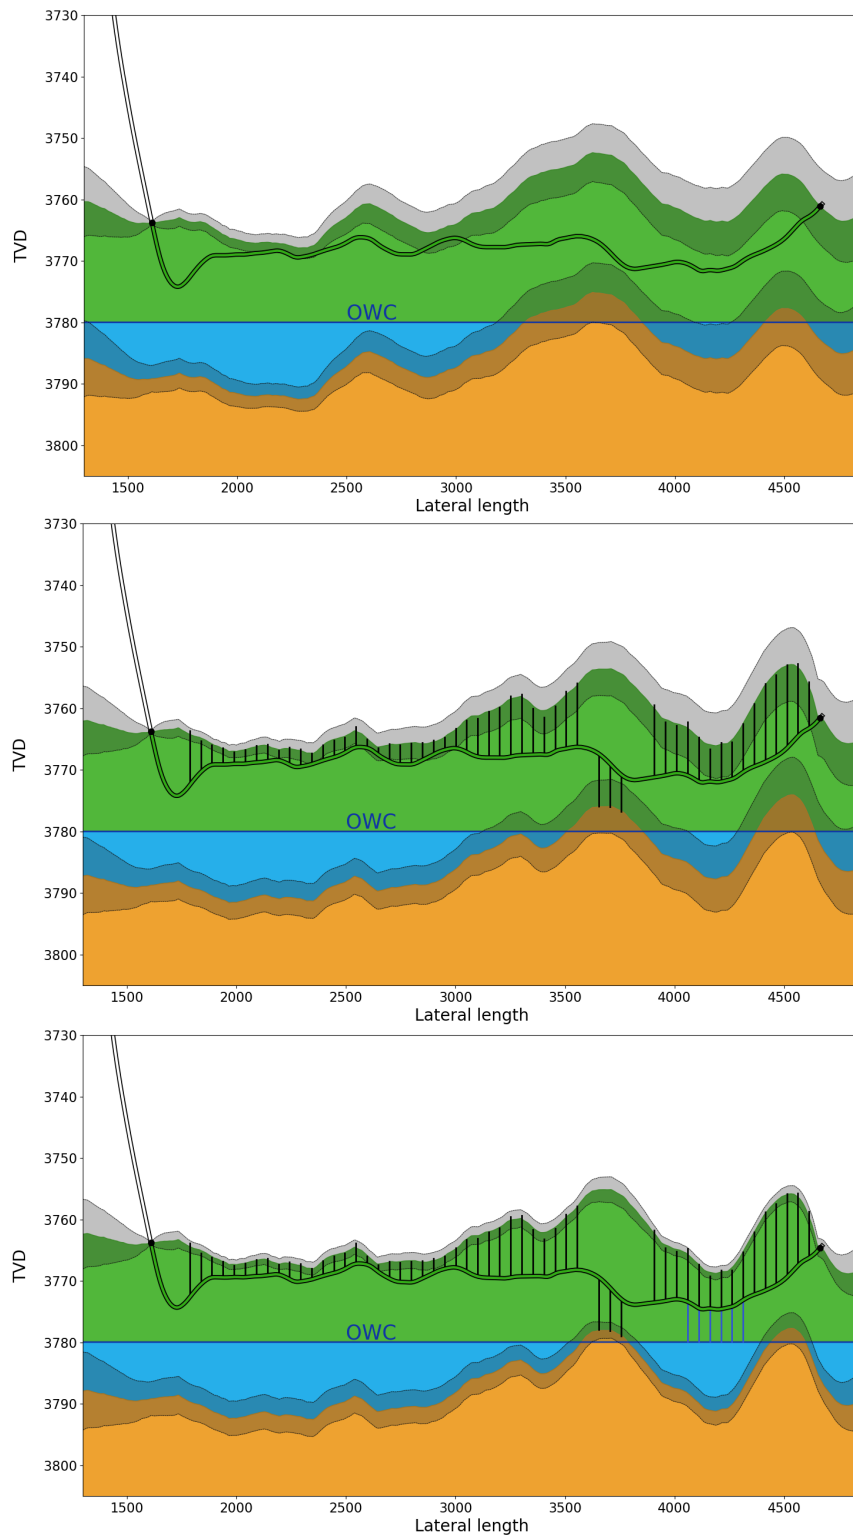


Figure 8.12. Cross section of predicted surfaces along a 3 km long horizontal well. The z-scale is almost 20. Prediction uncertainty bounds are indicated by the grayish overlay. The top figure shows the surfaces conditioned on the two well points (black discs) and the well path. Note that the error bounds increase towards right since the well path uncertainty increase from zero at the heel to 7 meters (SD) at the toe. The second figure is similar to the first but here distance data is added at the vertical lines. The distance data reveal a lot of detail and reduce the uncertainty. Note that the increasing well path uncertainty towards the toe is still significant. In the bottom figure the distance data connect the well to the OWC. This reduces the well path uncertainty near the well toe dramatically so prediction uncertainty bounds shrink significantly.

8.6 Dip data

NEW in 7.0

COHIBA offer the possibility to enforce a specified dip angle at a well point by specifying dip data in `ROXAR ATTRIBUTES TEXT` files. See Table 6.1 for details on how to specify the data. The dip data are ignored if `<condition-to-surface-dip>` is set to no.

Dip data are specified by giving the dip angle in degrees and the azimuth direction of the dip. The dip is specified in degrees where a positive number tilts the surface downwards in the direction of the azimuth. The azimuth is the angle, in degrees, relative to north in the clockwise direction.

Using dip data implies that the surface has a certain smoothness so that the derivative of the surface exist (Abrahamsen, 1997). This is not the case for most of the available variogram `<type>s`⁷ used by COHIBA. Also, conditioning on dip (or derivatives) is technically complicated so a more pragmatic and robust approach is used. The dip data is replaced by *dip points* located symmetrically around the well point as illustrated in Figure 8.13. The dip points are lying on a plane that intersect the well point at the specified dip angle. The number of dip points is specified by `<number-of-dip-points>`. They are positioned along a circle with radius⁸ given by `<dip-points-radius>`. The default is 4 dip points located 100 meters away from the well point. Using dip points will work even for surfaces that lack the smoothness necessary to condition to derivatives. Note however that dip data has little impact on erratic surfaces. This can be compensated by increasing the `<dip-points-radius>` and the `<number-of-dip-points>` but this could cause conflicts with other well data.

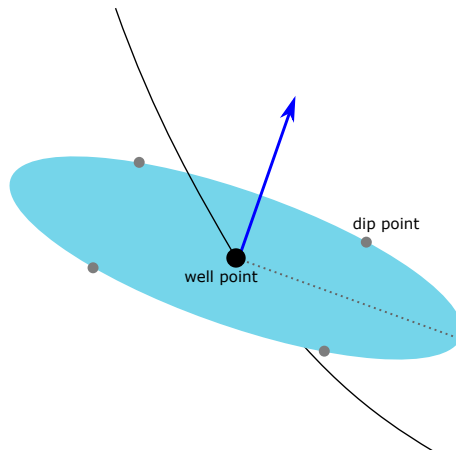


Figure 8.13. Four dip points located on a ellipsoid in the dip plane passing through the well point.

8.6.1 Dip data uncertainty

It is possible to specify the uncertainty (SD) of the dip angle in `ROXAR ATTRIBUTES TEXT` files (Table 6.1). The dip uncertainty specify a change in dip direction in *any direction* so it will also affect the azimuth. To illustrate this, consider a situation where the dip angle is 10° with azimuth to the east (90°). A 2° dip uncertainty has significant impact on the dip but little impact on the azimuth. The azimuth could be slightly modified but it will remain in the eastern direction. On the contrary, consider a situation where dip is only 1°. Now a 2° dip uncertainty could make the surface tilt in any direction so the azimuth uncertainty is almost uniform with a small preference to the specified eastern direction.

Dip uncertainty is translated into TVD uncertainty on the dip points. All dip points belonging to a well point will have the same uncertainty (SD) and they will be correlated so that they always lie on the same plane intersecting the well point. The dip uncertainty is equivalent to randomly

7. Only the gaussian, rational quadratic, damped sine and the supported Matérn variograms have this property.

8. The circle is in the horizontal plane so the radius is the *lateral* distance from the well point to the dip points. The dip points are projected vertically onto the dipping plane.

tilting the plane intersecting the well point in any direction.

COHIBA will automatically add uncertainty to dip points when they are in conflict with other well data. Also, uncertainty is added if dip data is inconsistent with trends. The latter can be turned off by setting `<add-dip-uncertainty-for-trend-conflicts>` to no. The added dip uncertainty is reported in [Section 13: Processing dip constraints](#) in the [COHIBA log file](#).

Part III

Tutorials

9 Volume calculations

COHIBA can calculate the gross rock volume of reservoirs confined between surfaces and [hydrocarbon contacts \(HCCs\)](#). Volume units are cubic meters.

Here is an example of a COHIBA model file specification for calculating the gross rock volumes between the [gas oil contact \(GOC\)](#) and the [oil water contact \(OWC\)](#) in two reservoirs called Brent Oil and Statfjord Oil:

```
<volumes>
  <volume>
    <reservoir-name>      Brent Oil          </reservoir-name>
    <top-surface>         Top Brent           </top-surface>
    <base-surface>        Base Brent           </base-surface>
    <top-contact>         GOC Brent           </top-contact>
    <base-contact>        OWC Brent           </base-contact>
    <area-file>           brent-segments.roxbin </area-file>
    <area-names>          0, Central Block,
                        2, East Block,
                        3, West Block          </area-names>
    <only-trapped-volume> yes                 </only-trapped-volume>
    <connected-volume>
      <xstart>            1234567.0          </xstart>
      <ystart>            1234567.0          </ystart>
    </connected-volume>
    <column-map>          yes                 </column-map>
  </volume>
  <volume>
    <reservoir-name>      Statfjord Oil       </reservoir-name>
    <top-surface>         Top Statfjord       </top-surface>
    <base-surface>        Base Statfjord      </base-surface>
    <top-contact>         GOC Statfjord       </top-contact>
    <base-contact>        OWC Statfjord       </base-contact>
    <area-file>           statfjord-segments.roxbin </area-file>
    <area-names>          0, Central Block,
                        1, West Block         </area-names>
    <only-trapped-volume> no                 </only-trapped-volume>
    <remove-isolated-volumes-less-than>
                        1000000
    </remove-isolated-volumes-less-than>
    <column-map>          yes                 </column-map>
  </volume>
</volumes>
```

The `<reservoir-name>` is used to identify the volume unit in output files. The surfaces are identified by their `<name>` in their `<surface>` specification. The `<top-surface>` and `<base-surface>` must belong to the stratigraphic framework of ordered surfaces and `<top-contact>` and `<base-contact>` must be free surfaces. The default for `<top-surface>` is the `<reference>` surface (mean sea level (MSL) as default). At least one of `<base-surface>` and `<base-contact>` must be

specified.

The `<area-file>`¹ is an optional grid with integers called *area numbers*. The `<area-file>` is used to separate a reservoir into different areas such as fault blocks, license units or national territories. Volumes will be calculated for every non-negative area number present in the `<area-file>`. The optional `<area-names>` is used to associate names to the areas. If this option is used only integers that are associated with area names will be included in the volume calculations.

The volumes will be reported in a comma separated file `volumes.csv` that can be analyzed by Excel or other tools. The `volumes.csv` could look like:

			Brent Oil,	Brent Oil,	Brent Oil,	Statfjord Oil,	Statfjord Oil
Realization,	seed,	Central Block,	East Block,	West Block,	Central Block,	West Block	
1,	12345,	12562962.10,	23205894.80,	23205894.03,	16562962.11,	17205894.34	
2,	12346,	9792432.52,	20201481.70,	25105251.71,	14372851.31,	17504144.28	

The first row contains `<reservoir-name>` and the second row contains `<area-names>`. There will be one row for each simulated realization. Each row contains the realization number, the random seed, and the volumes for that realization. Note that the random seed is incremented by one for each realization². The `volumes.csv` is updated for every new simulated realization so aborting the execution will not destroy the information accumulated so far.

A map of the rock column heights are calculated and saved to a grid file in `surfaces/`. A prefix, `column_`, is added to the `<reservoir-name>`. So a typical file name reads: `column_Brent Oil.roxbin`. These maps are by default written to file. The writing of these files can be turned off by `<column-map>`.

If the `<only-trapped-volume>` is put to yes, then the spill point for the `<top-surface>` must be calculated and possible volumes outside the trap will be discarded. This requires that `<xstart>` and `<ystart>` in `<spill-point>` are specified. The `<connected-volume>` element removes all volumes that are not in contact with the specified starting point, `<xstart>` and `<ystart>`. These coordinates could be the starting points, `<xstart>` and `<ystart>`, for the `<spill-point>` of `<top-surface>` or any other point known to be within the reservoir volume. The element `<remove-isolated-volumes-less-than>` does a similar job but it only removes connected volumes less than the specified threshold.

If there are different contacts in different sub-areas a separate `<volume>` specification must be made for each sub-area. The sub-area is selected by associating `<area-names>` to the area numbers in the `<area-file>` corresponding to the sub-area. Assume for instance that the Statfjord Central block has its own oil water contact:

```
<volume>
  <reservoir-name> Statfjord Central      </reservoir-name>
  <top-surface>     Top Statfjord          </top-surface>
  <base-surface>    Base Statfjord         </base-surface>
  <top-contact>     GOC Statfjord          </top-contact>
  <base-contact>    OWC Statfjord Central  </base-contact>
  <area-file>       statfjord-segments.roxbin </area-file>
  <area-names>      0, Central Block       </area-names>
</volume>
```

In this case the surface OWC Statfjord Central is used as the OWC for the Central Block (area

1. The grid definition of the `<area-file>` should coincide with the grid definition given in `<output-grid>`. Otherwise, the area file will be re-sampled onto the output grid and area numbers can be replaced by non-integer averages of the area numbers. Non-integer area numbers are ignored in the volume calculations.

2. This may look strange but two random seeds that only differ by one digit give just as different simulated realizations as any pair of random seeds.

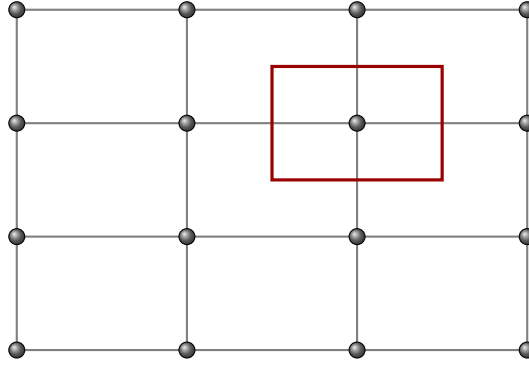


Figure 9.1. The volume within the red rectangle is assigned to the grid node in the center of the red rectangle.

number 0).

9.1 Calculating the volumes

COHIBA represents depth surfaces on regular grids where the grid nodes are assigned depth values. Calculating volumes requires that the surfaces are defined between the grid nodes. The simplest extension is to extend the grid node value to the rectangle centered at the grid node, where the rectangle side lengths are identical to the distances between grid nodes. This is illustrated in [Figure 9.1](#).

The rock column at a grid node is

$$(9.1) \quad \Delta z = \max\left(0, \min(z_{\text{base}}, z_{\text{base contact}}) - \max(z_{\text{top}}, z_{\text{top contact}})\right).$$

This is the rock column reported in the `<column-map>`. The rock volume of the column is

$$(9.2) \quad V = x_{\text{inc}} y_{\text{inc}} \Delta z,$$

where the increments are the distances between grid nodes. The total volume belonging to an area is obtained by summation of the rock volume associated to each grid node belonging to the area. This is the default algorithm for calculating volumes used by COHIBA. Note that volumes are always reported in cubic meters even though the vertical units are feet.

COHIBA also supplies a volume calculation based on bilinear interpolation of the surfaces instead of nearest neighbor interpolation. This is selected using `<volume-calculation-method>`. The two interpolation methods are compared in [Figure 20.4](#). The two methods will give slightly different volumes since the interpolation algorithms are different. The numerical accuracy for the two methods are comparable. The algorithm for bilinear interpolation use algebraic expressions for the volume based on an analytical solution of the volume integral. The rock volume assigned to a grid node is the volume of the four nearest quadrants of the adjacent cells. This is the volume in the colored rectangles seen in [Figure 20.4\(a\)](#). The rock column reported in the column map is

$$(9.3) \quad \Delta z = \frac{V}{x_{\text{inc}} y_{\text{inc}}}.$$

10 Stochastic simulation example

This section illustrates the use of stochastic simulation, rejection sampling, and volume distributions obtained from multiple realizations. The main purpose is to calculate gross rock volume and the spatial distribution of the reservoir. The uncertainty in the volume and the uncertainty in spatial extent of the reservoir is calculated and visualized.

The model consists of the top and bottom surfaces of the reservoir and a horizontal OWC. The reservoir is assumed to be a filled structure so that the OWC is at the depth of the spill point of top reservoir. The gross rock volume above the OWC is calculated. Three wells are included sequentially to mimic an early appraisal situation. Surfaces are only accepted if their spill points are consistent with well observations. A large number of simulated realizations ensures that the uncertainties in the reservoir are captured in the calculated volume distributions. The top reservoir and the three wells are shown in Figure 10.1.

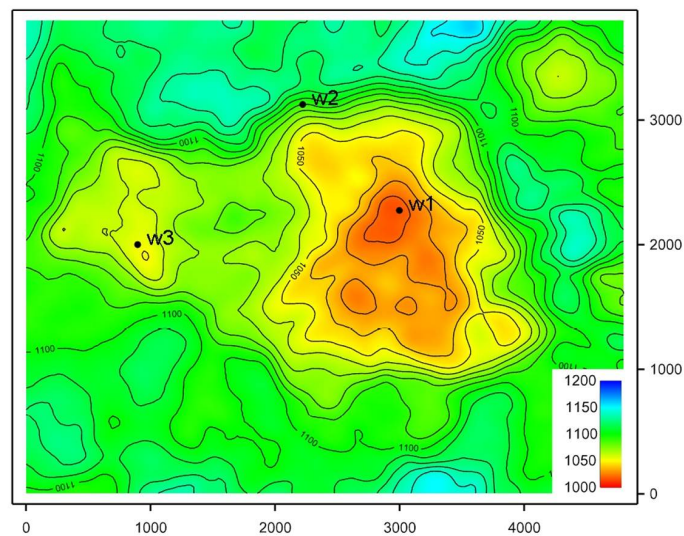


Figure 10.1. Map of top surface. The three wells are labeled w1, w2 and w3.

10.1 Acceptance criteria

The volume above the oil water contact is the volume of interest. In this example we assume that the reservoir is a filled structure so that the OWC is located at the depth of the spill point. The OWC surface is conditioned to the spill point of the top surface using `<condition-to-spill-point-at-surface>`.

By including the three wells in Figure 10.2 sequentially, three different cases are defined. In the first case only the first well, w1, is included. This well crosses the bottom of the reservoir at a depth of 1063 meters. This well does not enter the water zone so the OWC must be below 1063 meters. In this case the spill point of the top reservoir, and thereof the depth of the OWC, is only accepted if it is below 1063 meters. This is specified by `<spill-point-below>`.

In the next case the second well, w2, is included. This well is an appraisal well drilled in the north flank of the main dome. The well crosses top reservoir at 1090 meters and enters the water zone without entering the oil zone. The second case therefore includes a new requirement that the spill

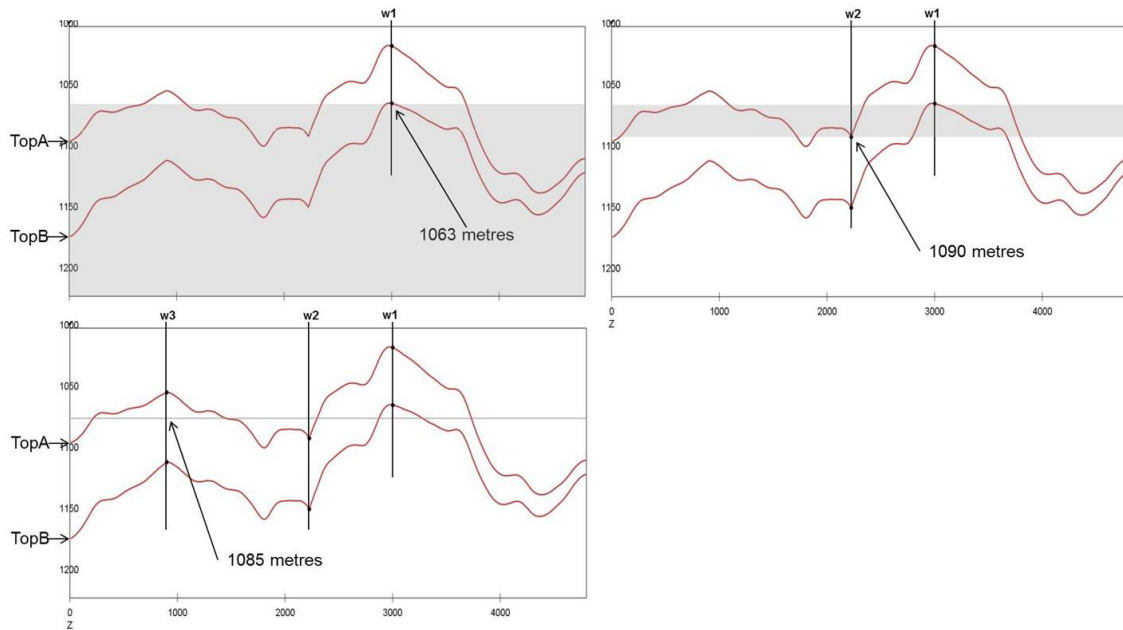


Figure 10.2. Fence diagram through the three wells. The grey areas indicate the acceptable depths for the spill points for the three cases.

point and the OWC must be above 1090 meters. This is specified using `<spill-point-above>`.

The third well, w3, is included in the final case. This well crosses the OWC at 1085 meters. The acceptance criteria in the models above can therefore be replaced by a stricter criterion which requires that the spill point must be at 1085 meters depth. This is specified by the `<spill-point-at>`. It is however too restrictive to require the spill point to be at *exactly* this depth, hence an tolerance of ± 0.5 meters is accepted. This is specified by `<spill-point-tolerance>`. The acceptance criteria for the three cases are summarized in Table 10.1 and illustrated by the fence diagrams in Figure 10.2.

Table 10.1. Acceptance criteria for the three cases.

	1 well	2 wells	3 wells
<code><spill-point-below></code> :	1063 m	1063 m	1084.5 m
<code><spill-point-above></code> :		1090 m	1085.5 m

In order for a realization to be accepted, the spill point depth must be within the specified acceptance criteria. If the spill point is not accepted, new samples are drawn until it is; hence giving one realization. The number of iterations is however limited by the `<max-rejection-rate>`. See Section 21.4 for details of rejection sampling.

The reservoir volume is calculated between top surface and base surface, and above the OWC. These three surfaces are specified using `<top-surface>`, `<base-surface>` and `<base-contact>`. See Section 9 for details regarding volume calculation. The volume in each realization is dependent on the simulated surfaces and the depth of the spill point.

In each of the three cases, 1000 realizations have been generated. The number of realizations is specified using `<number-of-realizations>`. Average and empirical standard deviation (SD) surfaces from all realizations are written to file.

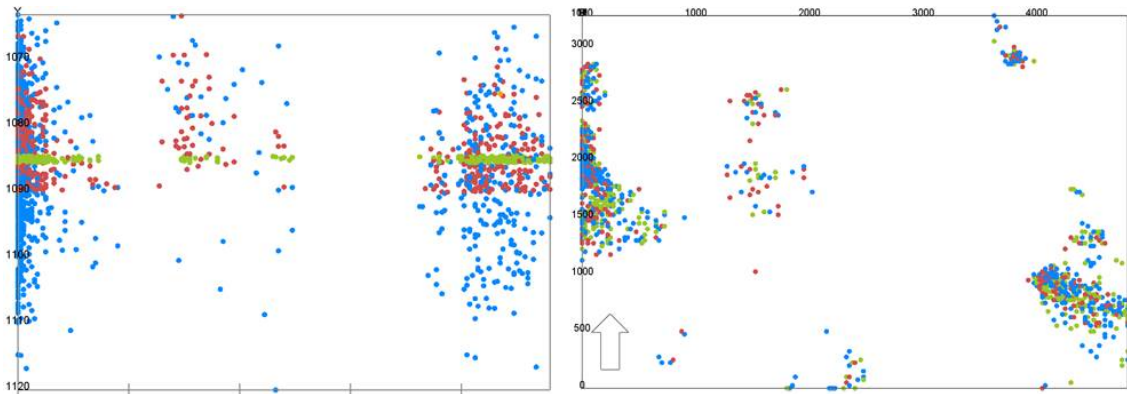


Figure 10.3. Spill points from 1000 realizations with 1, 2, and 3 wells. Left figure is a vertical cross section along the x-direction. The right figure is a top view. Blue spill points are constrained by 1 well, red spill points are constrained by 2 wells, and the green spill points are constrained by 3 wells.

Through this example the results from the stochastic simulations are compared to predictions (best estimate) results. Predictions of the surfaces are made using prediction `<mode>`.

10.2 Results

The rejection rates from the simulations are given in Table 10.2. The acceptance criteria for the case with all three wells are very strict, hence giving a rejection rate of 95 %. The number of samples to be drawn to get 1000 realizations is thus very high, which required a high `<max-rejection-rate>`.

Table 10.2. Rejection rate, average spill point depths and average gross rock volumes based on 1000 simulated realizations. The uncertainties are SDs.

	Rejection rate	Average spill point depth (m)	Average volume (10^6 m^3)
1 well:	2 %	1086.7 ± 10.4	183.4 ± 32.4
2 wells:	54 %	1083.6 ± 4.8	163.9 ± 25.4
3 wells:	95 %	1085.0 ± 0.3	162.6 ± 15.4

The spill points from all realizations are shown in Figure 10.3. From the right figure it can be seen that the most probable locations for spill are at the west and south-east in the map. The acceptance criteria has not affected the location of the spill points in the x-y plane, as spill points from all three cases seem to be represented in all clusters. The left figure shows that the depth of the spill points are according to the acceptance criteria. The figure shows very clearly how the acceptance criteria is stricter in the model with 2 wells than with 1 well, and that only depths within an interval of a meter are accepted for the model with 3 wells.

The OWC is set to the spill point depth in each realization. The depth of the OWC will affect the volume in the reservoir, as the volume is only calculated above this contact. In addition, the uncertainties in the simulated surfaces will affect the volume. The calculated volumes from all three cases are summarized in Figure 10.4 and Figure 10.5. Figure 10.4 shows histogram of volume in bins of 8 million cubic meters in addition to cumulative distributions. In Figure 10.5 the minimum, maximum and mean plus/minus one SD is illustrated in a bar plot. The figures show that the spread in volumes decreases as the acceptance criteria gets stricter and the number of wells in the model increases. The average volume is higher in the model with 1 well since there is no lower bound on the spill point and OWC. The average volumes of the models with 2 and 3 wells are in the same order, however the spread is less in the latter, which can be seen by the steeper cumulative curve in Figure 10.4. The SD is also decreasing with stricter acceptance criteria

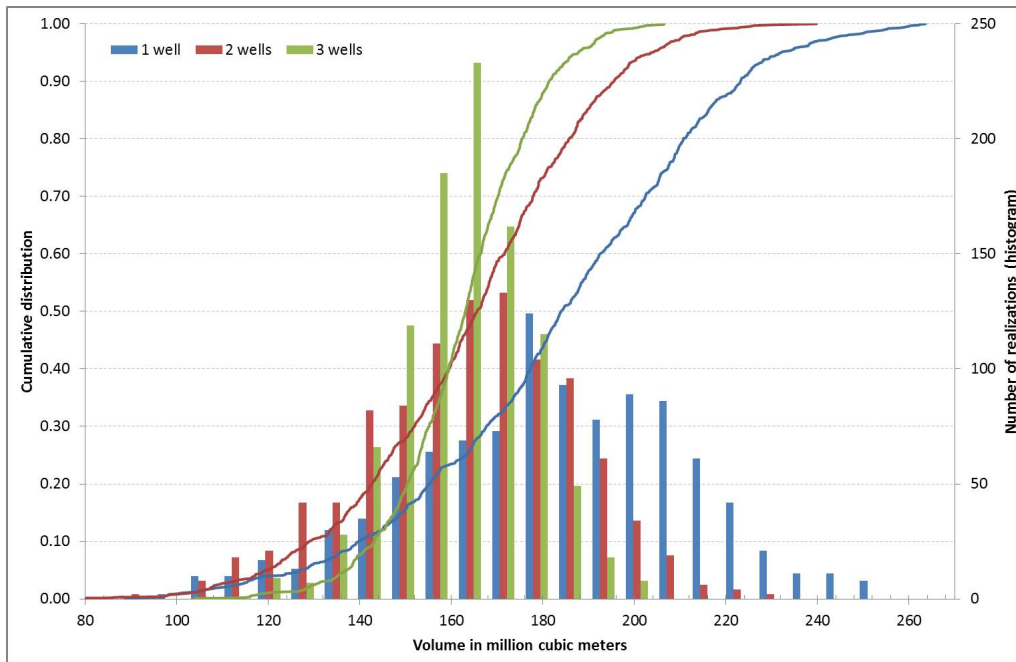


Figure 10.4. Histogram in bins of 8 million cubic meters and cumulative distribution of calculated volumes from 1000 realizations with 1, 2, and 3 wells.

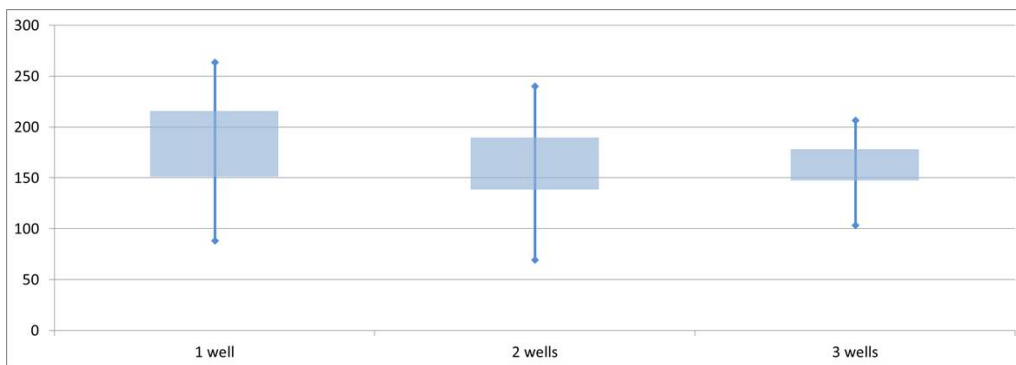


Figure 10.5. Box plot showing statistics of the calculated volumes from 1000 realizations in million cubic meters. The top and bottom of the vertical lines are the maximum and minimum volume. The top and bottom of the rectangle are the average volume plus and minus one SD.

as expected. The average spill point depth and volume with SDs are listed in [Table 10.2](#).

[Figure 10.6](#) shows the empirical mean of all 1000 realizations for the top surface for all three models. The relevant wells are included in the figures. It is not easy to spot much difference between the three cases based on these mean surfaces only. In the same figure the difference between the predicted depth and the empirical mean surfaces are given. These are plotted on a scale where zero difference is white, where predicted depth deeper than the mean is red, and blue is the opposite case. In the model with 1 well the entire map is light blue. This indicates that the mean of the realizations is somewhat deeper than the predicted depth. In the models with 2 and 3 wells however, the mean of the realizations are slightly shallower than the predictions. In these models the surfaces have been lifted to obtain correct spill points. The model with 2 wells has the highest mean surface compared to the prediction. This model has also the most shallow average spill point depth, see [Table 10.2](#). The spill point depth from the predictions are in the order 1092 meters, which is somewhat deeper than the averages from all three simulation

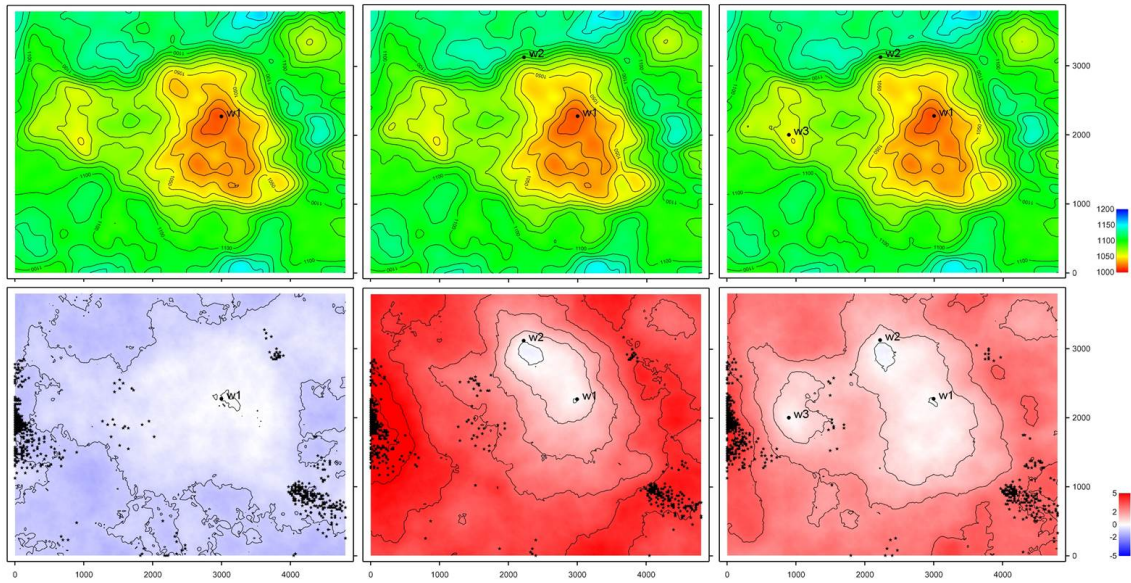


Figure 10.6. At the top are maps of mean surfaces of 1000 realizations with 1 well, 2 wells and 3 wells respectively. They use the same color legend as Figure 10.1. At the bottom are maps of predicted depths minus the mean surfaces. White color indicates no difference, red color shows that the predicted depths are deeper than the mean, and blue indicates the opposite. The spill points from cases with 1, 2, and 3 wells are included in the lower figures.

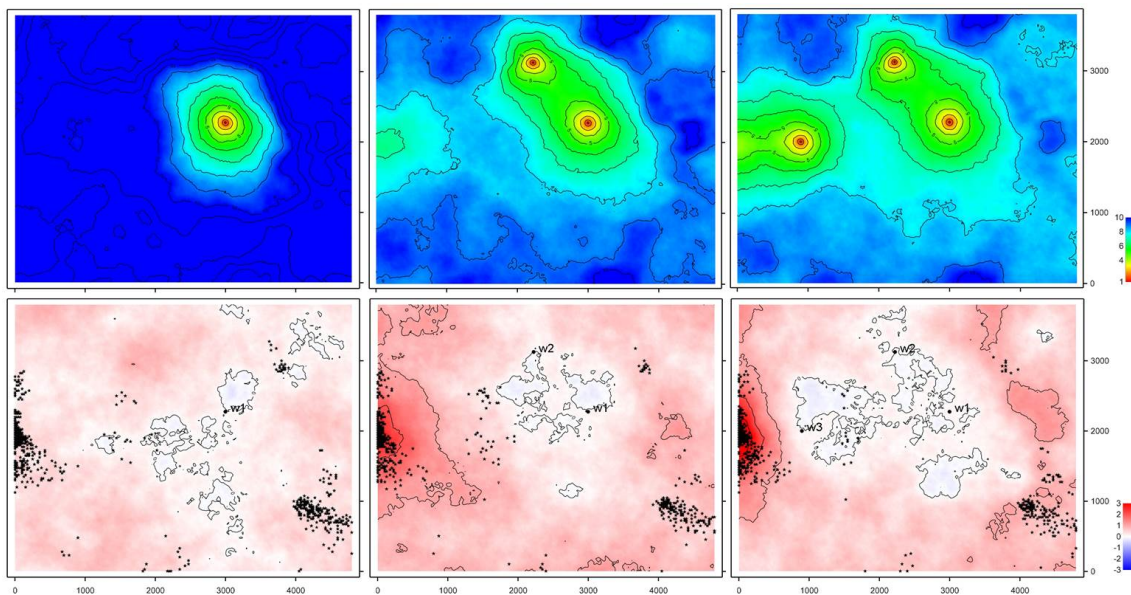


Figure 10.7. Empirical SD maps of 1000 realizations with 1, 2, and 3 wells respectively on top. At the bottom are prediction uncertainty minus SD from the 1000 realizations with 1, 2 and 3 wells. White color means no difference, red means that the depth uncertainty is higher than the empirical SD and blue is the opposite. The spill points from cases with 1, 2, and 3 wells are included in the lower figures.

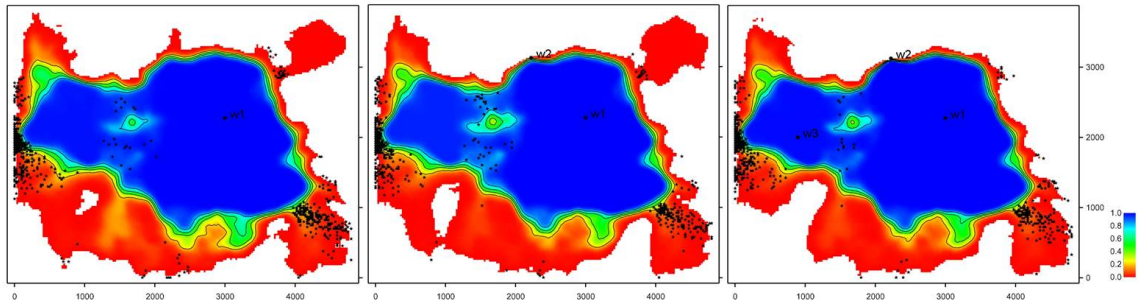


Figure 10.8. Map of probability for being inside the trap. This is the mean trap maps from 1000 realizations from case with 1, 2, and 3 wells respectively.

models.

In [Figure 10.7](#) the empirical SD of the top surface is shown for the three cases. The location of the wells are easily spotted in these figure as the SD is zero at the wells. The SD of the realizations is compared to the prediction uncertainty, and the differences are shown in the figure for all cases. If there were no rejected samples, the prediction uncertainty should be approximately identical to the empirical SD of a large number of simulated realizations. The difference between the prediction uncertainty and the empirical SD therefore gives an indication of the effect of the rejection sampling. Also here we can see a change related to the location of the spill points in the models with 2 and 3 wells. The SD is reduced compared to the prediction uncertainty in the locations of the spill points, especially at west of the map, as the acceptance criteria have limited the variability of the surfaces in these areas.

[Figure 10.8](#) shows the probability for being inside the trap obtained from the average of trap maps from 1000 realizations. This map is written to file by using element `<trap>`. A trap map from one realization is 1 inside the trap and 0 outside; hence the locations with one in the average map are inside the trap of all realizations. The figures show that there is a large variability in the area included in the volume calculation. Some traps have a large area, but about 70–80% seem to be in the same order. [Figure 10.9](#) includes column maps from the average of 1000 realizations at the top, and predictions at the bottom. These maps can give the volume directly by multiplying the value of each grid cell by the area of the grid cell, and can be written to file by using element `<column-map>`. The volume of the predicted models is in the order of 200 million cubic meters, which is larger than the average from the simulations. This is caused by a deeper spill point in the predicted top surface. This can to some extent be seen from [Figure 10.9](#).

[Figure 10.10](#) shows the empirical SD of the column maps in addition to the average of 1000 realizations. These figures show that the uncertainty in the area of the reservoir is reducing with increasing number of wells and stricter acceptance criteria, especially at west of the map.

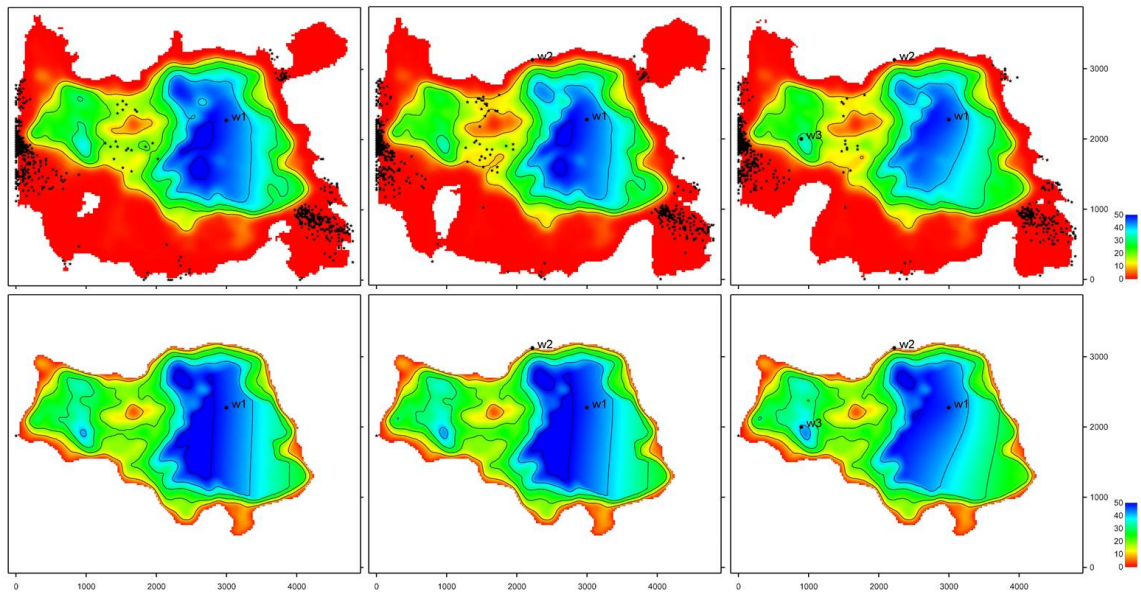


Figure 10.9. At the top; average rock column height map from case with 1, 2, and, 3 wells respectively. At the bottom, the rock column height map from predictions with 1, 2, and 3 wells. The relevant wells and spill points are included.

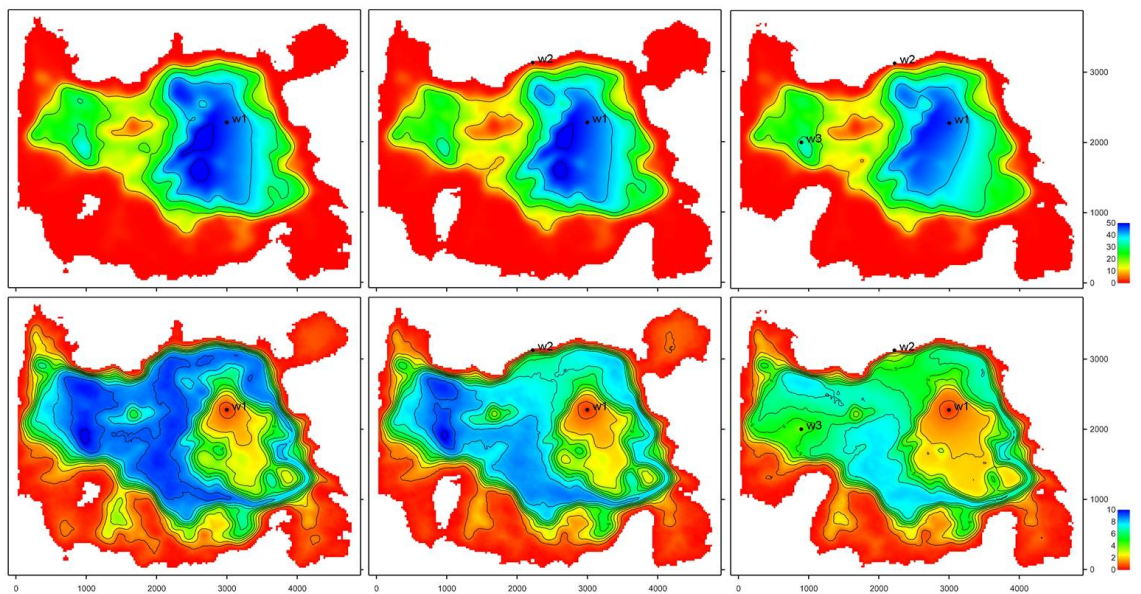


Figure 10.10. At the top; average rock column height map from model with 1, 2, and 3 wells respectively. At the bottom, empirical SD of rock column height map from model with 1, 2, and 3 wells respectively. The relevant wells are included.

11 Multiple models

COHIBA allows the user to specify several alternative ways of combining intervals to obtain a surface. This leads to multiple models that are combined into a unique solution for each surface. This is a unique feature for COHIBA.

Multiple models is a convenient way of squeezing surfaces between envelopes of well defined surfaces such as seismic reflectors. Intervals with large uncertainty are used for absorbing the inconsistencies between the models. [Figure 11.1](#) shows an example.

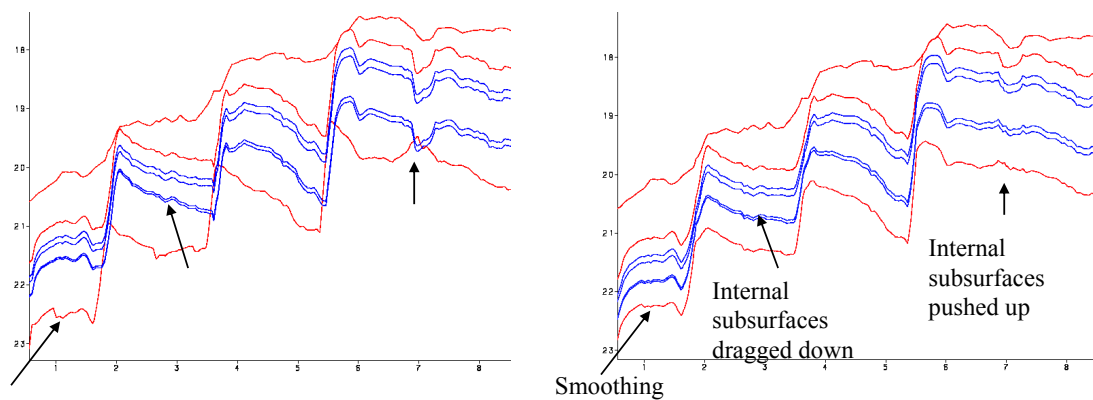


Figure 11.1. Cross section of two alternative ways of combining intervals. The red surfaces are seismic reflectors. The blue surfaces separates the internal zones that are assumed to have constant thickness. The figure to the left shows the surfaces when the internal zones are added to the seismic reflector above. The figure to the right shows the surfaces when COHIBA distributes the internal zones within the two seismic reflectors. We see that the result is a compromise between zones of constant thickness and the shape given by the two seismic reflectors. Note in particular that the seismic reflectors are also affected by the assumption that the zones have constant thickness.

11.1 Example from the Brent Group

Lets be specific and consider the Brent Group in the North Sea with its subdivision into the formations Broom, Rannoch, Etive, Ness and Tarbert. Assume that the top and base of Brent are good seismic reflectors. The crucial information is summarized in [Table 11.1](#).

There are two ways of obtaining the depth to the surfaces below TopBrent. We can either add the isochores to TopBrent or we can find the depth to BaseBrent using depth conversion of the Brent group and add the isochores on top of BaseBrent.

COHIBA will use both approaches and take a weighted average of the two results. These *model weights* are essentially proportional to the inverse of the squared uncertainty (the variance). It is possible to make a quick assessment of the uncertainty of the surfaces and thereby get a rough idea of what the model weights will be.

Table 11.1. The interpretation uncertainty of the travel times are 4 msec. and 8 msec. (two-way travel time (TWT)) for TopBrent and BaseBrent respectively. The interval velocity uncertainty is 10 m/s for the interval down to TopBrent and the interval velocity uncertainty in Brent is 150 m/s. The isochore uncertainty of the individual formations are chosen to be 30 % of the thickness. All uncertainties are SD.

Surface	Interval	Time maps		Interval veloc.		Isochore	
		typical (msec. twt)	uncert.	typical (m/s)	uncert. (m/s)	typical (m)	uncert. (m)
MSL		0	0				
	MSL-Brent	↓		↑ 2200	10		
TopBrent		1900	4				
	Tarbert			↑		↑ 30	9,0
TopNess							
	Ness					↑ 70	21,0
TopEtive							
	Etive			2500	150	↑ 30	9,0
TopRannoch							
	Rannoch					↑ 50	15,0
TopBroom							
	Broom					↑ 5	1,5
BaseBrent		2050	8				

Table 11.2. There are three alternative approaches for obtaining the depth to the surfaces below TopBrent: Adding isochores to TopBrent, adding isochores to BaseBrent, or the COHIBA approach combining both. The arrows indicate how the surfaces are obtained. Red arrows means depth conversion. The values in Table 11.1 were chosen so that the depth values are very similar for all approaches. The uncertainties however, differ significantly. The model weights chosen by COHIBA is seen in the Weight columns for each of the “Building from” approach.

Surface	Interval	Building from TopBrent			Building from BaseBrent			COHIBA	
		Depth (m)	uncert. (m)	Weight	Depth (m)	uncert. (m)	Weight	Depth (m)	uncert. (m)
MSL		0	0,0		0	0,0		0	0,0
	MSL-Brent	↓			↓			↓	
TopBrent		2090	10,5		2090	10,5		2090	10,5
	Tarbert	↓						↑	
TopNess		2120	13,8	90,5 %	2123	32,9	9,5 %	2120	13,4
	Ness	↓			↑			↑	
TopEtive		2190	25,1	49,7 %	2193	25,4	50,3 %	2191	18,9
	Etive	↓			↑			↑	
TopRannoch		2220	26,7	42,2 %	2223	23,7	57,8 %	2221	18,7
	Rannoch	↓			↑			↑	
TopBroom		2270	30,6	21,4 %	2273	18,4	78,6 %	2272	16,4
	Broom	↓			↑			↑	
BaseBrent		2275	30,7	21,2 %	2278	18,3	78,8 %	2277	16,4

Table 11.3. Multiple models weights for the Brent example.

	TWT SD	Velocity SD	Weight to BaseBrent	Weight to TopRannoch
Low uncertainty on BaseBrent:	4 msec.	75 m/s	93.5 %	68.5 %
Base case:	8 msec.	150 m/s	78.8 %	57.8 %
High uncertainty on BaseBrent:	16 msec.	300 m/s	48.4 %	35.5 %

Adding all the formations gives the accumulated uncertainty of the Brent interval as:¹

$$9^2 \text{ m}^2 + 21^2 \text{ m}^2 + 9^2 \text{ m}^2 + 15^2 \text{ m}^2 + 1.5^2 \text{ m}^2 \approx 29^2 \text{ m}^2.$$

The uncertainty of the thickness of the Brent interval using depth conversion is:²

$$\left(2500 \text{ m/s} \times \frac{8 \text{ msec.}}{2000 \text{ msec./s}}\right)^2 + \left(150 \text{ m/s} \times \frac{150 \text{ msec.}}{2000 \text{ msec./s}}\right)^2 = 10^2 \text{ m}^2 + 11.25^2 \text{ m}^2 \approx 15^2 \text{ m}^2.$$

The first term is the contribution from the travel time uncertainty and the second term is the contribution from the interval velocity uncertainty. We see that using depth conversion gives a lower uncertainty ($\pm 15 \text{ m}$) than using the isochore thicknesses ($\pm 29 \text{ m}$) for BaseBrent. The model weights will be:

$$\frac{29^2}{29^2 + 15^2} = 0.79 \quad \text{and} \quad \frac{15^2}{29^2 + 15^2} = 0.21.$$

So the depth conversion approach will contribute 79 % to BaseBrent.

Table 11.2 shows a summary of the uncertainties and the model weights calculated by COHIBA. There are two important observations:

1. The COHIBA approach favor the approach with the smallest uncertainty. We can see a transition where deeper surfaces are more dependent on BaseBrent than the shallower ones.
2. The surface uncertainty obtained by the COHIBA approach is always smaller than the uncertainty using only one of the approaches. This is not a coincidence. COHIBA chooses the model weights so that the uncertainty is minimized.

Multiple models are indirectly specified by the user by specifying two (or more) interval models for one (or more) surfaces. Figure 11.2 shows how this is done for the Brent example.

Figure 11.3 shows how the multiple models and their weights are reported by COHIBA. The model weights are sampled at a few locations in the grid and will usually give different values for Avg, Min, and, Max. In this simple example all surfaces and uncertainties are constant giving equal model weights in all grid nodes.

Model weights will *always* sum to one. This will be true for the reported average (Avg) value but not true for the reported Min and Max values. Note that model weights can be negative and even larger than 1 in some rare cases. This is caused by correlations between different models.

11.1.1 The model weights are sensitive to the uncertainty specifications

Since model weights depend on the inverse of the variances, they can change significantly if the uncertainty is changed by a relatively small amount.

Table 11.3 shows what happens to the model weights if we half or double the uncertainties. In the high uncertainty case, the seismic travel times for BaseBrent are no longer favored more than a simple stacking of isochores from TopBrent.

1. All specified uncertainties are assumed independent. Since the individual uncertainties are assumed independent we can simply add the variances (squared SD) to obtain the total variance.
2. We must divide by 2000 msec./s since travel times are TWT in milliseconds.


```

<intervals>
  <interval>
    <name>          MSL-Brent    </name>
    <top>           MSL          </top>
    <base>          TopBrent     </base>
    <interval-type> velocity    </interval-type>
    ...
  </interval>
  <interval>
    <name>          Brent        </name>
    <top>           TopBrent     </top>
    <base>          BaseBrent    </base>
    <interval-type> velocity    </interval-type>
    ...
  </interval>
  <interval>
    <name>          Tarbert      </name>
    <top>           TopBrent     </top>
    <base>          TopNess      </base>
    <interval-type> thickness   </interval-type>
    ...
  </interval>
  <interval>
    <name>          Ness         </name>
    <top>           TopNess      </top>
    <base>          TopEtive     </base>
    <interval-type> thickness   </interval-type>
    ...
  </interval>
  <interval>
    <name>          Etive        </name>
    <top>           TopEtive     </top>
    <base>          TopRannoch   </base>
    <interval-type> thickness   </interval-type>
    ...
  </interval>
  <interval>
    <name>          Rannoch      </name>
    <top>           TopRannoch   </top>
    <base>          TopBroom     </base>
    <interval-type> thickness   </interval-type>
    ...
  </interval>
  <interval>
    <name>          Broom        </name>
    <top>           TopBroom     </top>
    <base>          BaseBrent    </base>
    <interval-type> thickness   </interval-type>
    ...
  </interval>
</intervals>

```

Figure 11.2. The surface names TopBrent and BaseBrent enter the `<top>` and `<base>` elements twice. These double entries makes this a specification of multiple models. The crucial specifications are marked in **dark red**.

Surface	ModelWeights			Models
	Avg	Min	Max	
TopBrent	1.000	1.000	1.000	1: MSL → TopBrent
TopNess	0.905	0.905	0.905	1: MSL → TopBrent → TopNess
	0.095	0.095	0.095	2: MSL → TopBrent → BaseBrent → TopBroom → TopRannoch → TopEtive → TopNess
TopEtive	0.497	0.497	0.497	1: MSL → TopBrent → TopNess → TopEtive
	0.503	0.503	0.503	2: MSL → TopBrent → BaseBrent → TopBroom → TopRannoch → TopEtive
TopRannoch	0.422	0.422	0.422	1: MSL → TopBrent → TopNess → TopEtive → TopRannoch
	0.578	0.578	0.578	2: MSL → TopBrent → BaseBrent → TopBroom → TopRannoch
TopBroom	0.214	0.214	0.214	1: MSL → TopBrent → TopNess → TopEtive → TopRannoch → TopBroom
	0.786	0.786	0.786	2: MSL → TopBrent → BaseBrent → TopBroom
BaseBrent	0.212	0.212	0.212	1: MSL → TopBrent → TopNess → TopEtive → TopRannoch → TopBroom → BaseBrent
	0.788	0.788	0.788	2: MSL → TopBrent → BaseBrent

Figure 11.3. The report of the multiple models and their weights for the Brent case found in [Section 4: The alternative ways to build each surface](#) in the [COHIBA log file](#). The arrows indicate an interval.

Surface	ModelWeights			Models
	Avg	Min	Max	
...				
Top_SN_9.3	0.136	-0.084	0.765	1: MSL → Top_Nordland → Top_Hordaland → Top_Balder → BCU → Top_SN_11.4 → Top_SN_11.3 → Top_SN_11.2 → Top_SN_11.1 → Top_SN_10.4 → Top_SN_10.3 → Top_SN_10.2 → Top_SN_10.1 → Top_SN_9.4 → Top_SN_9.3
	0.014	-0.045	0.079	2: MSL → Top_Nordland → Top_Hordaland → Top_Balder → BCU → Top_SN_11.4 → Top_SN_11.3 → Top_SN_11.2 → Top_SN_11.1 → Top_SN_10.4 → Top_SN_10.3 → Top_SN_10.2 → Top_SN_10.1 → Top_SN_9.3
	0.050	-0.023	0.141	3: MSL → Top_Nordland → Top_Hordaland → Top_Balder → BCU → Top_SN_11.4 → Top_SN_11.3 → Top_SN_11.2 → Top_SN_11.1 → Top_SN_10.4 → Top_SN_10.3 → Top_SN_10.2 → Top_SN_10.1 → Top_SN_9.3
	0.016	-0.032	0.099	4: MSL → Top_Nordland → Top_Hordaland → Top_Balder → BCU → Top_SN_11.4 → Top_SN_11.3 → Top_SN_11.2 → Top_SN_11.1 → Top_SN_10.4 → Top_SN_10.3 → Top_SN_10.2 → Top_SN_10.1 → Top_SN_9.3
	0.266	-0.020	0.722	5: MSL → Top_Nordland → Top_Hordaland → Top_Balder → BCU → Top_SN_11.4 → Top_SN_10.4 → Top_SN_10.3 → Top_SN_10.2 → Top_SN_10.1 → Top_SN_9.4 → Top_SN_9.3
	0.058	-0.010	0.123	6: MSL → Top_Nordland → Top_Hordaland → Top_Balder → BCU → Top_SN_11.4 → Top_SN_10.4 → Top_SN_10.3 → Top_SN_10.2 → Top_SN_10.1 → Top_SN_9.3
	0.249	0.022	0.613	7: MSL → Top_Nordland → Top_Hordaland → Top_Balder → BCU → Top_SN_11.4 → Top_SN_10.4 → Top_SN_10.1 → Top_SN_9.4 → Top_SN_9.3
	0.212	0.002	0.857	8: MSL → Top_Nordland → Top_Hordaland → Top_Balder → BCU → Top_SN_11.4 → Top_SN_10.4 → Top_SN_10.1 → Top_SN_9.3

Figure 11.4. A part of [Section 4: The alternative ways to build each surface](#) in the [COHIBA log file](#). The arrows indicate an interval. Note that weights can vary significantly when the residual uncertainties varies and that weights can be negative.

11.1.2 Many multiple models and their weights

It is possible to specify many sets of multiple models including alternative zonation and alternative depth conversions. COHIBA will automatically sort out all possible ways of calculating the depth to any surface. This may include a lot of alternatives. [Figure 11.4](#) shows a small piece of logging information taken from [COHIBA log file](#). It shows the eight alternative models for the surface Top_SN_9.3. model weights

Note that the model weights are quite small for several of the alternatives and that they vary a lot in different areas. The deepest surfaces in this particular example can be reached in 128 different ways so the complexity can be significant.

COHIBA calculates the model weights by looking at the uncertainty of each model *and* the correlation between each model. Many models will have a lot of intervals in common. The common parts will make the alternative models correlated.

COHIBA may use a significant amount of CPU time calculating the model weights and the CPU time will increase with the number of alternative models. The calculation of the actual surfaces (stochastic or deterministic) is not sensitive to the number of alternative models.

11.1.3 Some words of advice

Multiple models are very convenient but they can obscure how surfaces are constructed since they combine several alternatives. It can therefore be difficult to understand why a surface gets its shape. A typical effect is that seismic reflectors are modified so that the features seen on the travel time maps are distorted. [Figure 11.1](#) illustrates this quite clearly. The simple reason is that depth conversion is not accurate and alternative approaches to constructing the surface can strongly influence the surface shape. It is all a consequence of the user chosen uncertainties (SD). Small travel time uncertainties and small interval velocity uncertainties will guaranty that features seen in travel time maps are preserved. But small uncertainties are not always realistic.

Be careful when using many small intervals

This may result in unrealistic small uncertainties since adding many small uncertainties result gives a smaller uncertainty than most realize. This is best illustrated by an example.

Let us consider a depth converted interval of 200 meters where the uncertainty (SD) is 20 meters. Now assume that there is a subdivision of this interval into equally thick zones. Further assume that the uncertainty (SD) of the thickness of each zone is 30 %. That is, if there is one zone, the uncertainty is $200 \text{ m} \times 30 \% = 60 \text{ m}$. If there are two equally thick zones they have $100 \text{ m} \times 30 \% = 30 \text{ m}$ uncertainty, and if there are three equally thick zones they have uncertainty $66.6 \text{ m} \times 30 \% = 20 \text{ m}$ and so on. If the number of zones are N , the accumulated uncertainty for the whole interval becomes

$$(11.1) \quad \text{Var}\{\Delta Z\} = N \times (30 \% \times 200 \text{ m}/N)^2.$$

This uncertainty must be compared to 20 meters which is the uncertainty obtained using depth conversion. The uncertainty, $\sqrt{\text{Var}\{\Delta Z\}}$, is plotted as a dark blue line in [Figure 11.5](#) and the corresponding model weights given to the depth conversion alternative is plotted as the blue line.

We see that the model weights are 50 % when the accumulated uncertainty is approximately 20 meters. This is the point where it becomes less uncertain to use the subdivision rather than the depth converted interval.

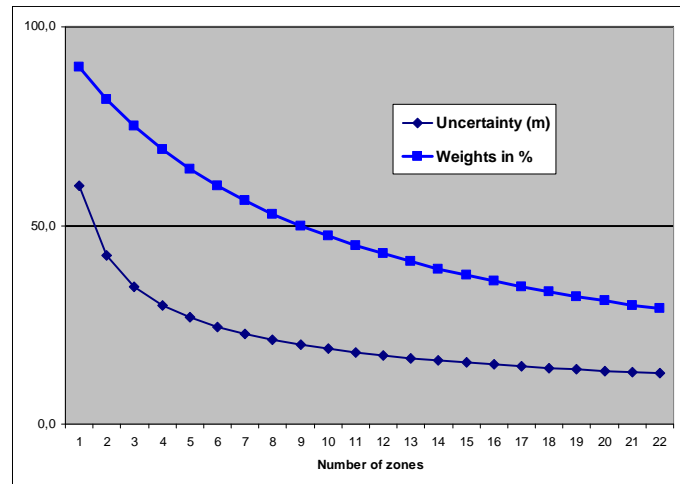


Figure 11.5. Model weights (blue line) as the number of subdivisions of the zone increase. The dark blue line is the accumulated uncertainty (SD) obtained using Eq. 11.1.

Small uncertainties are drowned by bigger uncertainties

Since accumulated uncertainties (SD) are obtained by summing the squares (the variances), small uncertainties are totally dominated by larger uncertainties. Here are a few examples:

$$10^2 \text{ m}^2 + 1^2 \text{ m}^2 \approx 10.05^2 \text{ m}^2$$

$$10^2 \text{ m}^2 + 2^2 \text{ m}^2 \approx 10.2^2 \text{ m}^2$$

$$10^2 \text{ m}^2 + 5^2 \text{ m}^2 \approx 11.2^2 \text{ m}^2$$

$$10^2 \text{ m}^2 + 10^2 \text{ m}^2 \approx 14.1^2 \text{ m}^2.$$

Multiple models with no well data

It is quite common in large models that there are little or no well data for a few surfaces. This could give warnings like this:

WARNING: The average thickness between depth trend surfaces 'Top_SN_3.4' and 'Top_SN_3.3' is negative (-6.61).
Probable cause: Conflict between multiple models for one or both surfaces.

11.1.4 Pre-adjusting the standard deviations of isochores

COHIBA has a pre-processing option that can scale the uncertainties in isochore packages to approximately achieve a specified model weight. This feature can be activated by using the element `<weight-isochore-package-above>`, specified on the reflector surface directly below an isochore package. If the model consists of several isochore packages, then each one can be scaled according to an individual model weight.

Using the Brent Group as an example, one can scale the uncertainties of all isochores between the reflectors TopBrent and BaseBrent. Specifying a weight of 0.15 on BaseBrent gives the model weights shown in Figure 11.6, which can be compared with the original weights in Figure 11.3. A weight below 0.5 means that the isochores gets less weight than the velocity model (or depth converted thickness model).

The algorithm starts by extracting a covariance matrix C for all model paths down to BaseBrent. The matrix is approximated by using the average of all covariance matrices at all the grid nodes. Hence, the model weights will in general not be exactly equal to the value specified by `<weight-isochore-package-above>` (except when all trends are constant values, as is the case in the Brent Group example).

Surface	ModelWeights			Models
	Avg	Min	Max	
TopBrent	1.000	1.000	1.000	1: MSL → TopBrent
TopNess	0.904	0.904	0.905	1: MSL → TopBrent → TopNess
TopEtive	0.096	0.096	0.096	2: MSL → TopBrent → BaseBrent → TopBroom → TopRannoch → TopEtive → TopNess
	0.460	0.460	0.460	1: MSL → TopBrent → TopNess → TopEtive
TopRannoch	0.540	0.540	0.540	2: MSL → TopBrent → BaseBrent → TopBroom → TopRannoch → TopEtive
	0.379	0.379	0.379	1: MSL → TopBrent → TopNess → TopEtive → TopRannoch
TopBroom	0.621	0.621	0.621	2: MSL → TopBrent → BaseBrent → TopBroom → TopRannoch
	0.152	0.152	0.152	1: MSL → TopBrent → TopNess → TopEtive → TopRannoch → TopBroom
BaseBrent	0.848	0.848	0.848	2: MSL → TopBrent → BaseBrent → TopBroom
	0.150	0.150	0.150	1: MSL → TopBrent → TopNess → TopEtive → TopRannoch → TopBroom → BaseBrent
	0.850	0.850	0.850	2: MSL → TopBrent → BaseBrent

Figure 11.6. The report of the multiple models and their weights for the Brent case, after scaling the isochore package between TopBrent and BaseBrent.

11.1.5 Undefined areas in multiple models

By default, COHIBA returns an undefined depth value if any input map value (trend, travel time, or residual [SD](#)) is missing. Despite missing values in some input maps, often one or several of the multiple models are completely specified and could provide reliable depth values. It is therefore provided a simple solution that will give depth values everywhere. Missing input map values can be replaced by extrapolated values using [<extrapolate-input-surfaces>](#) in [<pre-process-surfaces>](#). This will guarantee that all the multiple models are properly defined everywhere. The replacement of missing values by extrapolated values in the input maps are normally not as reliable as defined input values. Multiple models containing extrapolated values will therefore be given lower weight. This is done by increasing the residual [SD](#) in areas with extrapolated input map values.

12 Faults

COHIBA 6.0 and later versions handle faults when used together with ROXAR RMS. This is done by treating each fault segment semi-independently and extend surfaces beyond the fault blocks. ROXAR RMS imports the overlapping surfaces and cuts and glues the patches together into a consistent structural model with faults and surfaces.

When COHIBA runs without ROXAR RMS, faults must be handled differently. COHIBA does not model faults directly. However, the underlying data used for describing faults, the travel time maps, are handled by COHIBA. So faulted seismic reflectors will give faulted surfaces¹. The vertical component of the uncertainty of the fault position will depend on the travel time uncertainty and the interval velocity uncertainty. The vertical component of the uncertainty is close to the real uncertainty for low angle faults. The uncertainty will be underestimated for vertical and high angle faults.

COHIBA has a few features that ensure that many normal faults are handled.


1. COHIBA assumes that the uncertainties to the travel times from different surfaces are independent. This is normally a good approximation, but it is unrealistic when two seismic reflectors are very close or coinciding. So COHIBA automatically adjust the travel time uncertainties so that close or coinciding seismic reflectors gets correlated (dependent) residuals. This is both realistic and gives zero uncertainty for the zero thickness between coinciding seismic reflectors along fault planes. This feature can be turned off using the element `<correlate-close-reflectors>`.
2. The zone thickness trends will in general disagree with the trends obtained from seismic depth conversion. This is solved by combining multiple models. If two seismic reflectors coincide, the thickness uncertainty between the seismic reflectors now becomes zero. This guarantees that the depth conversion alternative for the lower seismic reflector gets model weight 1 and other model alternatives get zero weight. However, the intermediate (non-reflecting) surfaces will not be perfectly squeezed in between the two coinciding seismic reflectors. This is solved if seismic reflectors behave as erosive surfaces *and* onlapped surfaces. The seismic reflectors will then cut away any parts of the intermediate surfaces that are not in between the two seismic reflectors. This is the default but it can be overruled by using `<treat-reflectors-as-eroding-and-onlapped>`.

Note that this only affects the post processing of surfaces, not the extraction of well points. If a seismic reflector is eroding and/or onlapped, then use the elements `<erosive>` and `<onlapped>`.


These features are illustrated in [Figure 12.1](#).

1. Only normal faults can be represented by travel time maps so reverse faults must be approximated by vertical faults.

Original COHIBA model. Interval thickness models open the fault defined by the seismic reflectors:

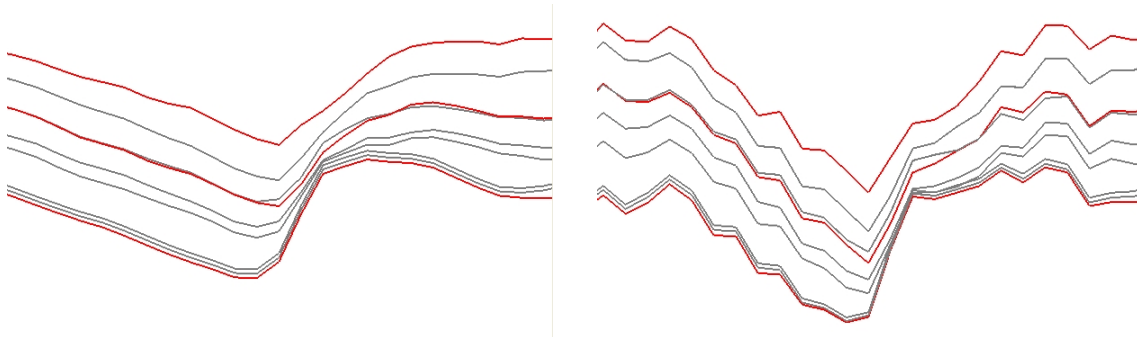

Introducing correlated travel time uncertainty
(Turn off using element `<correlate-close-reflectors>`):

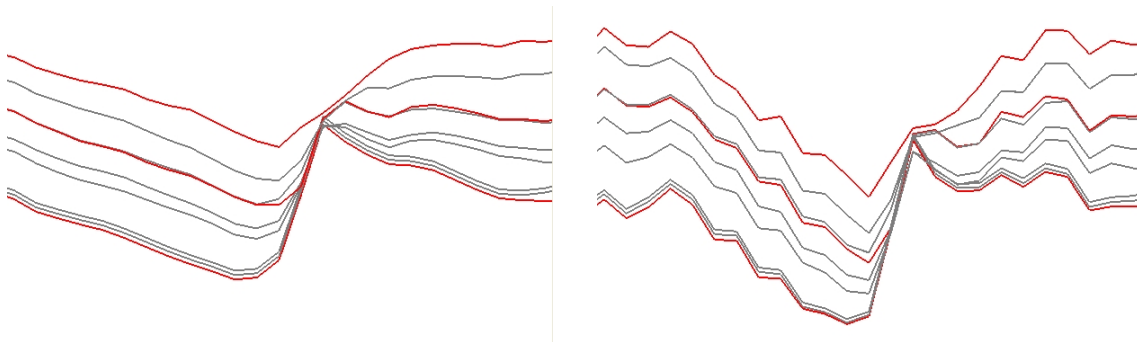

Introducing eroding and onlapped seismic reflectors
(Turn off using element `<treat-reflectors-as-eroding-and-onlapped>`):

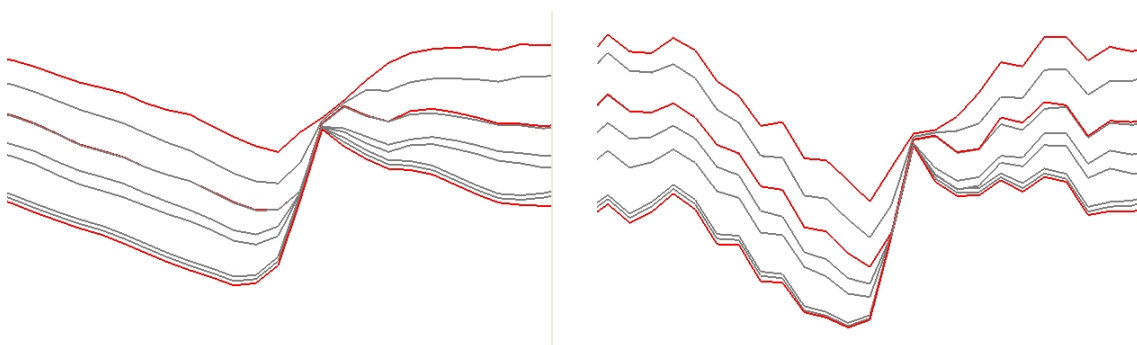


Figure 12.1. Cross section of a fault. Seismic reflectors are red. Deterministic (prediction) in the left column and one stochastic realization in the right column.

13 Free surfaces

A free surface is a surface that does not belong to the ordered sequence of surfaces that define the stratigraphy. A free surface may cut through other surfaces. Typical examples are [hydrocarbon contacts \(HCCs\)](#) and faults.

A surface is specified as *free* using [<free-surface>](#). Free surfaces are handled by COHIBA like any other surface except from situations where the correct ordering is needed. Free surfaces are listed after other surfaces.

Since a free surface has no particular order it can not erode other surfaces and it can not be overlapped. Erosion rules specified by [<erosive>](#) and [<onlapped>](#) are therefore ignored. A free surface will not be eroded by other surfaces and it will not lap onto other surfaces.

Since a free surface is not a boundary for a stratigraphic zone it is not meaningful to associate it with a [<top-of-zone>](#). Therefore, zone logs can not be used to specify well points for free surfaces. Well points for free surfaces must be specified by well point files using [<files>](#) under [<well-points>](#).

13.1 Linking free surfaces to other surfaces

Free surfaces can be linked to any surface using the [<top>](#) and [<base>](#) under [<interval>](#). This can be utilized in various ways.

13.1.1 Control other surfaces using a flat spot

A flat spot is an almost horizontal [gas oil contact \(GOC\)](#) or [gas water contact \(GWC\)](#) that gives a strong seismic reflection. The seismic travel time to a flat spot will therefore have a very low uncertainty, say ± 1 msec.¹ It is possible to form velocity intervals between the flat spot and other reflecting surfaces. This might reduce the uncertainty in the other reflecting surfaces. Note that it is possible and meaningful to make velocity intervals that have negative thickness and negative interval travel times.

13.1.2 Control other surfaces using a HCC

A [HCC](#) is almost horizontal provided the fluids are in gravitational equilibrium. This can be used to reduce and calibrate the well path [true vertical depth \(TVD\)](#) uncertainties.

The [SD](#) of the well path [TVD](#) uncertainty can be specified in the COHIBA well points files ([Table 6.3](#)) or using a well path [TVD](#) uncertainty log using [<wellpath-TVD-SD-log-name>](#). The *correlation* between well points is determined by the [<wellpath-TVD-SD-range>](#).

13.1.2.1 Linking a HCC to spill points

A free surface can be linked directly to the spill point of a different surface using [<condition-to-spill-point-at-surface>](#). This is meant to be used for modeling a [HCC](#) for a filled structure. The [<name>](#) of the free surface can be used as the [<base-contact>](#) in volume calculations. This makes it possible to find the volume of a filled structure with an unknown spill point. This approach should be used in combination with [<only-trapped-volume>](#). See [Section 9](#).

1. The travel time uncertainty in areas outside the flat spot should be set to a high value, say 50 msec.

14 Correlated intervals



Consider the two alternative ways of modeling surfaces illustrated in Figure 14.1. The left illustration is the standard approach where deeper surfaces are obtained by adding deeper intervals. The right hand illustration shows another common approach where surfaces are attached directly to the reference surface (MSL in this case). The first approach gives correlated surfaces whereas the second approach gives uncorrelated surfaces since intervals are uncorrelated.

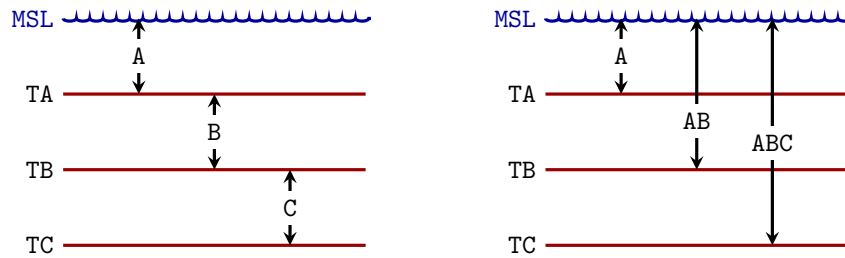


Figure 14.1. Three surfaces, TA, TB, and TC obtained by adding deeper intervals (left) or by attaching them directly to the reference surface MSL.

Uncorrelated surfaces may cause a significant uncertainty in the thickness between surfaces and undesired crossing between surfaces can easily happen. One possible solution is to combine both approaches illustrated in Figure 14.1 by using multiple models.

An alternative approach is to introduce correlations between different intervals. This is done by correlating the interval thickness or velocity residuals and by correlating the *prior* interval trend coefficients. This is triggered by using `<common-top-for-correlated-intervals>` under `<reference>` and `<surface>`. All intervals that have the common surface as `<top>` will be correlated¹. The correlation between two intervals is high if the average thickness of the intervals is similar and drops to zero if there is a large difference in the average thickness.

Note that correlating the trend coefficients applies to the prior distribution and these correlations can be modified when these are conditioned to well data.

14.1 Calculating correlations

Consider the model illustrated on the right hand side of Figure 14.1. The thickness intervals are modeled as (Eq. 20.4)

$$\Delta Z_A(\mathbf{x}) = \beta_A \cdot \mathbf{f}_A(\mathbf{x}) + \Delta \epsilon_A(\mathbf{x})$$

$$\Delta Z_{AB}(\mathbf{x}) = \beta_{AB} \cdot \mathbf{f}_{AB}(\mathbf{x}) + \Delta \epsilon_{AB}(\mathbf{x})$$

$$\Delta Z_{ABC}(\mathbf{x}) = \beta_{ABC} \cdot \mathbf{f}_{ABC}(\mathbf{x}) + \Delta \epsilon_{ABC}(\mathbf{x}),$$

where the normal assumption is that interval trend coefficients from different intervals are uncorrelated (e.g. $\text{Cov}\{\beta_A, \beta_{AB}\} = 0$) and that interval residuals are uncorrelated (e.g. $\text{Cov}\{\Delta \epsilon_A(\mathbf{x}), \Delta \epsilon_{ABC}(\mathbf{x})\} = 0$). Also, coefficients are assumed uncorrelated with any residual. This implies, for this model, that any pair of depth surfaces are uncorrelated.

1. The intervals must be of the same `<interval-type>`, that is, thickness or velocity.

The challenge is to find a reasonable correlation between the interval trend coefficients and between the interval residuals that would introduce correlation between the surfaces.

One possibility is to assume that surfaces that are near are highly correlated, that is, intervals with the same thickness with a common reference surface should be highly correlated. Consider the prior average thickness of an interval, e.g. $\Delta \bar{Z}_A = \beta_A \cdot \bar{f}_A$, where β_A are the prior coefficients specified by `<coefficient-mean>` and \bar{f}_A is the average trend functions. The average is taken over the whole modeling area.

The correlation between any pair of prior coefficients in intervals A and AB are modeled as

$$(14.1) \quad \text{Corr}\{\beta_{Ai}, \beta_{ABj}\} = \exp\left(-3\left(\frac{\|\Delta \bar{Z}_A - \Delta \bar{Z}_{AB}\|}{R}\right)^p\right); \quad R > 0 \quad \text{and} \quad 0 < p \leq 2$$

and the correlation between the interval residuals in A and AB are modeled as

$$(14.2) \quad \text{Corr}\{\Delta \epsilon_A(\mathbf{x}), \Delta \epsilon_{AB}(\mathbf{x})\} = \exp\left(-3\left(\frac{\|\Delta \bar{Z}_A - \Delta \bar{Z}_{AB}\|}{R'}\right)^{p'}\right); \quad R' > 0 \quad \text{and} \quad 0 < p' \leq 2,$$

where R and R' are the thickness difference where correlations are almost zero², and the powers p and p' determine the shape of the general exponential correlation functions. Note that these formulas give a single correlation number for each pair or correlated intervals. In the example illustrated in Figure 14.1 there are three pair-combinations (A-AB, A-ABC, and AB-ABC) so the formulas give three correlations between trend coefficients and three correlations between residuals.

The correlations between the interval residuals are written to the file `residual-correlation-matrix.dat` in `correlations/` if `<write-correlation-files>` is set to yes.

The two ranges and the two powers in Eq. 14.1 and Eq. 14.2 can be modified by :

`<correlated-intervals-range-for-trends>`,
`<correlated-intervals-power-for-trends>`,
`<correlated-intervals-range-for-residuals>` and
`<correlated-intervals-power-for-residuals>`

in `<correlated-intervals>` in `<model-settings>`. The default ranges are 100 meters and the default powers are 1 that corresponds to an exponential correlation function.

In simulation `<mode>` the correlated interval residual fields are drawn correlated by default. The correlation between the drawn residual fields can be removed with the help of `<correlated-intervals-simulations>`. This is not recommended since it introduces an inconsistency.

14.2 Correlating the trend coefficients using thickness ratios

If we stick to the assumption that the trend coefficients from the intervals A, B, and C are uncorrelated we get

$$\text{Cov}\{\beta_A \cdot \bar{f}_A, \beta_{AB} \cdot \bar{f}_{AB} - \beta_A \cdot \bar{f}_A\} = \text{Cov}\{\beta_A \cdot \bar{f}_A, \beta_B \cdot \bar{f}_B\} = 0$$

which is equivalent to

$$\bar{f}_A' \text{Cov}\{\beta_A', \beta_{AB}\} \bar{f}_{AB} = \bar{f}_A'(\mathbf{x}) \text{Var}\{\beta_A\} \bar{f}_A(\mathbf{x}).$$

The unknown in this equation is the correlations between coefficients from different intervals in $\text{Cov}\{\beta_A', \beta_{AB}\}$. This is still not solvable because the number of unknown correlations are larger than this single equation³ can determine. For the simplest situation with only one trend coefficient for each interval, such as $\beta_A \bar{f}_A$, this simplifies to

$$(14.3) \quad \text{Corr}\{\beta_A, \beta_{AB}\} = \frac{\text{SD}\{\beta_A\} \bar{f}_A}{\text{SD}\{\beta_{AB}\} \bar{f}_{AB}}.$$

2. $e^{-3} \approx 0.05$.

3. The right hand side is a single number.

The important observation is that the correlation is proportional to the thickness ratio \bar{f}_A/\bar{f}_{AB} .

This can be generalized to situations with several trend coefficients by assuming a single common correlation for all pairs of coefficients from different intervals: This idea is used to introduce correlations between trend coefficients from different intervals in the prior covariance matrix (Eq. 20.20). This is activated with the `<correlated-intervals-ratios-for-trends>`.

Note that Eq. 14.3 does not guarantee that the resulting covariance matrix becomes positive definite. This is handled by reducing correlations towards zero until the prior covariance matrix becomes valid.

14.3 Example

Below are specifications that make the intervals in the right hand side in Figure 14.1 correlated.

```
<model-settings>
  <!-- This is not necessary, default values are provided: -->
  <correlated-intervals>
    <correlated-intervals-range-for-residuals> 200 </correlated-intervals-range-for-residuals>
    <correlated-intervals-ratios-for-trends> yes </correlated-intervals-ratios-for-trends>
  </correlated-intervals>
</model-settings>

<surfaces>
  <reference>
    <name> MSL </name>
    <!-- This triggers correlating intervals: -->
    <common-top-for-correlated-intervals> yes </common-top-for-correlated-intervals>
    ...
  </reference>
  <surface>
    <name> TA </name>
    ...
  </surface>
  <surface>
    <name> TB </name>
    ...
  </surface>
  <surface>
    <name> TC </name>
    ...
  </surface>
</surfaces>

<intervals>
  <interval>
    <name> A </name>
    <top> MSL </top>
    <base> TA </base>
    ...
  </interval>
  <interval>
    <name> AB </name>
    <top> MSL </top>
    <base> TB </base>
    ...
  </interval>
  <name> ABC </name>
```



```
<top>
<base>
...
</interval>
</intervals>
```

```
MSL </top>
TC </base>
```


15 Polynomial trends

COHIBA offer a simple way of using a (potentially large) set of polynomial trend maps that gives great flexibility in capturing trends with many details. The number of trend maps can be large so this possibility should primarily be used when there is an abundance of well data.

15.1 Model specification

A typical specification for polynomial trends looks like:

```
<interval>
  <polynomial-trend>
    <polynomial-degree>          3 </polynomial-degree>
    <polynomial-scaling-factor> 100 </polynomial-scaling-factor>
  </polynomial-trend>
</interval>
```

This will make COHIBA use the 16 trend maps in [Figure 15.1](#). These square maps are stretched and rotated to fit the `<output-grid>`.

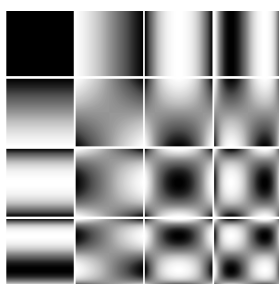


Figure 15.1. Greyscale maps of the 16 polynomial trend maps that are used if `<polynomial-degree>` is set to 3 (default is 2). The color scale is such that black is 1 and white is -1 in all maps.

The polynomial trend maps are all in the range -1 to 1 and should be scaled by `<polynomial-scaling-factor>` to obtain physically meaningful values. The exact value chosen is not important but it should be of correct magnitude. Choosing 100 (meters) indicates that the thickness of the interval is on the order of 100 meters. If polynomial trends are used for interval velocities, reasonable values are in the range 1000 – 3000 m/s.

The prior *SD* for all the trend coefficients is 1. This is an intentionally large prior uncertainty so that the trend easily adapts to well data. This is only relevant if bayesian is chosen as `<kriging-method>`.

The updated trend coefficients are reported in the [COHIBA log file](#) as (only 4 first lines shown):

Interval	Coef	Trend map		Trend coefficients			
		TrendMean	TrendRMS	PriorMean	PriorSD	PostMean	PostSD
MSL_TopA	C00	100.000	0.000	1.000	1.000	0.999	0.004
MSL_TopA	C01	0.000	58.114	0.000	1.000	0.001	0.004
MSL_TopA	C02	-32.456	60.410	0.000	1.000	0.007	0.006
MSL_TopA	C10	0.000	58.035	0.000	1.000	0.024	0.012

The TrendRMS column is the [Root-mean-square \(RMS\)](#) variation in each polynomial trend map. Trend values are only accurate for the two first digits due to `<output-grid>` resolution.

15.2 Technical details

A polynomial of degree n is defined as

$$P_n(x) = a_0 + a_1 x + a_2 x^2 + \cdots + a_n x^n \quad (a_n \neq 0).$$

COHIBA supports three series of polynomials: [Chebyshev polynomials](#), [Legendre polynomials](#) and simple [monomials](#) $(1, x, x^2, x^3, \dots)$. The type of polynomial trend is chosen by `<polynomial-type>` and the highest power of x is chosen by `<polynomial-degree>`. The polynomial types are illustrated in [Figure 15.2](#). For a given polynomial type, the coefficients (a_0, \dots, a_n) are known numbers.

Two-dimensional polynomial trend maps are constructed from the basic polynomials using

$$P_{nm}(x, y) = P_n(x) P_m(y).$$

So the two-dimensional polynomial trend map of degree n gets the form

$$(15.1) \quad m(x, y) = a_{00} P_{00}(x, y) + a_{01} P_{01}(x, y) + a_{10} P_{10}(x, y) + a_{11} P_{11}(x, y) + \cdots + a_{nn} P_{nn}(x, y),$$

where a_{ij} are trend coefficients and $P_{ij}(x, y)$ are two-dimensional polynomial trend maps. The shapes of the two-dimensional polynomial trend maps are illustrated in [Figure 15.3](#). The number of two-dimensional polynomial trend maps are $(n + 1)^2$ which is quite large even for modest degrees n .

The default `<polynomial-type>` is `chebyshev` and the default `<polynomial-degree>` is 2. This will result in the 9 trend maps in the upper left corner in [Figure 15.3](#).

All the sets of polynomials supported by COHIBA satisfy

$$P_n(x) \in [-1, 1] \quad \text{if} \quad x \in [-1, 1].$$

This is clearly seen in [Figure 15.2](#). Also, the two-dimensional polynomials satisfy

$$P_{nm}(x, y) \in [-1, 1] \quad \text{if} \quad x \in [-1, 1] \quad \text{and} \quad y \in [-1, 1].$$

The polynomial trend maps are fitted to the `<output-grid>` by translation and stretching. An additional rotation is necessary if `<grid-azimuth>` is non-zero.

High degree polynomials depart from $[-1, 1]$ rapidly outside the square $[-1, 1] \times [-1, 1]$. We do not recommend, especially for higher degree polynomials, to trust polynomial trends beyond the area of the `<output-grid>`.

The polynomial trends use a predefined prior guess on the trend coefficients:

$$\begin{aligned} a_{00} &\sim N(1, 1) \\ a_{ij} &\sim N(0, 1) \quad \text{if} \quad i \text{ or } j > 0. \end{aligned}$$

Since interval thickness or interval velocities normally are a lot larger than 1, the polynomials are multiplied by a `<polynomial-scaling-factor>` that has a default value of 1000. It is recommended to choose a reasonable value for the scaling such as 2000 m/s or 200 m. This makes it simpler to interpret the trend coefficients that are estimated from data.

15.3 Estimating the trend coefficients

COHIBA will estimate the trend coefficients in [Eq. 15.1](#) based on well points and well paths. If `<kriging-method>` is `universal`, then COHIBA will use [generalized least squares \(GLS\)](#) to find the trend coefficients. This amounts to generalized multiple linear regression. The number of data should be significantly higher (tenfold) than the number of unknown trend coefficients to provide reliable estimates. So `<polynomial-trend>` should only be used when there is an abundance

of data. If `<kriging-method>` is bayesian, then COHIBA will use Bayesian generalized linear regression. Bayesian linear regression is a stabilized form of regression that return the prior guess if the data carry little information. So Bayesian regression also require a lot of data to provide reasonable and stable fit to data.

The choice of `<polynomial-type>` is in principle arbitrary since the final estimated trend

$$m(x, y) = \hat{a}_{00} P_{00}(x, y) + \hat{a}_{01} P_{01}(x, y) + \cdots + \hat{a}_{nn} P_{nn}(x, y)$$

provides the same polynomial if we reorganize all the coefficients. Numerical instabilities could occur, in particular if using monomials, because the different polynomial maps are almost indistinguishable in large areas and this leads to [collinearity](#). This also has the negative effect that it becomes impossible to interpret the trend coefficient estimates. The uncertainties on individual trend coefficients may become enormous but this will be compensated by other highly (negatively) correlated trend coefficients. This is why we recommend to use the Chebyshev polynomials that provide a set of two-dimensional polynomials that can be distinguished quite easily. Note however that collinearity will be a significant issue even for Chebyshev polynomials if the degree is high and the number of trend coefficients becomes comparable to the number of well points. So use the smallest `<polynomial-degree>` that provides a sufficiently detailed trend map.

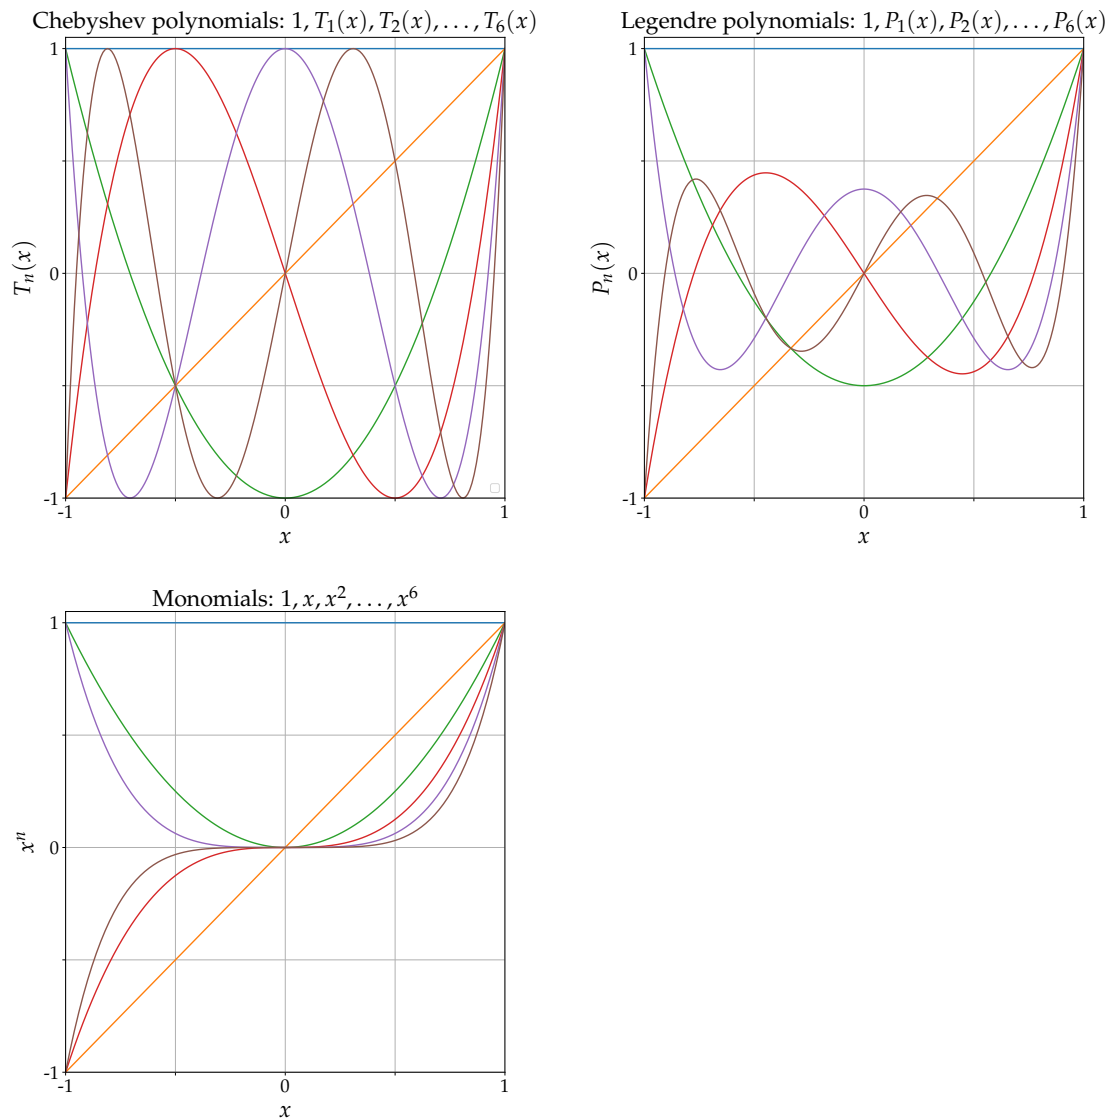


Figure 15.2. The three alternative <polynomial-type>s used to make two dimensional polynomial trend maps. Chebyshev is the default.

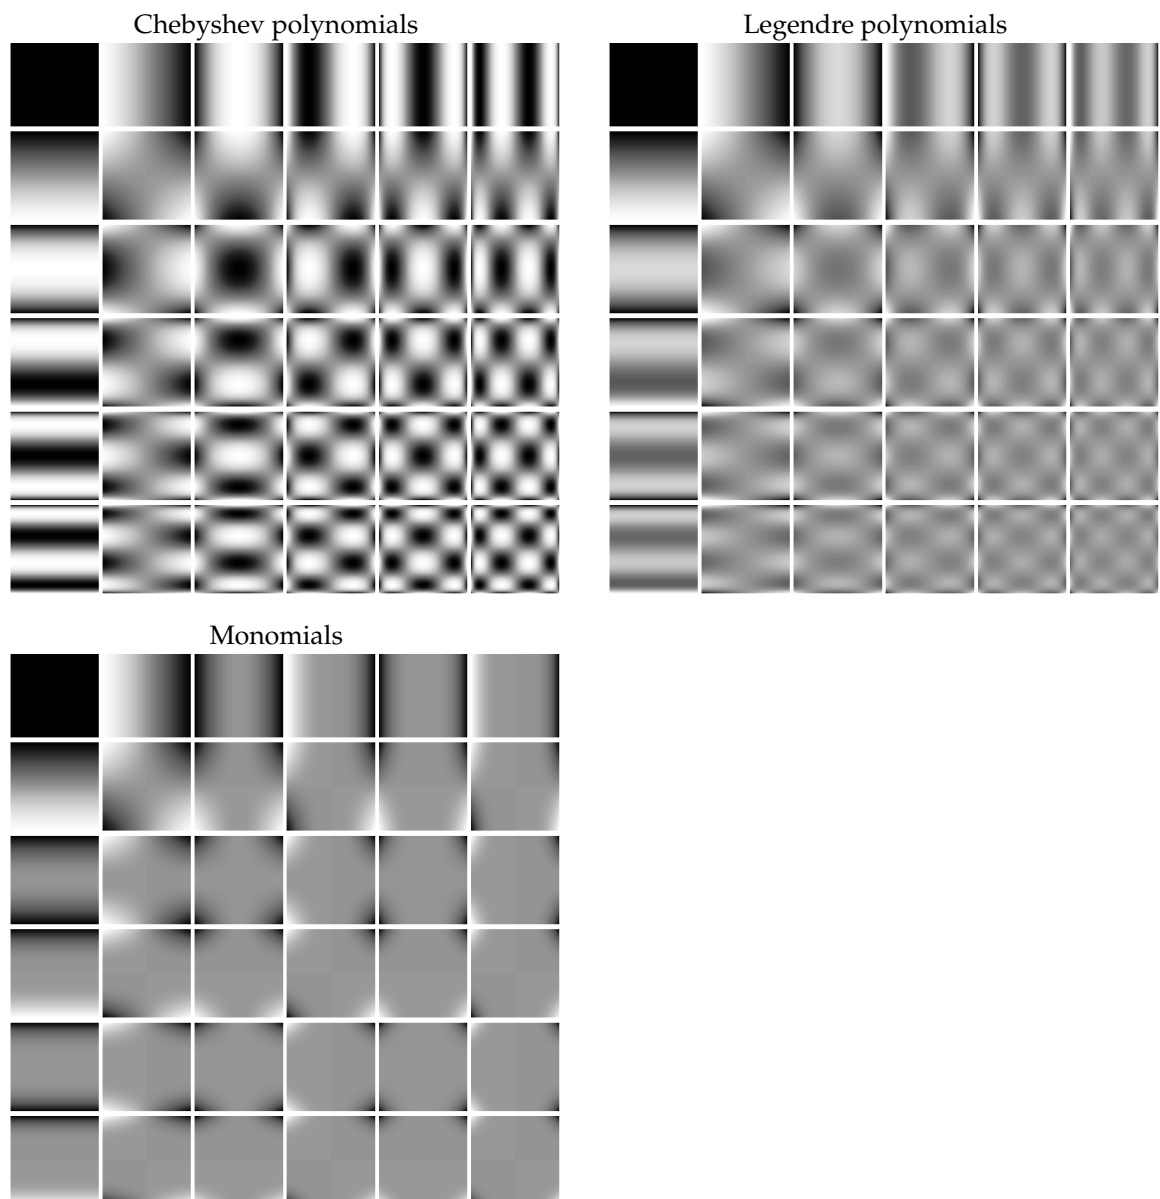


Figure 15.3. The greyscale maps show two-dimensional polynomial trend maps for each of the three `<polynomial-type>`'s. The figure illustrate the 36 trend maps for each `<polynomial-type>` that are used if `<polynomial-degree>` is set to 5. Chebyshev is the default `<polynomial-type>` since this set of trend maps appear more diverse, and the default `<polynomial-degree>` is 2. So, by default, the 9 trend maps in the upper left corner are used. The color scale is such that black is 1 and white is -1 in all maps.

16 The linear velocity model

The most commonly¹ used model for seismic velocities is the *linear velocity model* for *instantaneous velocity*². It was first described by [Slotnick \(1936\)](#) and is therefore occasionally called Slotnicks velocity model. The model describes instantaneous velocity as a linear function of *depth*:

$$(16.1) \quad v(z) = V_0 + k z,$$

where z is depth in [TVD](#) units. This model is linear in the coefficients V_0 and k . It is however non-linear in k when describing *interval velocities* as a function of seismic *travel time*, the formulation necessary for seismic depth conversion. COHIBA requires that all trend coefficients enter linearly so a solution to this is described in [Section 16.3](#).

16.1 Model specification

A typical specification for the linear velocity model looks like:

```
<interval>
  <linvel-trend>
    <linvel-reference>   reference surface </linvel-reference>
    <V0-mean>            1100             </V0-mean>
    <V0-SD>              550             </V0-SD>
    <k-mean>              0.4             </k-mean>
    <k-SD>                0.2             </k-SD>
  </linvel-trend>
</interval>
```

This makes COHIBA use the [reference](#) surface, usually [MSL](#), as the reference surface. This means that z in [Eq. 16.1](#) is the thickness of the overburden.

The prior specifications of the coefficients, V_0 and k , are specified using [<V0-mean>](#), [<V0-SD>](#), [<k-mean>](#), and [<k-SD>](#). The prior specifications are usually supported by estimates from (instantaneous) velocity logs in wells. Velocity logs are obtained from sonic logs calibrated to check-shot data, if available. COHIBA will adapt the coefficients, V_0 and k , to well points and well paths provided [<V0-SD>](#) and [<k-SD>](#) are non-zero.

The updated estimates for the trend coefficients, V_0 and k , are reported in the [COHIBA log file](#) as:

Interval	Coef	Trend map		Trend coefficients			
		TrendMean	TrendRMS	PriorMean	PriorSD	PostMean	PostSD
MSL_TopA	Vo	-	-	1100.000	550.000	1056.273	110.322
MSL_TopA	k	-	-	0.400	0.200	0.397	0.196
TopA_TopB	Vo	-	-	1700.000	850.000	1644.242	128.001
TopA_TopB	k	-	-	0.300	0.150	0.299	0.148

Trend maps are not reported since they are 1 and z . The estimates are reported similarly in [trend-estimation.csv](#).

1. According to [Al-Chalabi \(2014, p. 373\)](#) "...it remains the case that the linear function commands universal popularity and use on a scale that dwarfs all other functions put together."

2. Instantaneous velocities are the sound velocity, $\frac{dz}{dt}$, at any given point in depth. The interval velocities used in depth conversion is the average velocity $\Delta z / \Delta t$ in a particular interval. The two are closely related since $\Delta z = \int_{\Delta t} \frac{dz}{dt} dt$.

16.2 Modeling options

If instantaneous velocities only depend on the thickness of the overburden, then Eq. 16.1 is a good modeling assumption and velocity logs from different wells will align along the line defined by $v(z) = V_0 + k z$. This is illustrated by the solid dipping line in Figure 16.1 with the two colored velocity logs printed on top. The red velocity log is from Well 1 and the blue velocity is from the deeper Well 2.

If the velocity logs from different wells do not align, COHIBA offer some options. One possibility is to use 'top of interval' as `<linvel-reference>`. This is illustrated by the two parallel lines in Figure 16.2 labeled by

$$(16.2) \quad v(z) = V_0 + k(z - z'_0) \quad \text{and} \quad v(z) = V_0 + k(z - z''_0).$$

Here, z'_0 and z''_0 are the two well points at the `<top>` of the interval illustrated to the right in Figure 16.2. The modeling assumption is that V_0 and k are constant for the area of interest but that instantaneous velocity has the value V_0 at the `<top>` surface of the interval rather than at the `<reference>` surface.

A flexible alternative is to use a V_0 -map. The use of V_0 -maps is common so COHIBA has the possibility to import a V_0 -map using `<V0-mean>`.

Using V_0 -maps is similar to the previous approach since Eq. 16.2 is equivalent to

$$(16.3) \quad v(z) = V'_0 + k z \quad \text{and} \quad v(z) = V''_0 + k z,$$

where $V'_0 = V_0 + k z'_0$ and $V''_0 = V_0 + k z''_0$. This is illustrated in Figure 16.2. The z in Eq. 16.3 is the thickness of the overburden and V_0 (at `<reference>`) differ at different locations. The V_0 -map approach is general since it puts no restrictions on the choice of V_0 -maps. The downside however, is that the predictive power of a V_0 -map can be questioned so there should be some explainable trend in a V_0 -map to give some confidence to the map. If not, we recommend to let COHIBA provide the local adaption to well data.

It is also possible to use a k -map specified by `<k-mean>` but this is rarely used.

The V_0 -map is adapted to well points and well paths provided `<V0-SD>` is non-zero. The adaption is a proportional scaling of the map. The report of coefficient estimates to the COHIBA log file is almost identical when using V_0 -maps. The distinction is that the TrendSD column contains the SD of the input V_0 -map. A possible k -map is treated in the same way.

The V_0 - and k -estimates are highly dependent; they will have a strong negative correlation. The reason is quite simple and easily seen from Figure 16.1. A small change in k must be compensated by a change in V_0 to obtain the same velocity at depths that are significantly below the reference at MSL. The strong negative correlation has the effect that it is difficult to interpret the impact of the uncertainty in k and V_0 . This phenomena is known as *collinearity*. One solution is to pin down the uncertainty in k by choosing `<k-SD>` very small or zero and let V_0 get all the uncertainty. The opposite is of course also possible.

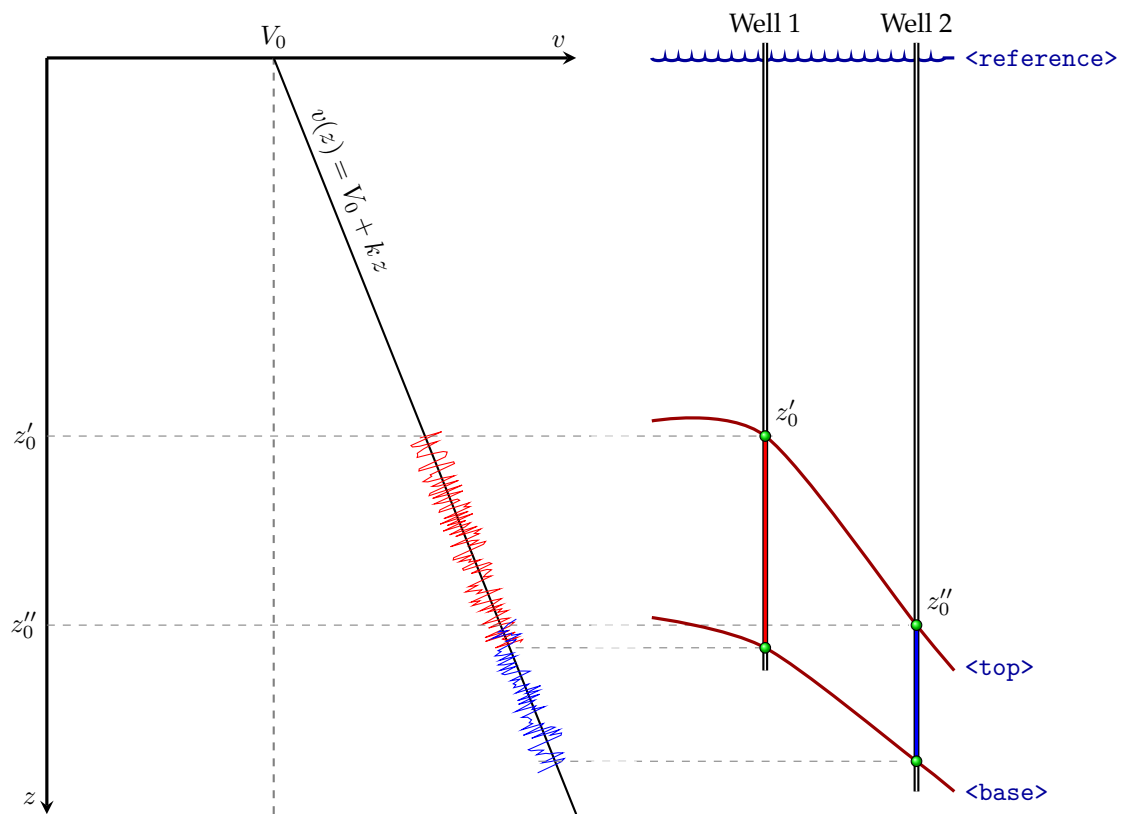


Figure 16.1. Instantaneous velocity versus depth. Velocity logs from both wells (red and blue) align along a common linear velocity model.

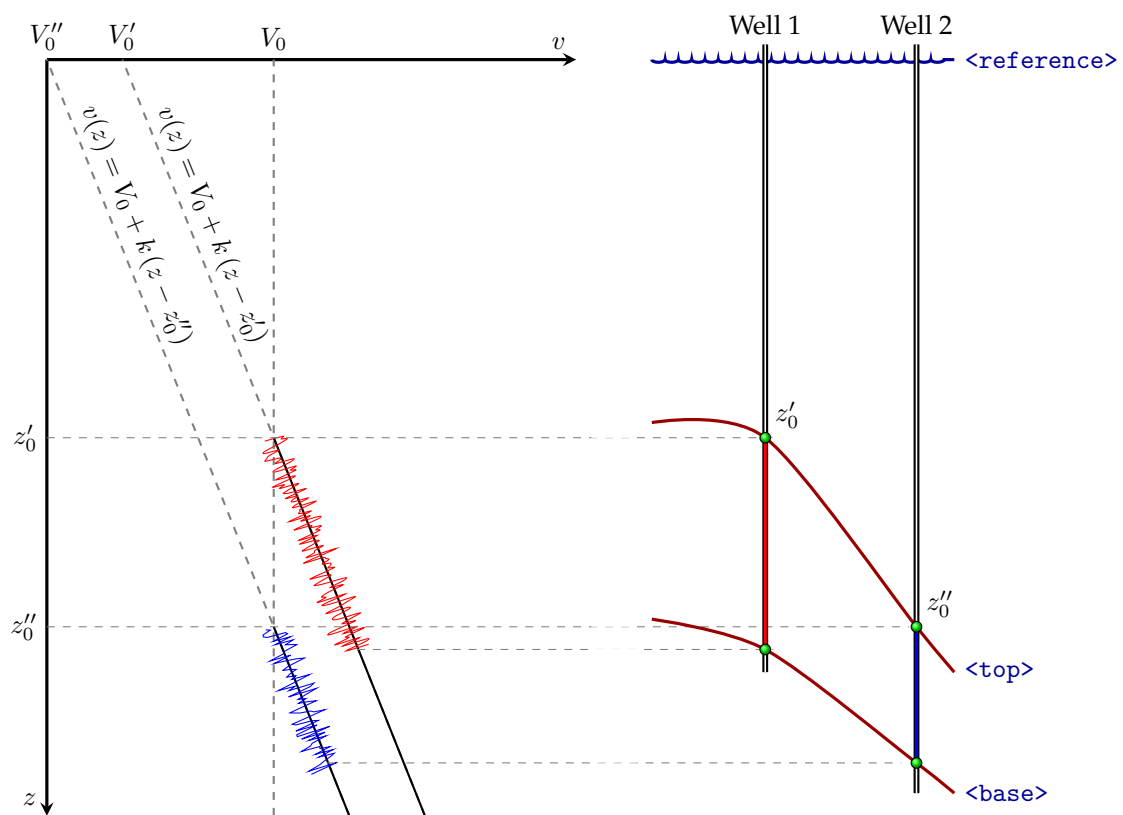


Figure 16.2. Instantaneous velocity versus depth. Velocity logs from both wells (red and blue) have the same k but different reference, z_0 or V_0 .

16.3 Linearization

The process of depth conversion requires the interval velocity as a function of known interpreted travel times. The interval velocity function obtained from Eq. 16.1 is

$$(16.4) \quad v = \frac{V_0}{k \Delta t} (e^{k \Delta t} - 1),$$

where Δt is the travel time in the interval³. Note that k do not enter linearly, so ironically, the linear velocity model does not fit into the linear framework needed by COHIBA:

$$(16.5) \quad v(x, y) = a \cdot f_a(x, y) + b \cdot f_b(x, y) + \dots$$

where a, b, \dots are the unknown *linear* trend coefficients.

A very good approximation is to linearize Eq. 16.4 into a form equal to Eq. 16.5. COHIBA provides two alternative linearizations chosen by `<linvel-expansion-type>`. The default is to make a linear expansion around the prior mean of the partly unknown coefficients, V_0 and k :

$$v = f_0(\Delta t(x, y)) + V_0 \cdot f_{V_0}(\Delta t(x, y)) + k \cdot f_k(\Delta t(x, y)).$$

The three trend functions are a function of k so the estimated values are obtained by iterating⁴ the estimation. The advantage of this linearization is that COHIBA provides estimates of V_0 and k based on all available data including all information from horizontal wells.

The alternative, and more traditional, linearization is to make a second order Taylor expansion of Eq. 16.4 around some convenient travel time \bar{t} :

$$v = a \cdot f_a(\bar{t}(x, y)) + b \cdot f_b(\bar{t}(x, y)) + c \cdot f_c(\bar{t}(x, y)).$$

The three trend coefficients are not uniquely related to V_0 and k so it is impossible to calculate V_0 and k from a, b and c . The three trend functions depend on the specified prior mean of V_0 and k . The reporting of updated estimates will use the symbols `a1`, `b1`, and `c1` for the three trend coefficients in the [COHIBA log file](#) and in `trend-estimation.csv`.

We recommend to use the default 'V0-k' expansion in `<linvel-expansion-type>` since this provides updated estimates for the coefficients, V_0 and k . These updated estimates should be compared to the estimates obtained from velocity logs for [quality control \(QC\)](#).

3. The travel time of the interval is the travel time from the surface specified as `<linvel-reference>`.

4. This amounts to a standard Gauss-Newton iteration scheme for non-linear regression problems. The linear approximation is very good so convergence only requires a few iterations and have minimal effect on CPU time.

Part IV

Reference manual

17 COHIBA model file elements

The [COHIBA model file](#) is an [Extensible Markup Language \(XML\)](#) file and has the following structure:¹

```
<cohiba>
  <project-settings>
    :
  </project-settings>
  <model-settings>
    :
  </model-settings>
  <well-data>
    :
  </well-data>
  <surfaces>
    <reference>
      :
    </reference>
    <surface>
      :
    </surface>
    :
  </surfaces>
  <intervals>
    <interval>
      :
    </interval>
    :
  </intervals>
  <volumes>
    <volume>
      :
    </volume>
    :
  </volumes>
</cohiba>
```

A complete list of all [COHIBA model file](#) elements is found in [Section 18](#). All the elements are explained in detail in the following.

<cohiba> (required)

Description: Wrapper for all other elements of the [COHIBA model file](#). This is called the root element in [XML](#) jargon.

Argument: The six main elements in the [COHIBA model file](#)

Default: No default

1. Any [XML](#) file should contain an initial line `<?xml version="1.0" encoding="UTF-8" ?>` to identify the [XML](#) version and the character encoding.

17.1 <project-settings> (required)

Description: General settings such as file name conventions, measurement units, and definition of project coordinate system.

Argument: Wrapper for elements

Default: No default

17.1.1 <project-title>

Description: A COHIBA project title.

Argument: String

Default: Empty string

17.1.2 <project-description>

Description: Detailed description of the project.

Argument: String

Default: Empty string

17.1.3 <seed>

Description: Sets the random seed for the random number generator² used in stochastic simulations. The argument is either a file name containing a random seed or a random seed. Any positive integer is accepted as a random seed. The random seed file is located in the directory specified in <project-directory>. The default name of the random seed file is `seed.dat`. When running a stochastic simulation, a new random seed is always written to the random seed file at the end of the stochastic simulation. A new file will be created if it does not exist. The new seed is the old seed plus one.

It is possible to set the random seed using `-s` on the command line (Section 4.1). This has precedence over random seeds specified in the [COHIBA model file](#) or a random seed file.

If the random seed is unspecified and the random seed file does not exist, an automatic random seed will be generated based on the system clock.

Argument: File name or positive integer less than or equal to

$2^{64} - 1 = 18\,446\,744\,073\,709\,551\,615 \approx 1.8 \times 10^{19}$ (C++ unsigned long long int)

Default: `seed.dat`

Example: Specify a random seed:

```
<seed> 123 </seed>
```

Example: Specify a random seed file:

```
<seed> myseed.dat </seed>
```

Example: Specify a random seed on the command line:

```
> cohiba.exe -s 123 model-file.xml.
```

17.1.4 <project-directory>

Description: A relative or absolute path to a COHIBA project. If a relative path is used, COHIBA must be executed from the directory the relative path refers to.

Argument: A valid path to a directory

Default: Current directory (`.` in Linux)

Example: Relative path:

```
<project-directory> my-cohiba-project/ </project-directory>
```

Example: Absolute path:

2. COHIBA uses the Mersenne Twister MT19937-64.


```
<project-directory> /path/to/projects/my-cohiba-project/ </project-directory>
```

17.1.5 <input-directory>

Description: Relative or absolute path to all COHIBA input. The relative path is relative to the project directory.

Argument: A valid path to a directory

Default: input/

Example: Relative path:

```
<input-directory> my-input/ </input-directory>
```

Example: Absolute path (can be to any location):

```
<input-directory>  
  /path/to/projects/my-cohiba-project/my input/  
</input-directory>
```

17.1.6 <input-directory-surfaces>

Description: Path to input surfaces. The path is relative to the input directory specified with [<input-directory>](#).

Argument: A valid path to a directory

Default: [surfaces/](#). If [<input-directory>](#) has been specified, the default is [./](#). See [Section 6.1](#) for more information.

Example:

```
<input-directory-surfaces> surfaces_50x50/ </input-directory-surfaces>
```

17.1.7 <input-directory-well-data>

Description: Path to well data input. The path is relative to the input directory specified with [<input-directory>](#).

Argument: A valid path to a directory

Default: [welldata/](#). If [<input-directory>](#) has been specified, the default is [./](#). See [Section 6.1](#) for more information.

Example:

```
<input-directory-well-data> wells/ </input-directory-well-data>
```

17.1.8 <output-directory>

Description: Relative or absolute path to the COHIBA output directories. These are described in [Section 7](#) and are created if they do not exist prior to execution of COHIBA.

Argument: A valid path to a directory

Default: [output/](#)

Example: Relative path:

```
<output-directory> my-output/ </output-directory>
```

Example: Absolute path:

```
<output-directory>  
  /path/to/projects/my-cohiba-project/my-output/  
</output-directory>
```

Example: Absolute path can be to any location:

```
<output-directory> /path/to/my-output/ </output-directory>
```


Table 17.1. Measurement units. The defaults are SI units.

Properties	Arguments	Unit	Modified by
Lateral distance:	m	meter	<xyz-unit>
Surface depth, TVD , MD , interval, thickness, and rock column height:	m ft U.S. feet	meter feet U.S. (survey) feet	<z-unit> <xyz-unit>
Travel time:	s ms	second millisecond	<time-unit>
One-way or two-way travel time:	yes / no		<two-way-time>
Seismic interval velocity:	m ft	meters per second feet per second ^a	<z-unit> <xyz-unit>
Volume	m ³	cubic meters	

a. If vertical depth is measured in feet.

17.1.9 <number-of-threads>



Description: Specifies the number of [threads](#) (parallel processes on a [CPU](#)) that will be used when computing in parallel³. The possibilities are:

$$\begin{aligned}
 n > 0 : & \text{ Number of threads} = \min(n, \text{max}) \\
 n = 0 : & \text{ Number of threads} = \text{max} \\
 n < 0 : & \text{ Number of threads} = \max(1, (\text{max} - |n|)),
 \end{aligned}$$

where *max* is the maximum number of threads available⁴. The usual maximum number of threads are 2 to 8 for laptops, 4 to 16 for desktops, and possibly a lot more for servers. We recommend to use the maximum number of threads on laptops and desktops. The actual number of threads used are reported in the [COHIBA log file](#) as:

Threads in use : 7 / 8

where, in this case, 7 threads out of a maximum of 8 threads have been used.

Argument: Integer

Default: 0 (use all available threads)

Example: Use at most four threads (processors):

```
<number-of-threads> 4 </number-of-threads>
```

Example: Save one thread (processor) for other use:

```
<number-of-threads> -1 </number-of-threads>
```

17.1.10 <measurement-units>

Description: Wrapper for specifying measurement units. See [Table 17.1](#) for available units.

Argument: Elements for each unit type

Default: Void

3. The kriging operations, estimation of residual uncertainty and the data loading is computed in parallel. The kriging computations usually take 90–95 % of the [CPU](#) time. Tests have shown that the efficiency of running the kriging operations in parallel depends on the problem. We have seen perfect scaling in some cases but not in all. Many Intel [CPUs](#) supports [hyper-threading](#). This means that there can be two threads on each physical [CPU](#) core. Our experience is that the kriging calculations has no benefit from the additional hyper-threads because each core is fully occupied by a single thread.

4. COHIBA uses the [OpenMP](#) API for parallelization..

17.1.10.1 <z-unit>

Description: Unit for surface depth, [TVD](#), [MD](#), interval thickness, and rock column height. This unit is used for well data, output surfaces, interval thicknesses and column maps. Options are meters, feet or U.S. (survey) feet. Seismic interval velocity will be measured in feet per second if feet is chosen. Conversion factors are: 1 ft = 0.3048 m and 1 U.S. (survey) ft = 1200/3937 m = 0.304800609601219 m. . Cannot be used in combination with [<xyz-unit>](#).

Argument: m / ft / U.S. ft

Default: m

17.1.10.2 <xyz-unit>

Description: Unit for the same quantities as in [<z-unit>](#), as well as lateral length. Cannot be used in combination with [<z-unit>](#).

Argument: m / ft / U.S. ft

Default: m

17.1.10.3 <time-unit>

Description: Unit of time. Seconds or milliseconds.

Argument: s / ms

Default: s

17.1.10.4 <two-way-time>

Description: A flag controlling whether the input time grids are given in one-way or [two-way travel time](#) (TWT). (The default is one-way.)

Argument: yes / no

Default: no

17.1.11 <output-grid> (required)

Description: Container for elements specifying grid dimensions and grid resolution for the output grids.⁵ The dimensions can be read from a grid file using [<read-from-file>](#) or be specified using the elements [<xinc>](#), [<xlength>](#), [<yinc>](#), and [<ylength>](#). The number of grid nodes are calculated using

$$(17.1) \quad n_x = x_{\text{length}}/x_{\text{inc}} + 1 \quad \text{and} \quad n_y = y_{\text{length}}/y_{\text{inc}} + 1.$$

The rotation of the grids is specified using [<grid-azimuth>](#). See [Figure 17.1](#) for an overview.

Argument: Elements specifying grid dimensions

Default: No default

17.1.11.1 <format>

Description: Output format. See [Section 6.2](#) for possible file formats.

Argument: roxar binary / roxar text / storm

Default: roxar binary

17.1.11.2 <read-from-file>

Description: Use the specified grid file to define the dimension and resolution of the output grids. Valid arguments are any surface file in the input directory or a surface file with full path. The file format is either [ROXAR BINARY](#), [ROXAR TEXT](#) or [STORM BINARY](#). The file format is automatically detected.

Argument: Surface file name

Default: No default

Example: Reads grid definition from file dS_IsochoreA.storm in the default input directory:

5. Input grids can have different formats, resolutions, and dimensions. Input grids will be regridded to match the output grid dimension and resolution. Regridding is done by bilinear interpolation, see [Section 20.6.1](#).

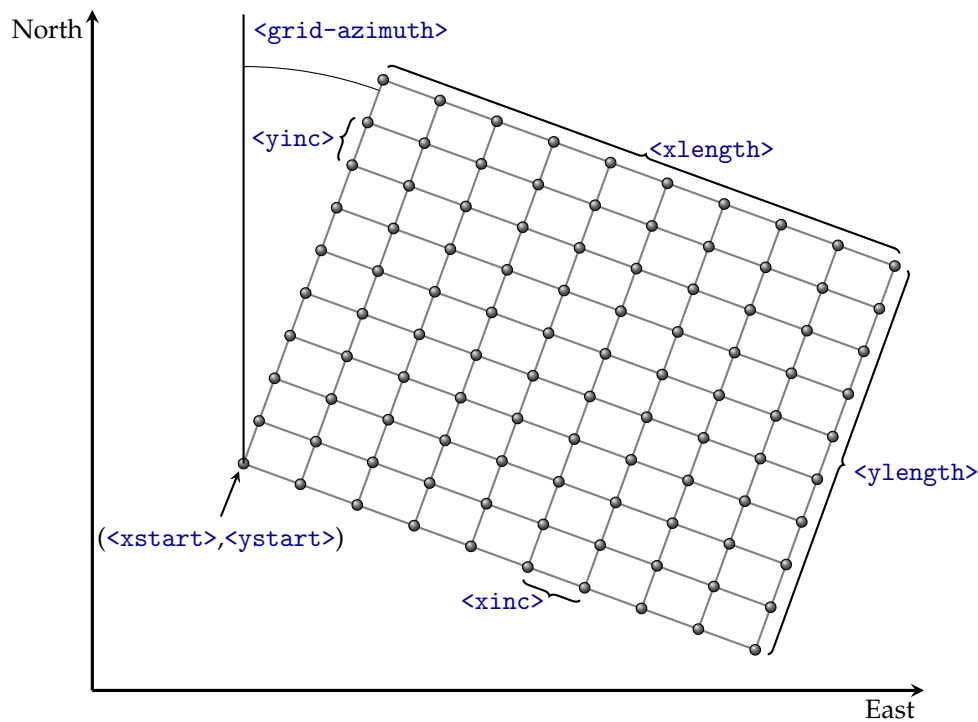


Figure 17.1. Elements used to specify the output grid definition: `<grid-azimuth>`, `<xinc>`, `<yinc>`, `<xlength>`, `<ylength>`, `<xstart>` and `<ystart>`. Note that using `<read-from-file>` is simpler. The surfaces are defined at the grid nodes (gray bullets). COHIBA uses bilinear interpolation (Section 20.6.1) to approximate the surfaces inside the rectangles.

```
<output-grid>
  <format>          roxar binary          </format>
  <read-from-file> dS_IsochoreA.storm </read-from-file>
</output-grid>
```

Note that the file format of `dS_IsochoreA.storm` may differ from the specified output format. If the `<format>` element is omitted, the output format is set equal to that of `dS_IsochoreA.storm`.

17.1.11.3 `<xstart>`

Description: X-coordinate at reference point. (Typically the lower left corner of the grid.) See Figure 17.1.

Argument: Real

Default: No default

17.1.11.4 `<ystart>`

Description: Y-coordinate at reference point. (Typically the lower left corner of the grid.) See Figure 17.1.

Argument: Real

Default: No default

17.1.11.5 `<xinc>`

Description: X-increment. Size of grid cell in x-direction. See Figure 17.1.

Argument: Positive real

Default: No default

17.1.11.6 <yinc>

Description: Y-increment. Size of grid cell in y-direction. See [Figure 17.1](#).

Argument: Positive real

Default: No default

17.1.11.7 <xlength>

Description: Length of grid in the x-direction. See [Figure 17.1](#).

Argument: Positive real

Default: No default

17.1.11.8 <ylength>

Description: Length of grid in the y-direction. See [Figure 17.1](#).

Argument: Positive real

Default: No default

17.1.11.9 <grid-azimuth>

Description: Azimuth angle for rotated grids. Angle is measured clockwise from north in degrees (360°). The center of the rotation is the reference point set by <xstart> and <ystart>. See [Figure 17.1](#).

Note that this option only works for files using the [ROXAR BINARY](#) and [ROXAR TEXT](#) grid formats (see [Section 6.2](#)).

Argument: Real

Default: 0.0

Example: Grids rotated 15° clockwise from north:

```
<output-grid>
  <format> roxar binary </format>
  <xstart>      0.0 </xstart>
  <xlength>     5000.0 </xlength>
  <ystart>      0.0 </ystart>
  <ylength>    10000.0 </ylength>
  <xinc>        100.0 </xinc>
  <yinc>        100.0 </yinc>
  <grid-azimuth> 15.0 </grid-azimuth>
</output-grid>
```

17.1.12 <messages>

Description: Wrapper for elements specifying logging output levels to log file and screen. Available logging levels are:

- 0: No messages reported.
- 1: Errors reported.
- 2: Warnings reported.
- 3: Information messages reported. (Default)
- 4: Detailed information reported.
- 5: Very detailed information reported (mainly for debugging purposes).

The output information accumulate so that level 5 includes everything reported on level 4 and so on everything reported on level 4 and so on.

Argument: Elements specifying output to log file and screen

Default: Void

17.1.12.1 <logfile>

Description: Wrapper for elements describing the output to the [COHIBA log file](#). The log file is written to the [log-files/](#) directory, under the output directory.

Argument: Elements specifying output to the [COHIBA log file](#).

Default: Void

17.1.12.1.1 <name>

Description: A string describing the name of the [COHIBA log file](#).

Argument: String

Default: [cohiba.log](#)

17.1.12.1.2 <detail-level>

Description: Wrapper for elements specifying the level of detail in the [COHIBA log file](#). Each element can be set individually.

Argument: Elements for each section in the log file

Default: Void

17.1.12.1.2.1 <overall>

Description: Level of detail in output to the [COHIBA log file](#). The levels are:

0. **Off:** No logging at all.
1. **Severe:** Only errors are reported.
2. **Warning:** Errors and warnings are reported.
3. **Low:** Important information messages are also reported. (Default)
4. **Medium:** Detailed information messages are reported.
5. **High:** Even some debugging messages are reported.

Note that the [COHIBA log file](#) can be very large when using the two highest levels. This level can be overruled within each output section mentioned below. See [Section 7.2.2](#) for a brief explanation of each section.

Argument: 0 – 5

Default: 3

17.1.12.1.2.2 <model-settings>

Description: Level of detail in model settings output.

Section title: [Section 1: Model settings](#)

Argument: 0 – 5

Default: Value set by [<overall>](#)

17.1.12.1.2.3 <data-loading>

Description: Level of detail in reporting data loading.

Section title: [Section 2: Loading input data](#)

Argument: 0 – 5

Default: Value set by [<overall>](#)

17.1.12.1.2.4 <pre-processing>

Description: Level of detail in reporting pre-processing of input data.

Section title: [Section 3: Pre-processing input data](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.5 <surface-models>

Description: Level of detail in reporting of surface models and possible multiple models for surfaces. See [Figure 11.3](#) for an example of the output. There is no output if this level is less than 3.

Section title: [Section 4: The alternative ways to build each surface](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.6 <well-points>

Description: Level of detail in reporting the processing of well points.

Section title: [Section 5: Processing well points](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.7 <extra-points>

Description: Level of detail in reporting the processing control points for eroded and onlapping surfaces.

Section title: [Section 6: Processing erosion/onlap constraints](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.8 <distance-points>

Description: Level of detail in reporting the distance points.

Section title: [Section 7: Processing distance constraints](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.9 <well-branching>

Description: Level of detail in reporting of how different well branches are connected into a single multilateral well.

Section title: [Section 8: Well branching](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.10 <well-paths>

Description: Level of detail in reporting the processing of zone logs along well paths.

Section title: [Section 9: Sampling well paths and logs](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.11 <trend-coefficients>

Description: Level of detail in reporting trend coefficients.

Section title: [Section 10: Trend coefficients based on well\[/distance\] points points](#)

Section title: [Section 16.x Trend coefficients based on well\[/distance\] points and well paths](#)

Argument: 0 – 5
Default: Value set by <overall>

17.1.12.1.2.12 <residual-uncertainties>

Description: Level of detail in reporting match between specified and observed residual uncertainties.

Section title: [Section 11: Checking specified residual uncertainties](#)

Argument: 0 – 5
Default: Value set by <overall>

17.1.12.1.2.13 <outliers>

Description: Level of detail in reporting match between well points and trend models.

Section title: [Section 12: Well\[/distance\] points quality control](#)

Argument: 0 – 5
Default: Value set by <overall>

17.1.12.1.2.14 <dip-points>

Description: Level of detail in reporting of dip points.

Section title: [Section 13: Processing dip constraints](#)

Argument: 0 – 5
Default: Value set by <overall>

17.1.12.1.2.15 <well-point-conditioning>

Description: Level of detail in reporting of errors in conditioning (kriging).

Section title: [Section 14.x: Conditioning on well\[/distance/dip\] points along well paths](#)

Argument: 0 – 5
Default: Value set by <overall>

17.1.12.1.2.16 <help-points>

Description: Level of detail in reporting of searching for surface help points sampled along the well paths.

Section title: [Section 15.x: Finding surface constraints for well path conditioning](#)

Argument: 0 – 5
Default: Value set by <overall>

17.1.12.1.2.17 <well-path-conditioning>

Description: Level of detail in reporting of errors from well points sampled along well path.

Section title: [Section 17.x: Conditioning surfaces on all available points](#)

Argument: 0 – 5
Default: Value set by <overall>

17.1.12.1.2.18 <target-point-qc>

Description: Level of detail in report target point QC.

Section title: [Section 18.x: Target point quality control](#)

Argument: 0 – 5
Default: Value set by <overall>

17.1.12.1.2.19 <post-processing>

Description: Level of detail in report post processing. The post processing handles erosion, onlapping, pinch outs, and gridding mismatches.

Section title: [Section 19.x: Post-process surfaces](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.20 <zonation-checking>

Description: Level of detail in report on checking zonation.

Section title: [Section 20.x: Checking zonation](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.21 <updated-well-paths>

Description: Level of detail in report on updated well paths.

Section title: [Section 21.x: Updated well paths](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.22 <spill-points>

Description: Level of detail in report on spill point detection.

Section title: [Section 22.x: Spill points](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.23 <volume-calculations>

Description: Level of detail in report on volume calculations.

Section title: [Section 23.x: Volume calculations](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.24 <interval-export>

Description: Level of detail in report on interval export.

Section title: [Section 24.x: Make and export interval thickness maps and velocities](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.25 <surface-export>

Description: Level of detail in report on surface export.

Section title: [Section 25.x: Export surfaces](#)

Argument: 0 – 5

Default: Value set by <overall>

17.1.12.1.2.26 <timings>

Description: Level of detail in report on CPU time usage.

Section title: [Section 26: Timings summary](#)

Argument: 0 – 5

Default: Value set by [<overall>](#)

17.1.12.1.2.27 [<tasks>](#)

Description: Level of detail in report on tasks.

Section title: [Section 27: Suggested tasks](#)

Argument: 0 – 5

Default: Value set by [<overall>](#)

17.1.12.2 [<screen>](#)

Description: Wrapper for elements describing the output to screen (monitor).

Argument: Elements specifying output to screen

Default: Void

17.1.12.2.1 [<detail-level>](#)

Description: Wrapper for elements specifying the level of detail in the output logging to screen.

Each element can be set in the same way as the output levels for the [COHIBA log file](#).

Argument: Elements corresponding to the different sections of logging. See the sub-elements of [<detail-level>](#) for the [COHIBA log file](#) for details.

Default: Void

17.1.13 [<write-expert-files>](#)

Description: This option makes COHIBA generate the [expert/](#) directory with its subdirectories that contain numerous output files meant for QC and error checking. This output is mainly used by the COHIBA developers. See [Figure 6.1](#) for the name of the subdirectories.

Argument: yes / no

Default: no

17.1.14 [<additional-output-control>](#)

Description: Wrapper for output control related to intermediate results and formatting in general.

Argument: Elements specifying output

Default: Void

17.1.14.1 [<write-all-logfiles>](#)

Description: This option makes it possible to suppress writing of log-files for well points, average statistics, trend estimation and surface help points. It is primarily intended to avoid writing a lot of files when generating multiple realizations when using stochastic simulation [<mode>](#).

Argument: yes / no

Default: yes

17.1.14.2 [<write-realization-maps>](#)

Description: Turns on or off the writing of maps to file for individual simulated realizations. See [Table 7.1](#) for a list of possible maps. Average and empirical SD maps are not affected. Choosing no may save a lot of disc space.

The realization numbers are added to the standard file names:

```
d_TopA_0001.rxb, d_TopA_0002.rxb, ...  
trap_TopA_0001.rxb, trap_TopA_0002.rxb, ...  
v_MSL-TopA_0001.rxb, v_MSL-TopA_0002.rxb, ...
```


Additional digits will be added for realizations beyond realization number 9 999.

This option has no consequence for prediction [<mode>](#).

Argument: yes / no

Default: yes

17.1.14.3 [<write-xyz-point-files>](#)

Description: COHIBA can write a lot of xyz-point files (extension [.xyz](#)). These files are potentially numerous and not always needed so they are by default not written. The export of these files are triggered by choosing yes

Argument: yes / no

Default: no

17.1.14.4 [<write-correlation-files>](#)

Description: Turns on or off the writing of [posterior-correlation-matrix.dat](#) and [residual-correlation-matrix.dat](#) (if [<correlated-intervals>](#)).

NEW in 7.0

Argument: yes / no

Default: no

17.1.14.5 [<write-scaled-input-isochores>](#)

Description: COHIBA can pre-process input isochores and scale them to fit seismic envelopes (see [<scale-isochores-to-seismic-envelopes>](#)). Export of these scaled isochores are triggered by choosing yes. Exported isochores are prefixed with Scaled_.

Argument: yes / no

Default: no

17.1.14.6 [<write-scaled-input-SD-isochores>](#)

Description: COHIBA can pre-process input isochore uncertainties and scale them relative to the seismic envelope (see [<weight-isochore-package-above>](#)). Export of these scaled isochore uncertainties are triggered by choosing yes. Exported isochore uncertainties are prefixed with Scaled_SD_.

Argument: yes / no

Default: no

17.1.14.7 [<write-filtered-velocity-trends>](#)

Description: Smoothed velocity trends (see [<smoothing-factor-velocity-trends>](#)) may be exported by setting this value to yes.

Argument: yes / no

Default: no

17.1.14.8 [<write-filtered-SD-maps>](#)

Description: Smoothed uncertainty maps (see [<smoothing-factor-SD-maps>](#)) may be exported by setting this value to yes.

Argument: yes / no

Default: no

17.1.14.9 [<write-regridded-input-maps>](#)

Description: Input maps that are regridded to fit the output grid as described in [Section 20.6.1](#) may be exported by setting this value to yes. Exported maps are prefixed with Regridded_.

Argument: yes / no

Default: no

17.1.14.10 <write-unfiltered-output-velocities>

Description: Calculated velocities are smoothed according to the value of [<smoothing-factor-calculated-velocities>](#). The non-smoothed velocities may be exported by setting this value to yes. Exported maps are prefixed with Unfiltered_v_.

Argument: yes / no

Default: no

17.1.14.11 <write-wells>

Description: Wells with zone logs are written to [well-logs/](#).

Argument: yes / no

Default: no (yes if [<allow-wells-to-move>](#) is set to yes.)

17.1.14.12 <prefix-for-log-files>

Description: Specification of prefix for *all* log files.

Argument: String

Default: Empty string

17.1.14.13 <csv-file-style>

Description: Choose possible styles (file formats) used for [comma-separated-values \(CSV\)](#) files (extension [.csv](#)). For import into spreadsheets it is recommended to use any of the character-separated formats such as comma-separated. In the character-separated formats all other white space characters between values are removed so the files are hard to read in normal text editors. The fixed width option can be readably visualized in any text editor but is not recommended for importing into spreadsheets.

Argument: comma-separated / semicolon-separated / tab-separated / fixed width

Default: comma-separated

17.1.14.14 <anonymize-output>

Description: When activated, surface and wells get anonymous names in important output. Names become TopA, TopB, ..., TopZ. If there are more than 26 surfaces or wells, the names use digits: Well11, Well12, ..., Wellijkl.

Argument: yes / no

Default: no

17.1.14.15 <add-active-attribute-to-output>

NEW in 7.0

Description: This attribute is used when surfaces are extrapolated beyond fault blocks for use in ROXAR RMS. The attribute active/inactive is added to surface output files when using the [ROXAR PATCH BINARY](#) format. The inactive grid nodes are the grid nodes with values extrapolated outside a fault block (patch).

Argument: yes / no

Default: yes

17.2 <model-settings>

Description: Wrapper for elements determining the methods and algorithms used.

Argument: Elements specifying overall modeling settings.

Default: No default

17.2.1 <mode>

Description: The default mode is prediction, that is, to generate a deterministic set of most likely surfaces using *kriging*.

Stochastic realizations are generated if `simulation` is chosen. The number of stochastic realizations are chosen by [<number-of-realizations>](#).

The estimation mode gives the possibility to run through the initial estimation of the trend coefficients without entering the more time consuming generation of surfaces.

Argument: prediction / simulation / estimation

Default: prediction

17.2.2 <kriging-method>

Description: The three available kriging methods to be used. *Simple kriging* assumes known trend coefficients. *Universal Kriging* assumes the trend coefficients are unknown and fits them to well data. This method fails if there are too few well data. *Bayesian Kriging* assumes the trend coefficients are partly known (expectation and [SD](#) specified) and adapts the trend coefficients to well data. This method is robust and works for any number of well data. If there is a lot of well data, Bayesian kriging will be very similar to universal kriging. Note that this will also affect stochastic simulation.

See [Part V](#) for more details.

Argument: simple / bayesian / universal

Default: bayesian

17.2.3 <number-of-realizations>

Description: Number of realizations for stochastic simulation [<mode>](#).

Argument: Positive integer

Default: 1

17.2.4 <condition-to-well-paths>

Description: Starts a method that move surfaces so that they are in correspondence with the zonation points. The algorithm will make surface constraints at zonation points when needed to ensure consistency between zonation points and surfaces. If speed is critical set the value to no.

Argument: yes / no

Default: yes

17.2.5 <allow-wells-to-move>

Description: This gives COHIBA the possibility of taking into account the well path [TVD](#) uncertainty. The consequence is that the [TVD](#) values are updated along the well path to make wells consistent with the surfaces. This flag is only relevant if [<condition-to-well-paths>](#) is set to yes (default). The well path [TVD](#) uncertainty can be specified by [<wellpath-TVD-SD-log-name>](#). If [<wellpath-TVD-SD-log-name>](#) is not specified a parametric well path [TVD](#) uncertainty log is automatically generated. The magnitude of the automatically generated uncertainty log can be adjusted using [<wellpath-TVD-SD-increase-rate>](#). The updated [TVD](#) values are written to [well-logs/](#). See [Section 7.6](#).

Argument: yes / no

Default: no

17.2.6 <condition-to-surface-dip>

NEW in 7.0

Description: Available dip information will be used to ensure that surfaces have correct dip at well points with dip data. See [Section 8.6](#) for more details.

Argument: yes / no

Default: yes

17.2.7 <check-specified-residual-uncertainties>

Description: Turns on or off the estimation of residual uncertainty. This can be a time consuming calculation and is not necessary when the specified residual uncertainties are considered correct. This calculation use parallel processes if COHIBA uses more than one thread. See [<number-of-threads>](#) for details.

Argument: yes / no

Default: yes

17.2.8 <cross-validate-wells>

Description: COHIBA will, in turn, remove every well from calculations, and estimate the difference between well points in the removed well and the predicted surfaces. Output is written to [mismatch-data.csv](#), [rmse-mismatch-surfaces.csv](#) and [rmse-mismatch-wells.csv](#) in the [cross-validation/](#) directory. All other output except from a minimal version of the [COHIBA log file](#) is suppressed when running cross validation.

The cross validation can, for instance, be used to compare a set of depth conversion models according to their prediction accuracy.

Argument: yes / no

Default: no

17.2.9 <minimize-broken-zonation>

Description: COHIBA selects and use a set of zonation points along the well paths to constrain the surfaces. See [Section 23](#) for details. In certain cases, the selected zonation points are insufficient to ensure that all zonation points along the well paths are consistent with the surfaces. In particular, some of the selected zonation points may cause some non-selected zonation points to become inconsistent. These are called *broken zonation points*. The number of broken zonation points are reported in 'Section 20.x: Checking zonation' in the [COHIBA log file](#). Choosing Yes tells COHIBA to add the broken zonation points to the selected zonation points and repeat the process of conditioning surfaces to the well data. Note that each iteration will increase the execution time significantly. The maximum number of iterations is set by [<max-iterations-to-avoid-broken-zonation>](#).

Argument: yes / no

Default: no

17.2.10 <add-uncertainty-to-severe-outliers>



Description: Well point TVD pick uncertainty is by default added to well points if they are classified as severe outliers. Choose no to avoid adding this pick uncertainty. The threshold for classification of severe outliers is set by [<t-value-severe-outlier>](#).

If [<include-all-well-points-in-kriging>](#) or [<include-all-distance-points-in-kriging>](#) is yes then this element is set to no.

Argument: yes / no

Default: yes

17.2.11 <include-all-well-points-in-kriging>



Description: All well points that are classified as error or extreme error are excluded from all calculations. Choosing yes includes such well points in the kriging step. The threshold for classifying a well point or well path constraint as an error or extreme error is set by <t-value-error> and <t-value-extreme-error>.

Argument: yes / no

Default: no

17.2.12 <include-all-distance-points-in-kriging>



NEW in 7.0

Description: All distance points that are classified as error or extreme error are excluded from all calculations. Choosing yes includes such distance points in the kriging step. The threshold for classifying a distance point as an error or extreme error is set by <t-value-error> and <t-value-extreme-error>.

Argument: yes / no

Default: no

17.2.13 <air-interpretations-present>



NEW in 7.0

Description: The intention of this is to allow the use of air-interpreted travel-time surfaces. The result can be crossing output surfaces. If yes, then a set of actions are taken:

1. <make-time-surfaces-consistent> in <pre-process-surfaces>, <treat-reflectors-as-eroding-and-onlapped> in <post-process-surfaces> and <make-average-of-crossing-surfaces> in <post-process-surfaces> are all set to no.
2. Warnings and error messages regarding crossing surfaces are turned off.
3. Reported time map statistics (minimum, average and maximum) will only be calculated for non-air-interpreted parts. Air-interpreted parts can be set to undefined or equal to erosive surface. This is currently controlled by <set-eroded-nodes-to-undefined> (default is no).

Argument: yes / no

Default: no

17.2.14 <pre-process-surfaces>

Description: Wrapper for elements controlling pre-processing of surfaces.

Argument: Elements controlling pre-processing.

Default: Void.

17.2.14.1 <make-time-surfaces-consistent>

Description: When set to yes, COHIBA makes seismic reflectors consistent by letting the upper travel times erode the deeper travel times. Truncated time surface maps are written to files prefixed by time_truncated_.

This element is set to no if <air-interpretations-present> is set to yes.

Argument: yes / no

Default: no

17.2.14.2 <scale-isochores-to-seismic-envelopes>

Description: When both seismic reflectors and isochores are given as input to COHIBA, there is no guarantee that they are consistent. Isochore packages may, for instance, be too large and force faults to open up. For this not to happen, the isochore uncertainties have to be smaller than the reflector uncertainties in the fault region. Alternatively, the isochores should be pre-adjusted to the seismic envelope. Choosing yes for this element, COHIBA will scale all

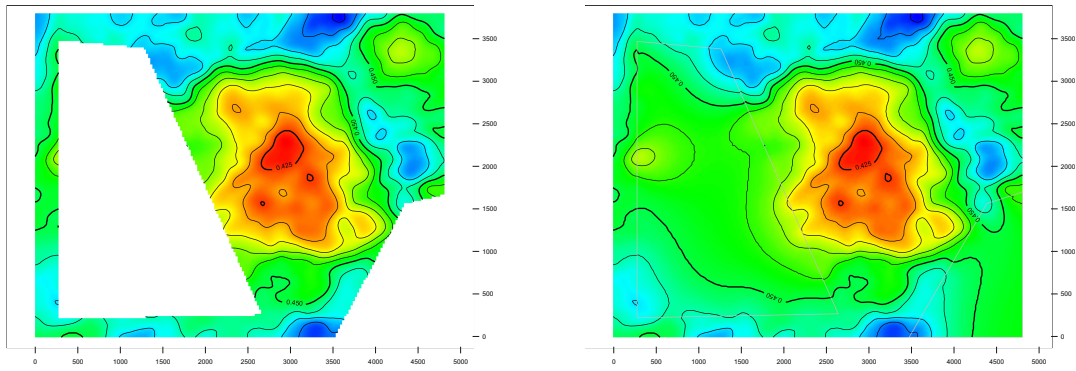


Figure 17.2. Original travel time map to the left with missing areas. Extrapolated travel time map to the right. The default extrapolation method (kriging with 1000 m range) has been used.

isochores in an isochore package with a factor

$$(17.2) \quad f(x, y) = \frac{\text{seismic envelope thickness } (x, y)}{\text{isochore package thickness } (x, y)}$$

The scaled isochores can be exported using `<write-scaled-input-isochores>`. If the seismic envelope consist of depth surfaces (no travel times given) then `<reflector>` must be set to yes for this option to have any effect.

Argument: yes / no

Default: no

17.2.14.3 `<extrapolate-input-surfaces>`

Description: Areas with missing codes in input trend maps, travel time and SD maps will be replaced by extrapolated values. This has the consequence that output surfaces will be defined everywhere. There are two alternative extrapolation methods, kriging and inverse-distance-interpolation that are specified by `<extrapolation-method>`. See Figure 17.2 for an example using default values. The extrapolated maps are written to `extrapolation/` if `<write-expert-files>` is set to yes.

Extrapolating values introduces uncertainty in the extrapolated areas. This is handled by locally increasing the SD values of relevant residual maps. The increase depends on distance to known trend values. The maximum increase is `<extrapolation-SD-factor>` times the local SD value. Note that this applies to travel time residuals, thickness residuals and interval velocity residuals individually.

In the situation where there are multiple models for any surface, the huge residual uncertainties in the extrapolated areas will effectively make non-extrapolated trend models dominate totally. This is the way it is intended to be.

Argument: Turns on input surface extrapolation. Container for optional elements controlling extrapolation method.

Default: Void

Example: Just turning on extrapolation:

```
<extrapolate-input-surfaces> </extrapolate-input-surfaces>
```

Example: Turning on extrapolation and reducing kriging range to 500 meters:

```
<extrapolate-input-surfaces>
    <extrapolation-kriging-range> 500 </extrapolation-kriging-range>
</extrapolate-input-surfaces>
```




17.2.14.3.1 <extrapolation-method>

Description: Choosing among the kriging or inverse-distance-weighting methods for extrapolation. Kriging uses an general exponential correlation function with power 1.5. The range is specified using <extrapolation-kriging-range>. Inverse distance weighting ([Wikipedia](#)) is controlled by a power parameter that can be modified by <extrapolation-inverse-distance-weighting-power>.

Argument: kriging / inverse-distance-weighting

Default: kriging



17.2.14.3.2 <extrapolation-kriging-thinning-correlation>

Description: The number of points along the edge of an undefined area is large. To speed up kriging, it is possible to remove highly correlated points. The thinning removes points that correlated above this correlation threshold.

Argument: Real in $[0, 1]$

Default: 0.9



17.2.14.3.3 <extrapolation-kriging-range>

Description: Variogram range in kriging extrapolation method.

Argument: Positive real (in meters)

Default: 1000



17.2.14.3.4 <extrapolation-inverse-distance-weighting-power>

Description: The inverse distance weighting extrapolation method is controlled by a *power parameter* (see [Wikipedia](#)).

Argument: Positive real

Default: 2.0



17.2.14.3.5 <extrapolation-SD-factor>

Description: The increase in residual uncertainty maps are calculated using the prediction uncertainty σ^* in [Eq. 20.42a](#) with unit variance. The increased SD value is $SD \cdot (1 + c \sigma^*)$, where c is the specified factor. The Gaussian correlation function and range given by <extrapolation-kriging-range> is used. See [Figure 17.3](#) for an illustration.

Argument: Non-negative real

Default: 10

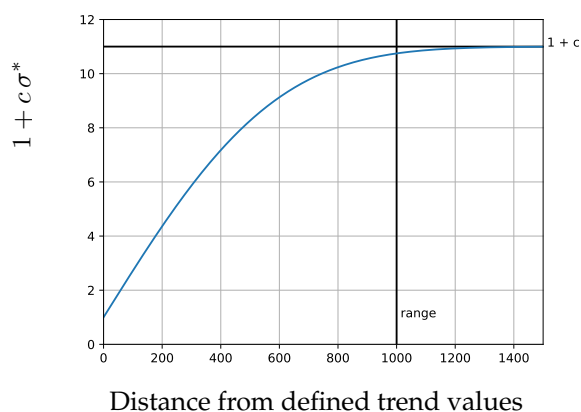


Figure 17.3. Increase in residual SD in areas with extrapolated trend maps. The default value $c = 10$ is used in the figure. The SD increases until it reaches the range given by `<extrapolation-kriging-range>` where it flattens at $1 + c$ times the original local SD value. The factor c is specified by `<extrapolation-SD-factor>`.

17.2.14.4 `<smoothing-factor-velocity-trends>`



Description: Sometimes the input velocity trend maps contains large fluctuations or irregularities. Smoothing the maps on input will in such situations give more realistic velocity trends by filtering out high frequencies. This factor decides how much smoothing is performed. 0 means no smoothing, leaving the input map unchanged. 1 means full smoothing giving a constant (the mean). If input maps show a low-frequent behaviour, even quite high values of the smoothing factor will keep the maps unchanged. After the smoothing, a check is performed to decide if smoothing makes a significant impact.⁶ If the impact is small the smoothing is dropped. Modified trend maps are written to file with prefix `FilteredVelocityTrend_`.

Argument: Real in [0, 1]

Default: 0.5

17.2.14.5 `<smoothing-factor-SD-maps>`



Description: Sometimes the SD maps contains spikes and sharp edges that may cause artifacts in the final maps. Smoothing the maps by filtering out high frequencies will usually improve results. This factor decides how much smoothing is performed. 0 means no smoothing, leaving the input map unchanged. 1 means full smoothing giving a constant (the mean). If input maps show a low-frequent behaviour, even quite high values of the smoothing factor will keep the maps unchanged. After the smoothing, a check is performed to decide if smoothing makes a significant impact. See the discussion in the footnote to `<smoothing-factor-velocity-trends>`. If the impact is small the smoothing is dropped. Modified trend maps are written to file with prefix `FilteredSDMap_`.

Argument: Real in [0, 1]

Default: 0.8

6. This is done as follows:

- Make the smoothed velocity trend: $\bar{v}(x, y)$.
- Find the residual: $r(x, y) = v(x, y) - \bar{v}(x, y)$.
- Find minimum and maximum residual: $r_{\min} = \min r(x, y)$ and $r_{\max} = \max r(x, y)$.
- Find the smoothed velocities at these two locations: \bar{v}_{\min} and \bar{v}_{\max} .
- Find the span of values: $\bar{v}_{\text{span}} = \bar{v}_{\max} - \bar{v}_{\min}$.
- Calculate $t_{\min} = |r_{\min}/\bar{v}_{\min}|$ and $t_{\max} = |r_{\max}/\bar{v}_{\max}|$.
- Calculate $u_{\min} = |r_{\min}/\bar{v}_{\text{span}}|$ and $u_{\max} = |r_{\max}/\bar{v}_{\text{span}}|$.

The smoothed trend is used if $t > 0.01$ and $u > 0.1$. The t 's and the u 's measure if the smoothing makes a noticeable change relative to the value of trend and relative to the range of values in the trend respectively.

17.2.15 <post-process-surfaces>

Description: Wrapper for elements controlling post-processing of surfaces. This includes truncating surfaces due to erosion and onlapping, pinch outs and removal of gridding mismatches.

Argument: Elements controlling pre-processing

Default: Void

17.2.15.1 <erode-and-onlap>

Description: Choosing no overrides all input flags related to <erosive> and <onlapped> surfaces.

Default is to truncate all surfaces by the erosive and onlapped surfaces. This also applies to output trends.

This has no effect on free surfaces since they can not erode or be onlapped.

Argument: yes / no

Default: yes

17.2.15.2 <treat-reflectors-as-eroding-and-onlapped>

Description: Will ensure that seismic reflectors truncate other surfaces. See [Figure 12.1](#) for an example. This will only affect the post processing and not the extraction of well points from zone logs. If <erode-and-onlap> is set to no, this has no effect. The individual elements <erosive> and <onlapped> for each seismic reflector will be overruled by this setting. A surface is a reflector if it has a specified <travel-time> or it is explicitly specified to be a <reflector>.

This element is set to no if <air-interpretations-present> is set to yes.

This has no effect on free surfaces since they can not erode or be onlapped.

Argument: yes / no

Default: yes

17.2.15.3 <make-average-of-crossing-surfaces>

Description: Post-process surfaces to produce a sequence of stratigraphically correct surfaces.

Negative thickness will be removed and replaced by a zero thickness interval — a pinch out. This algorithm does not take into account well observations. The default is to remove all negative thicknesses.

Argument: yes / no

Default: yes

17.2.15.4 <make-surfaces-interpolate-well-points>

Description: Kriging is a perfect interpolator but the predicted or simulated surfaces are defined on a regular <output-grid>. This introduces a gridding error ([Section 20.6](#)). By choosing yes, the gridding error is removed by adjusting grid values so that *bilinear interpolation* will give a perfect match to the well points. Since different well points could be in grid cells sharing the same grid values, all adjustments are made simultaneously. The bilinear interpolation will give perfect matches at all well points unless there are more well points than grid values to adjust.

The removal of the gridding errors for well points are treated simultaneously with the removal of gridding errors along well paths.

See <allow-small-surface-adjustment-at-zonation-points>.

The gridding error at a well point is only removed if a few conditions are met:

- The well point uncertainty is less than 1 meter (default). The default value can be modified using <max-SD-for-well-points-interpolation>.

- The residual, observation minus trend, is less than the value specified by `<max-residual-for-well-points-interpolation>`. (Default is 999 meters.) This gives a possibility to avoid some rare occasions that gives large spikes in the surfaces.
- If two well points are close, the surface can get spikes caused by a steep gradient between the well points. The maximum allowed gradient can be set using `<max-gradient-for-surface-adjustment>`. (Default is 100.)

Argument: yes / no

Default: yes

17.2.15.5 `<allow-small-surface-adjustment-at-zonation-points>`

Description: Removes gridding errors at zonation points along well paths. The gridding error has the same cause and is removed in the same way as gridding errors for well points. See `<make-surfaces-interpolate-well-points>` for details. The adjustment of grid values to remove the gridding error for well paths are consistent with the removal of gridding errors for well points.

The surface grid nodes are modified such that the surface becomes exactly 0.5 meter (default) away from the well path at the zonation points. This distance is modified by `<min-distance-from-surface-to-zonation-points>`.

The gridding error at a zonation point is only removed if one of these conditions are met:

1. The zonation point is *closer* than 0.5 meter (default) to the surface. The default value is modified by `<min-distance-from-surface-to-zonation-points>`.
2. The zonation point is *closer* than 1 meter (default) on the *wrong* side of the surface. The default value is modified by `<max-residual-for-adjustment-at-zonation-points>`.

The maximum allowed gradient between zonation (and well) points is set by `<max-gradient-for-surface-adjustment>`. (Default is 100.)

Argument: yes / no

Default: yes

17.2.15.6 `<set-eroded-nodes-to-undefined>`

Description: Eroded areas is set to undefined (missing code) if value is yes. If `<erode-and-onlap>` is set to no, this has no effect. See Figure 17.4.

Argument: yes / no

Default: no

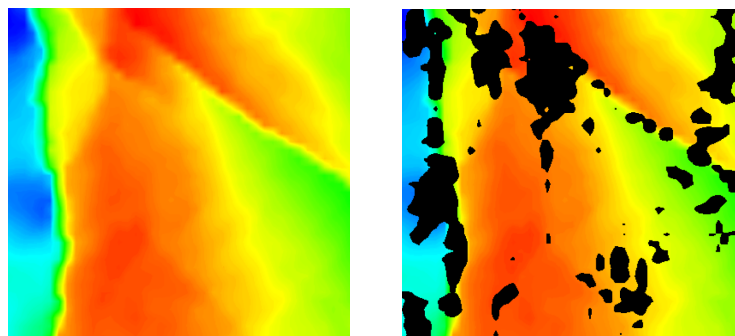


Figure 17.4. Original surface to the left (default). To the right is `<set-eroded-nodes-to-undefined>` set to yes.

17.2.15.7 <smoothing-factor-calculated-velocities>



Description: Interval velocities are calculated as $v = \Delta z / \Delta t$. This might give unrealistic results for very short travel times, Δt . Unrealistic velocities are replaced by a smoothing process if <smoothing-factor-calculated-velocities> is set to a positive value. This means that the high frequencies in the calculated velocity maps are filtered out. Low value gives little smoothing with 0.0 leaving the velocities unchanged, while higher values gives much smoothing, with 1.0 leaving a constant velocity (the mean). A suggested value if smoothing is desired is 0.5.

Argument: Real between 0 and 1

Default: 0.0

17.2.16 <correlated-intervals>



Description: Wrapper for elements controlling correlating intervals. The correlations are calculated based on the difference in the *prior* average thickness of the intervals for every pair of intervals sharing a <common-top-for-correlated-intervals>. All the correlated intervals must be either thickness or velocity <interval-type>. Both prior trend coefficients and interval residuals become correlated. For details see [Section 14](#).

Argument: Elements controlling correlation between intervals

Default: Void.

17.2.16.1 <correlated-intervals-range-for-residuals>



Description: Correlation between interval residuals depend on the average thickness difference when they share a <common-top-for-correlated-intervals>. If the thickness difference is bigger than this parameter the intervals are practically uncorrelated. See [Eq. 14.2](#).

Argument: Non-negative real (meters)

Default: 100.0

17.2.16.2 <correlated-intervals-power-for-residuals>



Description: See [Eq. 14.2](#).

Argument: Non-negative real less than 2.0

Default: 1.0

17.2.16.3 <correlated-intervals-simulations>



Description: The residual fields drawn for each interval will be correlated using the correlation matrix calculated for the residuals. Changing this to no introduces an inconsistency. See [Section 14](#).

Argument: yes / no.

Default: yes

17.2.16.4 <correlated-intervals-range-for-trends>



Description: Correlation between prior interval coefficients depend on the average interval thickness difference when they share a <common-top-for-correlated-intervals>. If the thickness difference is bigger than this parameter the intervals are practically uncorrelated. See [Eq. 14.1](#).

Argument: Non-negative real (meters)

Default: 100.0

17.2.16.5 <correlated-intervals-power-for-trends>



Description: See [Eq. 14.1](#).

Argument: Non-negative real less than 2.0

Default: 1.0

17.2.16.6 <correlated-intervals-ratios-for-trends>



Description: The prior trend coefficients for any two correlated intervals A and B are correlated with a function of the ratios $\Delta Z_{TB}/\Delta Z_{TB}$, where the ΔZ_A and ΔZ_B are the prior thicknesses of the intervals A and B respectively. See [Section 14.2](#).

Argument: yes / no

Default: no

17.2.17 <advanced-settings>



Description: Wrapper for elements controlling algorithms. Don't touch it if you don't mean it.

Argument: Elements controlling algorithms.

Default: Void.

17.2.17.1 <simulate-simple-kriging-trends>



Description: This element only applies in stochastic simulation <mode> and if <kriging-method> is simple kriging.

If yes is specified, the trend coefficients will be drawn with the prior trend coefficient uncertainty specified by <coefficient-SD> or <relative-SD>, and <correlations>.

Note that this choice makes prediction and simulation <mode> inconsistent since simple kriging assumes a known fixed trend with zero uncertainty. So the calculated prediction uncertainty will be (significantly) smaller than the variability of the simulated realizations.

Argument: yes / no

Default: no

17.2.17.2 <max-rejection-rate>



Description: This is the maximum rejection rate for rejection sampling during stochastic simulation. The default, 0.9, gives at worst a 90 % rejection rate. The stochastic simulation is aborted if COHIBA estimates that the rejection rate is larger than the specified maximum rejection rate. The rejection rate is estimated during the initial iterations. If the stochastic simulation is aborted due to large rejection rates, the <acceptance-criteria> must be relaxed or the maximum rejection rate must be increased. See [Section 21.4](#) for more details.

Argument: Real in (0, 1]

Default: 0.9

17.2.17.3 <model-weight-resolution>



Description: This option makes it possible to calculate model weights ([Section 11](#)) once and to save them for later use when running multiple realizations. This may reduce CPU times. It is also possible to calculate the model weights on a coarser grid in order to save memory.

Choosing 0 (default) means that model weights are calculated at full resolution and must be recalculated for every realization.

Choosing 1 means that model weights are calculated at full resolution and that they will be saved and reused if multiple realizations are generated.

Choosing any $n > 1$ means that the weights are calculated at every n^{th} grid node in each direction. Model weights in between the calculated weights are obtained by bilinear interpolation. Model weights will be saved and reused if multiple realizations are generated.

If $n > 0$ and the <number-of-realizations> is more than 1 in stochastic simulation <mode>, then model weights will be saved for later use. The memory usage is proportional to $1/n^2$. We recommend to use $n > 1$ when there is many alternative models. Choosing a large n will

reduce the spatial accuracy of the model weights.

We recommend to use 5 for fast simulation. We recommend to use the default for prediction and ordinary simulation since the gain in speed normally is small.

Argument: Non-negative integer

Default: 0

17.2.17.4 <max-SD-for-well-points-interpolation>



Description: Gridding mismatches at a well point is removed if the uncertainty (SD) is less than this value. Has only effect if <make-surfaces-interpolate-well-points> is yes.

Argument: Positive real (meters)

Default: 1.0

17.2.17.5 <max-residual-for-well-points-interpolation>



Description: Gridding mismatches at a well point is removed if the residual is less than this value. The value can be set to a smaller value (say 10) to avoid spikes in the surfaces. Has only effect if <make-surfaces-interpolate-well-points> is yes.

Argument: Positive real (meters)

Default: 999.0

17.2.17.6 <max-gradient-for-surface-adjustment>



Description: Gridding mismatches at a well point or zonation point is removed if the gradient between the point and another point is less than this value. The value can be set to a smaller value (say 10) to avoid spikes in the surfaces. Has only effect if <make-surfaces-interpolate-well-points> or <allow-small-surface-adjustment-at-zonation-points> are yes.

Argument: Positive real

Default: 100.0

17.2.17.7 <max-residual-for-adjustment-at-zonation-points>



Description: Gridding mismatches at a zonation point is removed if the zonation point is less than 1 meter (default) on the *wrong* side of a surface. Increasing this value will increase the number of grid nodes that are modified. It has only effect if <allow-small-surface-adjustment-at-zonation-points> is yes.

Argument: Positive real (meters)

Default: 1.0

17.2.17.8 <min-distance-from-surface-to-zonation-points>



Description: The distance between a well path and a surface will never be smaller than this value. Also gridding mismatches at a zonation point is removed if the zonation point is closer to a surface than 0.5 meters (default). Increasing this value will increase the number of grid nodes that are modified. It has only effect if <allow-small-surface-adjustment-at-zonation-points> is yes.

Argument: Positive real (meters)

Default: 0.5

17.2.17.9 <allow-zonation-points-near-faults>



Description: Allow zonation points also where the fault indicator log indicates a fault.

Argument: yes / no

Default: no

17.2.17.10 <base-help-points-on-simulated-surfaces>



Description: When doing simulations, the target points may be based on the simulated surfaces instead of the predicted ones. This reduce the probability of wells crossing surfaces in wrong locations.

Argument: yes / no

Default: no

17.2.17.11 <solver-for-weights>



Description: Specifies the method used for solving the linear equation system that gives the model weights. The conjugate gradient method is significantly faster than the Cholesky decomposition if there are many model weights. The two methods can give slightly different results since the linear equation system can be (very) rank deficient.

Argument: conjugate-gradient / cholesky

Default: conjugate-gradient

17.2.17.12 <max-iterations-to-avoid-broken-zonation>



Description: This option has only an effect if <minimize-broken-zonation> is set to yes. Choosing an integer $N > 1$ allows COHIBA to repeat the kriging N times. At each new iteration broken zonation points from the previous iteration is added to the selected zonation points. Note that each iteration will increase the execution time significantly. Setting <minimize-broken-zonation> to no is equivalent to selecting 1.

Argument: Positive integer

Default: 3

17.2.17.13 <correlate-close-reflectors>



Description: COHIBA assumes that all residuals are uncorrelated. This assumption fails for seismic reflectors that are near or coinciding. Then the uncertainty in the two time residuals are highly correlated. Turning this flag on makes COHIBA automatically modify the correlation between travel time residuals. See an example in [Figure 12.1](#).

The correlations are increased towards 1 when seismic reflectors are closer than $\sigma_{t_1} + \sigma_{t_2}$, that is, the sum of the SDs of the two travel time residuals. The correlation is set to $\rho = \max(0, [1 - \frac{|\Delta t|}{\sigma_{t_1} + \sigma_{t_2}}])$. So correlations becomes 1 if $\Delta t = 0$. Also the SD of the deepest surface is set to $\min(\sigma_{t_2}, \frac{|\Delta t|}{2})$ to avoid crossing surfaces.

This option does not affect reflectors that are free surfaces (see <free-surface>).

Argument: yes / no

Default: yes

17.2.17.14 <max-obs-direct-estim-trend-coef>



Description: When the number of well and distance points are smaller than this threshold, the posterior trend coefficients and covariance matrix are calculated using [Eq. 20.21a](#) and [Eq. 20.21b](#). If the number of well points is larger than this, expressions [Eq. 20.22a](#) and [Eq. 20.22b](#) are used. This only applies when <kriging-method> is bayesian. See [Section 20.3.2](#) for details.

Argument: Positive integer

Default: 200

17.2.17.15 <max-obs-GLS-approx-trend-coef>



Description: When the number of well and distance points are more than this threshold the non-zero covariances are ignored when estimating trend coefficients. This amounts to replacing the GLS estimates ([Eq. 20.18a](#) and [Eq. 20.18b](#)) by the weighted least squares (WLS) estimates ([Eq. 20.19a](#) and [Eq. 20.19b](#)). The WLS approximation can handle a lot of well points. This

applies when `<kriging-method>` is universal or bayesian. See [Section 20.3.1](#) for details.

Argument: Positive integer

Default: 2000

17.2.17.16 `<max-obs-GLS-approx-extreme-outliers>`



Description: When trend coefficients are calculated, well and distance points classified as extreme errors (see `<t-value-extreme-error>`) are removed one at a time, and after each removal updated trend coefficients are calculated. To save time, we estimate the trend coefficients using the [WLS](#) approximation when there are more than 1000 well and distance points available and remove as many extreme outliers as possible. When no more outliers are found, we recalculate trend coefficients using the [GLS](#) vs [WLS](#) approximation (if there are less than 2000 well and distance points available) and continue to remove extreme errors. The element `<max-obs-GLS-approx-extreme-outliers>` gives maximum number of well and distance points that can be available in a calculation before the [WLS](#) approximation is used to remove extreme outliers.

Argument: Positive integer

Default: 1000

17.2.17.17 `<max-obs-update-trend-coef-using-well-paths>`



Description: The trend coefficients are not adjusted to fit horizontal well paths *if* the number of well and distance points are more than this value. This saves a lot of [CPU](#) time. The idea is that the trend coefficients are estimated with sufficient accuracy when the number of well and distance points exceed this limit.

Argument: Positive integer

Default: 200

17.2.17.18 `<threshold-for-trace-clustering>`



Description: The constraints from each well path are grouped in correlated clusters (see [Section 23.4](#)). This element specifies the threshold for the correlations. Specifying a low correlation means that all constraints are probably grouped into one cluster. Specifying a high value means that constraints must be strongly correlated to be grouped. Ideally all constraints should be handled simultaneously, but small clusters are important to obtain fast performance.

Argument: Real in [0, 1]

Default: 0.1

17.2.17.19 `<threshold-for-cluster-merging>`



Description: The correlated clusters (see [Section 23.4](#)) are merged if any pair of constraints have a correlation larger than this threshold. A small value will cause all clusters to be merged. A large value will avoid any merging of clusters. Some merging is needed if well paths are near.

Argument: Real in [0, 1]

Default: 0.2

17.2.17.20 `<threshold-for-well-point-cluster-inclusion>`



Description: COHIBA estimate the correlation between well points and surface constraints for all well points that are within one range of the constraints and include these points in the well-cluster (see [Section 23.4](#)) if the correlation is larger than this threshold. All well points within one range are included if the threshold is 0.0. Increasing this value will reduce the cluster size at the expense of introducing possible inaccuracies. Note that filtering based on this correlation threshold is only done if the number of well points within one range is above 200.

Argument: Real in [0, 1]

Default: 0.1

17.2.17.21 <threshold-for-removing-undefined-well-sections>



Description: A well point replaces a zone transition in an undefined section if the undefined section is shorter than this distance (MD). The well point is located in the middle of the endpoints of the undefined sections. A well point TVD pick uncertainty will be added. The pick uncertainty (SD) 1/4 of the difference of the TVD values at the endpoints of the undefined section.

If the undefined section in a zone transition is longer than this distance, then the transition will be represented as two inequality constraints, one at each endpoint. See [Section 8.4.1](#) for some illustrations.

Argument: Positive real (meters)

Default: 1.0

17.2.17.22 <threshold-for-help-point-deactivation>



Description: COHIBA keeps those *target points* (see page 221) that impose the strongest restrictions on the surfaces and deactivate those that are highly correlated to the strongest restrictions. Choosing 1 means that no surface target points will be deactivated while choosing a low value (< 0.5) means that many target points will be deactivated. Note however that deactivated zonation points might be used in later iterations if <minimize-broken-zonation> is set to yes (Default). Choosing a small value will reduce the number of target points and thereby reduce the CPU time.

Argument: Real in [0, 1]

Default: 0.8

17.2.17.23 <threshold-for-special-help-point-deactivation>



Description: Similar to <threshold-for-help-point-deactivation>, but now applied to special sample points. These are help points connected to zonation points at the end of the well, or where the zone log goes from defined to undefined.

Argument: Real in [0, 1]

Default: 0.997

17.2.17.24 <threshold-for-high-correlation-wp-wp>



Description: Threshold for marking highly correlated well points from the same well. Only one of the two well points is kept for calculations, while the other is deleted. The point that is kept is flagged as a pinch out point.

Argument: Real in [0, 1]

Default: 0.999

17.2.17.25 <threshold-for-high-correlation-wp-ip>



Description: Threshold for removing inequality points that are highly correlated with a well point.

Argument: Real in [0, 1]

Default: 0.999

17.2.17.26 <threshold-for-high-correlation-wp-ep>



Description: Threshold for removing extra points that are highly correlated with a well point.

Argument: Real in [0, 1]

Default: 0.995

17.2.17.27 <min-isochores-thickness>



Description: COHIBA will not impose surface constraints at selected zonation points along well paths for zones thinner than this threshold.

Argument: Positive real (meters)

Default: 0.1

17.2.17.28 <threshold-for-mild-error>



Description: COHIBA will classify a mismatch between a well path and a surface according to this threshold. Only affects reporting.

Argument: Positive real (meters)

Default: 1.0

17.2.17.29 <t-value-outlier>



Description: Threshold for flagging a well or distance point as an *outlier*. 5% of the well and distance points will be classified as outliers if they follow a Gaussian distribution.

Argument: Positive real

Default: 1.95996 (see e.g. [Wikipedia](#)).

17.2.17.30 <t-value-severe-outlier>



Description: Threshold for flagging a well or distance point as a *severe outlier*. A well point TVD pick uncertainty is added unless <add-uncertainty-to-severe-outliers> is set to no. 1% of the well and distance points will be classified as severe outliers if they follow a Gaussian distribution.

Argument: Positive real

Default: 2.57583 (see e.g. [Wikipedia](#)).

17.2.17.31 <t-value-error>



Description: Threshold for flagging a well or distance point, or a well path constraint as an *error*. Observations classified as an error will be removed from all calculations unless <include-all-well-points-in-kriging> is set to yes. 0.2% of the observations will be classified as an error if they follow a Gaussian distribution.

Argument: Positive real

Default: 3.09023 (see e.g. [Wikipedia](#)).

17.2.17.32 <t-value-extreme-error>



Description: Threshold for flagging a well or distance point, or a well path constraint as an *extreme error*. These observations are removed and the trends re-fitted. The procedure will be iterated until all extreme errors have been removed. An extreme error is removed from all calculations unless <include-all-well-points-in-kriging> is set to yes. 0.01% of the observations will be classified as extreme errors if they follow a Gaussian distribution.

Argument: Positive real

Default: 3.8906 (see e.g. [Wikipedia](#)).

17.2.17.33 <t-value-first-help-point>



Description: A zonation point is close to a surface if it is closer than <t-value-first-help-point> times the prediction uncertainty. A close zonation point gives a surface constraint used when conditioning to zone logs. See Step 3 on page 220 for more details.

Argument: Positive real

Default: 2.5

17.2.17.34 <t-value-second-help-point>



Description: A close zonation point and its associated surface constraint might cause the neighboring surface to violate the zonation point. Therefore, surface constraints usually come in pairs. See Step 3 on page 220 for more details. If the zonation point is closer to the second surface than <t-value-second-help-point> times the prediction uncertainty, then this surface constraint is also used.

Argument: Positive real

Default: 2.5

17.2.17.35 <max-generalized-eigenvalue-for-inequality-points>



Description: When calculating the surface help points, the inverse of the matrix $(C^{i|e} - \Sigma^i)$ goes into the formulas. This matrix is not always positive definite since Σ^i is obtained empirically from a set of 256 drawn realizations and Monte Carlo noise will introduce small errors. This is corrected by truncating some eigenvalues. The specified number gives this truncation limit such that eigenvalues are above this limit.

Argument: Real value less than 1.0

Default: 0.9

17.2.17.36 <max-dxy-for-identical-well-points>



Description: If two well points on the same surface are close enough, they will be treated as equal. This keyword is used to change the largest lateral distance two well points can have before they are treated as different well points.

Argument: Positive real (meters)

Default: 5.0

17.2.17.37 <max-dz-for-identical-well-points>



Description: If two well points on the same surface are close enough, they will be treated as equal. This keyword is used to change the largest vertical distance two well points can have before they are treated as different well points.

Argument: Positive real (meters)

Default: 0.5

17.2.17.38 <max-slope-before-possible-conflict>



Description: If two well points are close, uncertainty is added. If the slope between the well points (calculated as dxy/dz) are too large, the points are flagged as possibly in conflict. This keyword can be used to alter this sensitivity.

Argument: Positive real

Default: 0.1

17.2.17.39 <min-SD-close-well-points>



Description: If there are two well points belonging to the same surface within a grid-cell distance they are required to have a minimum uncertainty. This keyword can be used to change this minimum uncertainty.

Argument: Positive real (meters)

Default: 0.01

17.2.17.40 <threshold-for-conditioning-in-neighbourhood>



Description: Controls the use of neighborhoods in the kriging algorithm. If the number of well points is larger than this number, kriging is performed in overlapping rectangular subsets. This algorithm runs fast and gives a good approximation. If there appears rectangular

patches in the output grids, consider increasing this number.

It is recommended to keep this number low since each rectangular subset is run in parallel processes.

Argument: Positive integer

Default: 1

17.2.17.41 <preprocess-range-factor-for-neighbourhood>



Description: Determines data neighborhood size as the fraction of the range in the pre-processing step. The well points in the neighborhood is used to find the prediction and prediction uncertainty at the zonation points along the well paths. See the second step in [Section 23.1](#) for some explanation.

Argument: Positive real

Default: 1.5

17.2.17.42 <min-range-factor-for-neighbourhood>



Description: Minimum data neighborhood size as the fraction of the range.

Argument: Positive real

Default: 1.0

17.2.17.43 <max-range-factor-for-neighbourhood>



Description: Maximum data neighborhood size as the fraction of the range.

Argument: Positive real

Default: 2.0

17.2.17.44 <target-number-of-data-in-neighbourhood>



Description: If the number of well points within the rectangle determined by <min-range-factor-for-neighbourhood> is less than this number, the rectangular neighborhood will be expanded until this number is obtained. However, the rectangle will never exceed the size given by <max-range-factor-for-neighbourhood>. Note that the default value, 0, means that the rectangular neighborhood always remains at the size determined by <min-range-factor-for-neighbourhood>.

Argument: Non-negative integer.

Default: 0

17.2.17.45 <min-generalized-eigenvalue-for-residual-uncert>



Description: This is a threshold that determines how many linear combinations of well points that are used when estimating the residual uncertainties. A large value (close to 1) will reject most linear combinations unless they perfectly match the corresponding interval thickness. A small value (close to 0) will include almost all linear combinations and the estimates will approach the overall estimate that blends all intervals.

Argument: Real in [0,1]

Default: 0.5

17.2.17.46 <volume-calculation-method>



Description: Calculating volumes require that the surface is defined between grid nodes. Two interpolation techniques are supplied. We recommend the default because the bilinear option has not been rigorously tested. See [Section 9.1](#) for details.

Argument: nearest-neighbor / bilinear

Default: nearest-neighbor

17.2.17.47 <keep-all-pinchout-points>

Description: Controls how well points are extracted from zone logs in a pinchout-situation. Setting this flag to no means that only one of the well points will be kept. Note that even though all the pinch out points are kept, some might be deleted later due to high correlation between well points. The threshold for this deletion can be adjusted using <threshold-for-high-correlation-wp-wp>.

Argument: yes / no

Default: yes

17.2.17.48 <normalize-interval-weights-table>

Description: Normalize all rows in the table of total weight of intervals used when building surfaces, showed in the COHIBA log file under [Section 4: The alternative ways to build each surface](#). This table is only showed if the detail level of <surface-models> is at least 4.

Argument: yes / no

Default: no

17.2.17.49 <check-zonation-in-branching-wells>

Description: Report if the zone logs in two side tracks is different in more than 1 % of the length (MD) in their common section. The results are summarized in [Section 8: Well branching](#) and COHIBA will produce a warning and issue a task. The test ignores undefined values.

Argument: yes / no

Default: yes

17.2.17.50 <add-uncertainty-to-close-observations>

Description: Well point TVD pick uncertainty is by default added to well points that lie close to other well points on the same surface (see [Section 8.2.3](#) for details). Choose no to avoid adding this pick uncertainty.

Argument: yes / no

Default: yes

17.2.17.51 <min-dip-for-azimuth-calculation>

Description: Azimuth calculation becomes unstable for small dip angles. Therefore, azimuth angles for dip angles less than this number are reported as missing codes.

NEW in 7.0

Argument: Real

Default: 1.0

17.2.17.52 <number-of-dip-points>

Description: Number of dip points placed around the well point. All points are evenly distributed along a (lateral) circle with center at the well point.

NEW in 7.0

Argument: Positive integer

Default: 4

17.2.17.53 <dip-points-radius>

Description: The radius is the (lateral) distance from the well point to the dip points.

NEW in 7.0

Argument: Positive real (meters)

Default: 100.0

17.2.17.54 <align-dip-points-to-dip-direction>

Description: If yes, the first dip point is placed in the direction of the dip. If no, the dip points are rotated 180° / <number-of-dip-points>.

NEW in 7.0

Argument: yes / no

Default: no

17.2.17.55 <add-dip-uncertainty-for-trend-conflicts>



Description: Adds uncertainty to dip points if they are in conflict with the trend. Uncertainty is added to all dip points belonging to a well point if the mismatch between the dip data and the dip of the trend is more than 15°.

NEW in 7.0

Argument: yes / no

Default: yes

17.2.17.56 <lateral-threshold-for-well-grouping>



Description: Maximum distance at first log recording in well when grouping wells into a single multilateral well with branches.

NEW in 7.0

Argument: Positive real (meters)

Default: 0.5

17.2.17.57 <threshold-for-branching-points>



Description: Required minimum distance (at some point) between branching wells if they are to be considered as branches of a common multilateral well.

NEW in 7.0

Argument: Positive real less than or equal to 10 cm.

Default: 0.1 (meter)

17.3 <well-data>

Description: Wrapper for <wells>, <well-points>, and <well-points-to-ignore> elements.

Argument: Any number of <wells>, <well-points>, and <well-points-to-ignore> elements

Default: No default.

Example: See [Section 17.3.6](#) for a complete example.

17.3.1 <wellpath-TVD-SD-range>

Description: Specifies a range in meters along the well path that determines the range (stiffness) of the well path TVD uncertainty. See [Section 8.4.2](#) for details and illustrations. The SD of the well path TVD uncertainty is determined by <wellpath-TVD-SD-log-name> or <wellpath-TVD-SD-increase-rate> when using <wells>. For <well-points> the SDs are specified in the well point <files>.

Argument: Positive real (meters)

Default: 300.0

17.3.2 <wells>

Description: A wrapper for elements describing zone logs and fault indicator logs.

Argument: Elements specifying the zone log or fault indicator log along well paths.

Default: No default

17.3.2.1 <files>

Description: The well log files to be imported. This element may be repeated in order to import different well log files in different locations (directories). Multiple well log files are separated by a comma. The file formats are detected automatically. See [Section 8](#) for available well log file formats.

The well names must be unique. Two files with identical well names will cause an error.

Argument: Any valid path relative to <input-directory>. Wild cards (*) are supported.

Default: Empty string

Example: One file:

```
<files> wells/31-2_K-11H.w </files>
```

Example: Three files:

```
<files> wells/W1.rms, wells/W2.rms, wells/W3.las </files>
```

Example: All files in directory:

```
<files> wells/* </files>
```

17.3.2.2 <zone-log-specification>

Description: The zone log specification is a set of integers (non-negative in consecutive order) and associated zone names separated by commas. See [Section 8.1](#) for more details. This specification is necessary when reading [LAS 2.0 well](#) log files. It is not needed for [ROXAR RMS WELL](#) files since they include the zone log specification in the header. For [LAS 2.0 well](#) files the zone name can include any (ASCII) character (including space) except for commas. The zone name can not include spaces if used with [ROXAR RMS WELL](#) files. Note that files with a different zone name specification will be discarded.

Argument: A comma separated list

Default: Empty string

Example: Reading two [LAS 2.0 well](#) files and one [ROXAR RMS WELL](#) file:

```
<wells>
  <zone-log-specification>
    1, ABOVE, 2, DRAUPNE, 3, 6BC, 4, 6AC, 5, 6AM, 6, 5CC
  </zone-log-specification>
  <zone-log-name> GM2005a </zone-log-name>
```



```

    <files>                w1.las, w2.las, w3.rms    </files>
</wells>

```

17.3.2.3 <zone-log-specification-file>

Description: See <zone-log-specification> for details. This element has the same purpose as <zone-log-specification> but the zone log specification is read from an ASCII file rather than from the COHIBA model file. In the ASCII file there is one line entry for each zone, and this entry consists of a comma separated zone number and zone name.

Argument: A string

Default: Empty string

Example: Reading two LAS 2.0 well files and one ROXAR RMS WELL file:

```

<wells>
  <zone-log-specification-file>
    zone-log-specification.txt
  </zone-log-specification-file>
  <zone-log-name>    GM2005a    </zone-log-name>
  <files>            w1.las, w2.las, w3.rms    </files>
</wells>

```

The specification file which is placed in the same directory as the well data may look like:

```

0, Nordaland Gr
1, Hordaland Gr
2, Zone TOP CHALK

```

17.3.2.4 <zone-log-name>

Description: Zone log identifier. A file may contain several zone logs and this element is used to select the correct one. Currently, only one zone log can be specified.

Argument: A string

Default: Empty string

Example: <zone-log-name> GM2005a </zone-log-name>

Example: <zone-log-name> ZonesSnorre </zone-log-name>

17.3.2.5 <fault-log-name>

Description: Specifies the name of the fault indicator log. A 1 in the fault indicator log means that it is near a fault and a 0 means that it is far away from a fault.

Argument: A string

Default: Empty string

Example: <fault-log-name> FaultIndicator </fault-log-name>

17.3.2.6 <MD-log-name>

Description: Specifies the name of the MD log. COHIBA will try to estimate MD values if this log is not specified. The MD values are primarily used in the various COHIBA log files to simplify identification of well points.

Argument: A string

Default: Empty string

Example: <MD-log-name> MD </MD-log-name>

17.3.2.7 <wellpoint-TVD-pick-SD-log-name>

Description: Specifies the name of the log describing the well pick TVD uncertainty (SD). The units are determined by <z-unit>. If the specified TVD uncertainty log in a well is missing, the uncertainty is assumed to be zero for this well.

Argument: A string

Default: Empty string

Example: `<wellpoint-TVD-pick-SD-log-name>PickSD</wellpoint-TVD-pick-SD-log-name>`

17.3.2.8 `<wellpath-TVD-SD-log-name>`

Description: Specifies the name of the log describing the well path TVD uncertainty (SD).

The units are determined by `<z-unit>`. If the specified TVD uncertainty log in a well is missing, the uncertainty is assumed to be zero for this well. The well path TVD uncertainty is smooth and correlated along the well path. The smoothness is determined by `<wellpath-TVD-SD-range>`. See Section 8.4.2 and in particular Figure 8.11 for more details.

It is possible to use automatically generated TVD uncertainty logs. This is done when `<allow-wells-to-move>` is yes and `<wellpath-TVD-SD-log-name>` is not used. The magnitude of the automatically generated TVD uncertainty log can be modified using `<wellpath-TVD-SD-increase-rate>`.

The well path TVD uncertainty log should in principle be monotonically increasing since positioning survey uncertainties accumulate along the well path. COHIBA will accept any log values but it is highly recommended to use uncertainty logs that are monotonically increasing with few and small exceptions. A large reduction in uncertainty along the well may cause unexpected results. Also note that TVD uncertainty logs that belong to different branches in the same multilateral well *should* have consistent uncertainty logs. COHIBA makes a number of QC checks on the well path TVD uncertainty logs and give warnings if unreasonable or inconsistent values are detected.

The use of the well path TVD uncertainty depends on `<condition-to-well-paths>` and `<allow-wells-to-move>`. If both of these are yes, then surfaces *and* the TVD logs will be updated to make a consistent set of surfaces and well paths. New updated TVD values are written to `well-logs/`.

If both `<condition-to-well-paths>` and `<allow-wells-to-move>` are set to no, then the well path TVD uncertainty is assigned to the TVD values at well points.

Argument: A string

Default: Empty string

Example: `<wellpath-TVD-SD-log-name>PosSurvTVDUncert</wellpath-TVD-SD-log-name>`

17.3.2.9 `<wellpath-TVD-SD-increase-rate>`

Description: If `<allow-wells-to-move>` is yes and `<wellpath-TVD-SD-log-name>` is not used, a parametric well path TVD uncertainty log is generated. The uncertainty log increases proportional to the lateral distance of the well. The increase rate is by default 2 mm per meter. This amounts to an increase of 2 meters SD for every kilometer along a horizontal section. See Eq. 23.6 for details.

Argument: Positive real (meters SD per meter lateral component of MD)

Default: 0.002

17.3.2.10 `<tops-as-mean-values>`

Description: COHIBA supports two methods for extracting the well points from the zone log:

1. The mean value of the position of the two points in the zone transition. This is the default and is selected with argument yes. A well point TVD pick uncertainty (SD) equal to $|z_1 - z_2|/4$ is added to the well point. The typical logging distance is one foot which is approximately 30 cm. The SD will then be approximately 7.5 cm.
2. The last (along the well path) point in the zone transition. This is selected with argument no.

The method chosen affects *all* well log files imported in `<files>`.

Argument: yes / no

Default: yes

17.3.2.11 <first-log-entry-as-top>

Description: In the [LAS 2.0 well](#) format, the first zone top is often given by a zone log transition from -999 to 0 as seawater is not treated as a zone. Choosing yes will ensure that such transition will be recorded as a zone top.

Argument: yes / no

Default: no

17.3.2.12 <TVD-values-are-negative>

Description: In the [LAS 2.0 well](#) format [TVD](#) values below [MSL](#) could be positive or negative. Choose yes if the [LAS 2.0 well](#) use negative [TVD](#) values below [MSL](#). This has no effect on the [ROXAR RMS WELL](#) format.

Argument: yes / no

Default: no

17.3.2.13 <sampling-distance>



Description: The well paths are sampled at approximately equidistant locations along the well path. The lateral distance between zonation points are measured along the path (that is [MD](#)) in meters. The default lateral distance between zonation points is two times the grid resolution.

Choosing a small distance between zonation points will increase [CPU](#) time without necessarily increasing precision in results. Choosing a large distance between zonation points may reduce [CPU](#) time at the cost of reduced precision.

Argument: The lateral sampling distance along well paths in meters

Default: $2 \times \min(\text{<xinc>, <yinc>})$ (See [Figure 17.1.](#))

17.3.3 <well-points>

Description: Wrapper for elements specifying well points. The <well-points> element can be used to add additional well points to the well points extracted from zone logs.

If well path [TVD](#) uncertainty is present in the well point files, then the uncertainty is assumed to be correlated along the well path. The correlation depend on the specified <wellpath-TVD-SD-range>.

Argument: Elements <files>

Default: No default

17.3.3.1 <files>

Description: Names of input files with well points. Supported formats are described in [Section 6.3.2](#). This element can be repeated in order to import files in different locations. Repeating files by accident will not affect the final result since duplicate well points are removed.

Argument: Any valid path relative to <input-directory>. Wild cards (*) are supported.

Default: Empty string

Example: <files> mywellpoints/* </files>

17.3.4 <well-points-to-ignore>

Description: Wrapper for <files> elements that specify well points that should be discarded.

Argument: <files> elements

Default: No default

17.3.4.1 <files>

Description: Names of input files with well points. Supported formats are described in [Section 6.3.2](#). This element can be repeated in order to import different files in different locations.

Argument: Any valid path relative to <input-directory>. Wild cards (*) are supported.

Default: Empty string

Example: <files> ignorepoints/* </files>

17.3.5 <distance-points>

NEW in 7.0

Description: Wrapper for elements specifying distance points. See [Section 8.5](#) for details on distance data.

Argument: Elements <files>

Default: No default

17.3.5.1 <files>

NEW in 7.0

Description: Names of input files with distance points. Supported formats are [ROXAR ATTRIBUTES TEXT](#) and the similar [PETREL POINT WELL DATA](#). Below is a sample file with required attributes:

```
String Contrast surface
String Well
Float Distance to contrast
Float Distance to contrast uncertainty
3001.0 2275.0 1015.90 "TopA" "w1" 5.90 0.50
3001.0 2275.0 1035.34 "TopB" "w1" 5.34 0.54
900.0 2001.0 1072.63 "TopB" "w2" 2.63 0.23
```

It is possible to use [MD](#) instead provided well names accurately match files/well names specified in <wells>:

```
String Contrast surface
String Well
Float Measured depth
Float Distance to contrast
Float Distance to contrast uncertainty
-999.0 -999.0 -999.0 1234.54 "TopA" "w1" 5.90 0.50
-999.0 -999.0 -999.0 1256.43 "TopB" "w1" 5.34 0.54
-999.0 -999.0 -999.0 3587.33 "TopB" "w2" 2.63 0.23
```

This element can be repeated in order to import files in different locations.

Argument: Any valid path relative to <input-directory>. Wild cards (*) are supported.

Default: Empty string

Example: <files> distancepoints/* </files>

17.3.5.2 <sampling-type>

NEW in 7.0

Description: Possibility to reduce the number of distance points for dense data-sets.

Argument: keep all samples / resample

Default: keep all samples

17.3.5.3 <sampling-distance>

NEW in 7.0

Description: Only relevant if <sampling-type> is resample.

Argument: Positive real

Default: No default

17.3.5.4 <width-of-smoothing-kernel>

NEW in 7.0

Description: Width of smoothing kernel used if <sampling-type> is resample.

Argument: Positive real
Default: 5.0 (meters)

17.3.5.5 <min-uncertainty>

NEW in 7.0

Description: Minimum TVD uncertainty (SD) in meters for distance data.

Argument: Non-negative real
Default: 0.1 (meters)

17.3.6 Example of <well-data> specification

```
<well-data>
  <wells>
    <zone-log-name>          GM2005a          </zone-log-name>
    <wellpath-TVD-SD-log-name> TVDUncertainty  </wellpath-TVD-SD-log-name>
    <tops-as-mean-values>    yes               </tops-as-mean-values>
    <files>                  ../welldata/*.rxb  </files>
  </wells>
  <well-points>
    <files>                  ../welldata/new_point.dat </files>
  </well-points>
</well-data>
```


17.4 <surfaces> (required)

Description: Wrapper for <reference> and <surface> elements in stratigraphic order. Free surfaces (see <free-surface>) can be in arbitrary order. A valid model must contain at least one surface different from the reference surface. The surfaces must be defined in a common rectangular output grid specified in the <output-grid> element.

Argument: A <reference> element and <surface> elements in correct depth order.

Default: No default

17.4.1 <reference>

Description: Wrapper for elements specifying the reference surface. This is typically [MSL](#). There can only be one <reference> element. COHIBA assumes that depth values and travel time values increase with increasing depth. Reference depth and travel time values can be negative.

Note that there will always exist a datum (horizontal plane) that defines zero depth. The reference surface, well points, and the output surfaces are defined relative to this datum. The datum is often [MSL](#) but any horizontal plane can be used.

Argument: Elements specifying the reference surface.

Default: A flat surface at zero depth having zero travel times. (See default values below)

17.4.1.1 <name>

Description: Name of reference surface.

Argument: String

Default: [MSL](#)

Example: <name> Mean Sea Level </name>

17.4.1.2 <depth>

Description: Depth at the reference surface relative to [MSL](#).

Argument: A real number or a grid file

Default: 0.0

17.4.1.3 <common-top-for-correlated-intervals>



Description: Correlate all trend coefficients and residuals for the intervals that have this surface as the <top> surface. For this option to have any effect, there need to be at least two such intervals, and they must all be of the same <interval-type>. The correlations are automatically calculated, see [Section 14](#) for details. This flag can be also set under <surface>.

Argument: yes / no.

Default: no

17.4.1.4 <travel-time>

Description: Seismic travel time at the reference surface.

Argument: A real number or a grid file.

Default: 0.0

17.4.2 <surface> (required)

Description: Wrapper for elements specifying a single surface. This element is repeated for every surface (except the reference) in the model. Important: The surface elements must be in stratigraphic order.

Argument: Elements specifying the surface.

Default: No default

17.4.2.1 <name> (required)

Description: A unique name for the surface. The name is used for identifying data in the [COHIBA well points file](#) and for identifying top and base of an [interval](#) and a [volume](#). All output surface files concerning this surface will include this name.

Argument: String

Default: No default

Example: <name> Top Brent </name>

17.4.2.2 <top-of-zone>

Description: This defines a mapping of zone log transition to the surface. If zone numbers increase with increasing depth, it is sufficient to specify the first zone name below *this surface*. Otherwise, all zone names below this surface and above the next surface must be specified. For details see [Section 8.3.5](#).

This element has no use if the surface is a [free-surface](#).

Argument: A sequence of zone names separated by a comma.

Default: Empty if no zone log is specified, otherwise it is required.

Example: Zone A is directly below the surface:

<top-of-zone> A </top-of-zone>

Example: Multiple zones between this surface and the next deeper surface:

<top-of-zone> A, B, C </top-of-zone>

The two zones B and C can normally be dropped (see [Section 8.3.5](#)).

17.4.2.3 <erosive>

Description: A flag controlling whether the surface is erosive or not. This affects the extraction of well points from zone logs *and* post processing. Erosiveness in the post processing for all surfaces may be turned off using the element [erode-and-onlap](#).

A [free-surface](#) can not be erosive so this element has no effect for free surfaces.

Argument: yes / no

Default: no

17.4.2.4 <onlapped>

Description: A flag controlling whether this surface is going to be onlapped by surfaces above. An onlapped surface can be eroded by a surface above. This affects the extraction of well points from zone logs *and* post processing. To override the post processing for all surfaces use the element [erode-and-onlap](#).

A [free-surface](#) can not be onlapped so this element has no effect for free surfaces.

Argument: yes / no

Default: yes

17.4.2.5 <free-surface>

Description: A flag controlling whether this surface is free or not. A surface is considered free if it is not part of the stratigraphy, typically, a fault or a [HCC](#). See [Section 13](#) for more details. This flag affects the extraction of well points from zone logs since a free surface is not associated to any zone. So [top-of-zone](#) have no meaning for a free surface. Well points belonging to a free surface must therefore be specified using [well-points](#). All surfaces (ordinary and free) are conditioned to all well points, including well points on free surfaces. Free surfaces can be connected to other surfaces through intervals, and they can also be reflectors. Free surfaces are reported after the set of stratigraphically ordered surfaces, following the order

in which they appear in the [COHIBA model file](#).

Travel time residuals for free surfaces are never assumed to be correlated to other travel time residuals so that [<correlate-close-reflectors>](#) will not affect free surfaces.

Free surfaces can not erode and they can not be onlapped. Free surfaces are not eroded by other surfaces and they will not onlap other surfaces.

Argument: yes / no

Default: no

17.4.2.6 [<reflector>](#)

Description: Surfaces with travel time maps are automatically considered reflectors. For reflectors given in depth, no direct association can be made, and this element has to be used. This will have effect if [<scale-isochores-to-seismic-envelopes>](#), [<treat-reflectors-as-eroding-and-onlapped>](#) or [<weight-isochore-package-above>](#) have been activated.

Argument: yes / no

Default: yes if [<travel-time>](#) is specified, no otherwise

17.4.2.7 [<common-top-for-correlated-intervals>](#)



Description: Correlate all trend coefficients and residuals for the intervals that have this surface as the [<top>](#) surface. For this option to have any effect, there need to be at least two such intervals, and they must all be of the same [<interval-type>](#). The correlations are automatically calculated, see [Section 14](#) for details. This flag can be also set under [<reference>](#).

Argument: yes / no

Default: no

17.4.2.8 [<travel-time>](#)

Description: Specification of the grid containing the travel times for the seismic reflector. If this element is used, this surface automatically becomes a seismic reflector.

Argument: Elements specifying the travel time.

Default: No default

17.4.2.8.1 [<value>](#)

Description: The travel time values.

Argument: File name or constant. See [Section 6.2](#) for possible file formats.

Default: 0.0

17.4.2.8.2 [<variogram>](#)

Description: Wrapper for elements specifying the travel time residual. The residual models the interpretation uncertainty in the travel time. It is specified by the [SD](#) and the variogram (spatial correlation function). Typical values for the [SD](#) is 4 – 20 msec. [TWT](#).

The available variograms are found in [Table 17.2](#).

Argument: Elements specifying the travel time uncertainty.

Default: Default values for child elements.

17.4.2.8.2.1 [<type>](#)

Description: The type of variogram.

Argument: The variograms in [Table 17.2](#).

Default: spherical

Table 17.2. Supported variogram types in COHIBA. Variograms, $\gamma(x)$, are closely linked to correlation functions, $\rho(x)$ by $\gamma(x) = \sigma^2(1 - \rho(x))$, where σ is **SD** and the ratio $x = r/R$ is the distance r divided by the **<range>**, R . See Section 22 for some illustrations of simulated realizations and e.g. Section 4 in [Abrahamsen \(1997\)](#) for mathematical details.

<type>	Correlation function	
constant	$\rho(x) = 1$	
white noise	$\rho(x) = 1$	if $x = 0$, 0 otherwise
exponential	$\rho(x) = e^{-3x}$	
gaussian	$\rho(x) = e^{-3x^2}$	
generalized exponential ^a	$\rho(x) = e^{-3x^p}$,	$0 < p \leq 2$
spherical2	$\rho(x) = 1 - \frac{2}{\pi}(x\sqrt{1-x^2} + \arcsin x)$	if $x < 1$, 0 otherwise
spherical	$\rho(x) = 1 - \frac{3}{2}x + \frac{1}{2}x^3$	if $x < 1$, 0 otherwise
spherical5	$\rho(x) = 1 - \frac{15}{8}x + \frac{5}{4}x^3 - \frac{3}{8}x^5$	if $x < 1$, 0 otherwise
rational quadratic ^b	$\rho(x) = 1/(1 + \text{scale} \times x^2)^p$,	$p > 0$
damped sine	$\rho(x) = \sin \pi x / \pi x$	
matern32 ^c	$\rho(x) = e^{-s}(1 + s)$	$s = 4.7x$
matern52 ^c	$\rho(x) = e^{-s}(1 + s + \frac{1}{3}s^2)$	$s = 5.9x$
matern72 ^c	$\rho(x) = e^{-s}(1 + s + \frac{2}{5}s^2 + \frac{1}{15}s^3)$	$s = 6.9x$
matern92 ^c	$\rho(x) = e^{-s}(1 + s + \frac{2}{7}s^2 + \frac{3}{21}s^3 + \frac{4}{105}s^4)$	$s = 7.7x$

- a. We recommend to use $p \leq 1.5$ for **generalized exponential**. A higher value of p can give under- and overshooting.
b. The scale is chosen such that $\rho(1) = 0.05$. For comparison $\rho(1) = 0.0498$ for the exponential variograms.
c. The half integer Matérn correlation functions give smooth differentiable simulated realizations. Realizations from **matern32** are differentiable, **matern52** are two times differentiable and so on. See [Wikipedia](#) or [Matérn \(1986\)](#) for details on the Matérn covariance functions. The scaling factor of s is chosen so that $\rho(1) = 0.05$.

17.4.2.8.2.2 <range>

Description: The variogram range parallel to the azimuth direction. (North-south direction by default)

Argument: Non-negative (meters)

Default: 1000.0

17.4.2.8.2.3 <subrange>

Description: The variogram subrange. Variogram range perpendicular to the azimuth direction. (East-west direction by default.)

Argument: Non-negative real (meters)

Default: Value of **<range>**

17.4.2.8.2.4 <azimuth>

Description: The variogram azimuth. Angle is measured clockwise from north. Units are degrees (full circle is 360°). Any input angle is possible but a warning is issued if angle is outside $[-360^\circ, 360^\circ]$.

Argument: Real

Default: 0.0

17.4.2.8.2.5 <SD>

Description: The **SD** (square root of sill) in meters.

Argument: **SD** as a constant or a grid file name, or elements `<relative>` and `<minimum>`. See [Section 6.2](#) for possible file formats.

Default: 1.0

Example: Constant **SD**:

```
<SD> 0.001 </SD>
```

Example: **SD** given by a surface grid file:

```
<SD> sd_TopA.rxb </SD>
```

Example: Relative **SD**:

```
<SD>
  <relative> 0.1 </relative>
  <minimum> 1.0 </minimum>
</SD>
```

17.4.2.8.2.5.1 `<relative>`

Description: The **SD** relative to the travel time specified in `<value>`.

Argument: Positive real

Default: 0.1

17.4.2.8.2.5.2 `<minimum>`

Description: Minimum **SD**. This has only effect if `<relative>` has been used.

Argument: Non-negative real (meters)

Default: 0.0

17.4.2.8.2.6 `<power>`

Description: The variogram power, p . Only used for the generalized exponential variogram and the rational quadratic variogram. See [Table 17.2](#). We recommend to use $p \leq 1.5$ for the generalized exponential variogram to avoid serious under- and overshooting. Choosing p above 10 for the rational quadratic variogram is almost identical to a gaussian variogram.

Argument: Non-negative real. Can not exceed 2.0 for generalized exponential.

Default: 1.0

17.4.2.9 `<spill-point>`

Description: This element triggers the detection of the spill point of the surface. The corresponding trapped area can be written to a map using `<trap>`.

Wrapper for elements `<missing-as-wall>`, `<xstart>` and `<ystart>` that controls the search for the spill point and the corresponding trap. The starting point for the search algorithm can be anywhere inside the trap. It is recommended to choose a starting point that is known to belong to the trap such as a discovery well or a producing well. If the starting point is outside a trap the algorithm will fail. If the algorithm fails, the output trap map will contain zeros and the file `spillpoint-Surface.rxat` with spill point coordinates will contain undefined areas.

Note that a depth surface can contain multiple traps. Only the trap containing the starting point will be found.

The spill point is calculated after post processing of the surfaces.

Argument: Elements specifying starting point and how to handle undefined areas.

Default: Void

17.4.2.9.1 <missing-as-wall>

Description: Determines how the spill point search algorithm handles undefined areas (missing code) in the surface maps. The undefined area can either be considered as a wall or as a sink. If undefined areas act as a wall (yes), the trap can not spill into undefined areas and the spill point search stops when the map boundary is found. If the undefined areas are considered as a sink (no), the spill point search algorithm stops when it encounters the map boundary or undefined areas that are in contact with the map boundary.

Argument: yes / no

Default: no

17.4.2.9.2 <xstart>

Description: Starting point x-coordinate for the spill point searching algorithm. The starting point for the search algorithm can be anywhere inside the trap. It is recommended to choose a starting point that is known to belong to the trap such as a discovery well or a producing well.

Argument: Real

Default: No default

17.4.2.9.3 <ystart>

Description: Starting point y-coordinate for the spill point searching algorithm. The starting point for the search algorithm can be anywhere inside the trap. It is recommended to choose a starting point that is known to belong to the trap such as a discovery well or a producing well.

Argument: Real

Default: No default

17.4.2.10 <acceptance-criteria>

Description: Wrapper for elements specifying acceptance criteria used for rejection sampling in stochastic simulation. The acceptance criteria only apply when simulating surfaces. It is possible to have several acceptance criteria for each surface.

If the rejection criteria are strict, a large number of simulated realizations might be necessary to obtain a single accepted realization. All surfaces will be discarded if one acceptance criterion fails. If the acceptance criteria is very strict the [<max-rejection-rate>](#) must be increased.

The acceptance criteria are checked after post processing of the surfaces.

Argument: Elements describing acceptance criteria.

Default: Void

17.4.2.10.1 <spill-point-above>

Description: The surface is accepted if the spill point is above a constant or above the specified surface at the spill point coordinates. The surface can be specified as any of the surfaces specified in [<surfaces>](#) or it can be read from a file. This criteria requires that [<xstart>](#) and [<ystart>](#) in [<spill-point>](#) are specified.

Argument: Constant, surface [<name>](#), or a file name. See [Section 6.2](#) for possible file formats.

Default: Void

17.4.2.10.2 <spill-point-below>

Description: The surface is accepted if the spill point is below a constant or below the specified surface at the spill point coordinates. The surface can be specified as any of the surfaces specified in [<surfaces>](#) or it can be read from a file. This criteria requires that [<xstart>](#) and [<ystart>](#) in [<spill-point>](#) are specified.

Argument: Constant, surface [<name>](#), or a file name. See [Section 6.2](#) for possible file formats.

Default: Void

17.4.2.10.3 [<spill-point-at>](#)

Description: The surface is accepted if the spill point is at a constant or at the specified surface at the spill point coordinate. The surface can be specified as any of the surfaces specified in [<surfaces>](#) or it can be read from a file. This criteria requires that [<xstart>](#) and [<ystart>](#) in [<spill-point>](#) are specified.

This is a strict criterion so by default a plus minus one meter tolerance is assumed. This tolerance can be modified by [<spill-point-tolerance>](#).

Argument: Constant, surface [<name>](#), or a file name. See [Section 6.2](#) for possible file formats.

Default: Void

17.4.2.10.4 [<spill-point-tolerance>](#)

Description: The tolerance for accepting criterion [<spill-point-at>](#). This tolerance applies on both sides so 1 meter means that the spill point will be accepted within a two meter depth window. If this value becomes too small then it is highly unlikely to obtain a simulated realization that will be accepted. So there is a trade off between speed and precision.

Argument: Positive real (meters)

Default: 1.0

17.4.2.10.5 [<trap-larger-than>](#)

Description: The surface is accepted if the trap is larger than the specified area in square meters. This criteria requires that [<xstart>](#) and [<ystart>](#) in [<spill-point>](#) are specified.

Argument: Positive real (square meter)

Default: 1.0

17.4.2.11 [<condition-to-spill-point-at-surface>](#)

Description: The surface is translated vertically so that its depth matches the depth of the specified surface at the specified surface's spill point. This makes it possible to use this translated surface as the [<base-contact>](#) for a filled structure in a [<volume>](#) calculation.

This element can only be used for a [<free-surface>](#). This criteria requires that [<xstart>](#) and [<ystart>](#) in [<spill-point>](#) for the specified surface are specified.

We recommend that this surface do not have any well points, and do not link to other surfaces since the translation to fit the spill point will not take into account well points nor the relations to other surfaces.

Argument: Surface [<name>](#)

Default: Void

17.4.2.12 [<weight-isochore-package-above>](#)

Description: Pre-adjust the standard deviation of each isochore in the isochore package directly above the surface, relative to the seismic envelope. The scaling will be done so that the weight of the model path that use the isochore package will be (approximately) the number that is



specified. A specified weight of 0.5 corresponds to equal weight for the isochore package and the velocity model (or depth converted thickness model). A value close to 0 gives less weight to the isochores, meaning that the seismic envelope will dominate. See [Section 11.1.4](#) for details.

The scaled isochore uncertainties can be exported using `<write-scaled-input-SD-isochores>`. If the seismic envelope consist of depth surfaces (no travel times given) then `<reflector>` must be set to yes for this option to have any effect.

Argument: Real in [0, 1]

Default: No default

17.4.2.13 `<output>`

Description: Wrapper for elements specifying if a particular map is written to file. The file names are described in [Table 7.1](#).

Argument: Elements for each grid type

Default: Void

17.4.2.13.1 `<depth>`

Description: The output depth surface.

Argument: yes / no

Default: yes

17.4.2.13.2 `<depth-uncertainty>`

Description: The output depth prediction uncertainty (SD) surface. Note that turning this on will increase the CPU time.

Argument: yes / no

Default: no

17.4.2.13.3 `<depth-trend>`

Description: The output depth trend surface.

Argument: yes / no

Default: no

17.4.2.13.4 `<depth-trend-uncertainty>`

Description: The output depth trend uncertainty (SD) surface.

Argument: yes / no

Default: no

17.4.2.13.5 `<depth-residual>`

Description: The output depth residual surface.

Argument: yes / no

Default: no

17.4.2.13.6 `<depth-residual-uncertainty>`

Description: The output *unconditional* depth residual uncertainty (SD) surface.

Argument: yes / no

Default: no

17.4.2.13.7 <trap>

Description: The output trap surface associated to a spill point. This criteria requires that <xstart> and <ystart> in <spill-point> are specified.

Argument: yes / no

Default: no

NEW in 7.0

17.4.2.13.8 <dip>

Description: The output dip map of the depth surface.

Argument: yes / no

Default: no

NEW in 7.0

17.4.2.13.9 <dip-trend>

Description: The output dip map of the depth trend surface.

Argument: yes / no

Default: no

NEW in 7.0

17.4.2.13.10 <azimuth>

Description: The output azimuth map of the depth surface. The azimuth is undefined if the dip is smaller than <min-dip-for-azimuth-calculation>.

Argument: yes / no

Default: no

NEW in 7.0

17.4.2.13.11 <azimuth-trend>

Description: The output azimuth map of the depth trend surface. The azimuth is undefined if the dip is smaller than <min-dip-for-azimuth-calculation>.

Argument: yes / no

Default: no

NEW in 7.0

17.4.2.13.12 <simulated-time>

Description: The simulated time maps are only written to file in simulation <mode> if <write-realization-maps> is yes and <simulated-time> is yes.

Argument: yes / no

Default: no

17.4.3 Example of <surface> specification

```

<surface>
  <name>                      TopA                      </name>
  <top-of-zone>                IsochoreA                 </top-of-zone>
  <erosive>                    yes                        </erosive>
  <onlapped>                   no                         </onlapped>
  <spill-point>
    <missing-as-wall>          yes                        </missing-as-wall>
    <xstart>                   342292.0                   </xstart>
    <ystart>                   4263452.0                  </ystart>
  </spill-point>
  <output>
    <depth>                    yes                        </depth>
    <depth-trend>              yes                        </depth-trend>

```



```

    <depth-uncertainty>      yes      </depth-uncertainty>
    <depth-trend-uncertainty> yes      </depth-trend-uncertainty>
    <depth-residual>        yes      </depth-residual>
    <trap>                   yes      </trap>
</output>
<travel-time>
  <value>                   T_TopA.rxb </value>
  <variogram>
    <type>                   spherical </type>
    <range>                  1000     </range>
    <subrange>               2000     </subrange>
    <azimuth>                45       </azimuth>
    <SD>                     sd_TopA.rxb </SD>
  </variogram>
</travel-time>
</surface>

```


17.5 <intervals> (required)

Description: Wrapper for <interval> elements. Every <interval> describe the thickness or the interval velocity (depth conversion) between a <top> and a <base> surface. A single surface can be <top> and <base> in several intervals.

Argument: <interval> elements

Default: No default

17.5.1 <interval> (required)

Description: Wrapper for elements describing the interval. There are two types of intervals: Thickness intervals and velocity intervals. The latter is used to describe the interval velocity between two seismic reflectors. This element is repeated for each interval model between two surfaces.

Argument: Elements describing the interval

Default: No default

17.5.1.1 <name>

Description: An interval name. All output concerning this interval will use this name.

Argument: String

Default: A string made from the names of the top and base surfaces concatenated by -to-.

Example: The specification:

```
<interval>
  <top>    BCU          </top>
  <base>   TopBrent     </base>
  ...
</interval>
would give the default name: BCU-to-TopBrent.
```

17.5.1.2 <top> (required)

Description: The surface defining the top of the interval. Top and base surfaces must be different.

Argument: An existing surface <name>

Default: No default

17.5.1.3 <base> (required)

Description: The surface defining the base of the interval. Top and base surfaces must be different.

Argument: An existing surface <name>

Default: No default

17.5.1.4 <interval-type> (required)

Description: For thickness intervals, the trends describe the thickness, and for velocity intervals, the trends describe interval velocity. Velocity intervals require that the top and base surfaces of the interval are seismic reflectors.

Argument: thickness / velocity

Default: No default

17.5.1.5 <trend>

Description: Wrapper for a single interval thickness/velocity trend map and interval trend coefficient. An interval (thickness or velocity) may contain a sum of several interval trend maps so this element may be repeated any number of times.

Argument: Elements describing a interval trend map and its interval trend coefficient.

Default: Void.

Example: An isochore map multiplied by a coefficient with default value 1.0 and a 15 % uncertainty:


```

<trend>
  <value>          S_IsochoreB.roxbin </value>
  <relative-SD> 0.15                </relative-SD>
</trend>

```

Example: An isochore map multiplied by a coefficient with mean 1.07 and uncertainty (SD) 0.05:

```

<trend>
  <value>          S_IsochoreB.roxbin </value>
  <coefficient-mean> 1.07            </coefficient-mean>
  <coefficient-SD> 0.05              </coefficient-SD>
</trend>

```

17.5.1.5.1 <coefficient-mean>

Description: Prior mean value (expectation) of interval trend coefficient. The interval trend coefficient is multiplied by the value specified in element `<value>` below to obtain the interval thickness/velocity trend. When possible, we recommend to drop this element and thereby use the default value of 1.

Argument: Real

Default: 1.0

17.5.1.5.2 <coefficient-SD>

Description: Prior uncertainty (SD) of interval trend coefficient. When possible, we recommend to drop this element and use `<relative-SD>` instead. Do not use this in combination with `<relative-SD>`.

Argument: Non-negative real

Default: 0.0

17.5.1.5.3 <relative-SD>

Description: Prior relative uncertainty (SD) of interval trend coefficient. Do not use this element in combination with `<coefficient-SD>`.

Argument: Non-negative real (measured in proportion of the coefficient, not in percent).

Default: 0.0

17.5.1.5.4 <value>

Description: A interval trend map (grid) or a constant. This trend map is multiplied by its corresponding interval trend coefficient.

An input trend map is regridded if the dimension and resolution does not match the `<output-grid>`.

Argument: File name or constant. See [Section 6.2](#) for possible file formats.

Default: 1.0

17.5.1.6 <linvel-trend>

Description: Wrapper for the specification of the linear (instantaneous) velocity model used for depth conversion. The linear velocity model can only be used for an `<interval>` where `<top>` and `<base>` are seismic reflectors with specified `<travel-time>`. The linear velocity model is discussed in some detail in [Section 16](#).

The trend coefficients in log files are named V0 and k or 1a, 1b, and 1b, depending on the choice of `<linvel-expansion-type>`. Linear velocity trends can be combined with `<trend>`, but this is not recommended.

Default: Void

Example: Linear velocity model with reference to [<top>](#):

```
<linvel-trend>
  <linvel-expansion-type> V0-k          </linvel-expansion-type>
  <linvel-reference>      top of interval </linvel-reference>
  <V0-mean>               1100          </V0-mean>
  <V0-SD>                 500          </V0-SD>
  <k-mean>                 0.4          </k-mean>
  <k-SD>                   0.0          </k-SD>
</linvel-trend>
```

17.5.1.6.1 <linvel-expansion-type>

Description: Two types of linearization is possible. We recommend to use V0-k since this makes it possible to update the V_0 and k estimates using well data. The alternative is a second order Taylor expansion in time that has three terms. The three corresponding trend coefficients are not uniquely related to V_0 and k . See [Section 16](#) for more details.

Argument: V0-k / time

Default: V0-k

17.5.1.6.2 <linvel-reference>

Description: The linear increase in instantaneous velocity can either start at the [<reference>](#) surface ([MSL](#) by default) or at the [<top>](#) of the interval.

Argument: reference surface / top of interval

Default: reference surface

17.5.1.6.3 <V0-mean>

Description: Prior mean value for V_0 . Can be a constant or a V_0 -map. Units are meter per second and it can be negative.

Argument: File name or constant. See [Section 6.2](#) for possible file formats.

Default: No default

17.5.1.6.4 <V0-SD>

Description: Prior [SD](#) for V_0 .

Argument: Non-negative real (m/s).

Default: No default

17.5.1.6.5 <k-mean>

Description: Prior mean value for k . Can be a constant or a k -map.

Argument: File name or constant. See [Section 6.2](#) for possible file formats. (s^{-2})

Default: 0.0

17.5.1.6.6 <k-SD>

Description: Prior [SD](#) for k .

Argument: Non-negative real (s^{-2})

Default: 0.0

17.5.1.7 <polynomial-trend>

Description: Wrapper for the specification of polynomial trend maps for an interval (thickness or velocity). This option is intended as an easy way of adapting a general trend to a lot of data. The number of polynomial trend maps is determined by <polynomial-degree>. The number of polynomial trend maps increase rapidly with increasing degree so choosing higher degrees requires an abundance of data to ensure stable and reliable results. Polynomial trend maps are discussed in some detail in [Section 15](#).

Polynomial trend coefficients in log files are named C_{ij}, L_{ij} or M_{ij} depending on the choice of <polynomial-type>. The polynomial trends can be combined with <trend>, but this is not recommended.

Default: Void

Example: Polynomial trend maps for a 200 meter (approximately) thick interval with 16 trend maps:

```
<polynomial-trend>
  <polynomial-degree>          3 </polynomial-degree>
  <polynomial-scaling-factor> 200 </polynomial-scaling-factor>
</polynomial-trend>
```

17.5.1.7.1 <polynomial-degree>

Description: The degree of the polynomials used to make the trend maps. The total number of polynomial trend maps are $(\text{degree} + 1)^2$ so the default 2, will give nine trend maps.

Argument: Non-negative integer

Default: 2

17.5.1.7.2 <polynomial-scaling-factor>

Description: The polynomial trend maps have values between -1 and 1 ([Figure 15.2](#)). This is usually less than the observed interval thickness or interval velocities so it is recommended to choose a scaling factor that is near the numerical range of the observations. This makes the estimated trend coefficients easier to interpret and numerical robustness is good.

Argument: Real number

Default: 1000.0



17.5.1.7.3 <polynomial-type>

Description: The polynomial trend maps are constructed using two alternative sets of orthogonal polynomials (Chebyshev, Legendre) or by monomials $(1, x, x^2, x^3, \dots)$. These are illustrated in [Figure 15.2](#). The final result is not sensitive to this choice but numerical stability and the possibility to interpret estimated trend coefficients are a lot better when using Chebyshev polynomials.

Argument: chebyshev / legendre / monomial

Default: chebyshev

17.5.1.8 <correlations>



Description: Correlations between interval trend coefficients.

Argument: A sequence of arguments <cp-q>, where p and q (p different from q) refers to the order of the trend coefficients within this <interval> element. Make sure that the values entered define a proper correlation matrix, that is, a symmetric positive definite (SPD) matrix.

Default: 0.0 (no correlations)

Example: Correlation matrix for 3 trend coefficients:

```
<correlations>
```



```

    <c1-2> 0.01 </c1-2>
    <c1-3> 0.03 </c1-3>
    <c2-3> 0.002 </c2-3>
  </correlations>

```



17.5.1.8.1 <cp-q>

Description: Prior correlations between trend coefficients p and q . The numbering is according to the order of appearance in the list of trends, starting at 1. Indices exceeding the maximum number of trends will be ignored.

Argument: Real in $[-1, 1]$

Default: 0.0

17.5.1.9 <variogram> (required)

Description: Wrapper for elements specifying the interval uncertainty, that is, interval thickness residual or interval velocity residual. The residual is the *unknown* difference between the true interval thickness/velocity and interval thickness/velocity trend. It is specified by the variogram (spatial correlation function) and [SD](#).

Argument: Elements specifying the interval thickness or interval velocity residual.

Default: No default

17.5.1.9.1 <type>

Description: The type of interval residual variogram.

Argument: The variograms in [Table 17.2](#)

Default: spherical

17.5.1.9.2 <range>

Description: The interval residual variogram range parallel to the azimuth direction. (North-south direction by default)

Argument: Non-negative real (meters)

Default: 1000.0

17.5.1.9.3 <subrange>

Description: The interval residual variogram subrange. Variogram range perpendicular to the azimuth direction. (East-west direction by default.)

Argument: Non-negative real (meters)

Default: Value of [<range>](#)

17.5.1.9.4 <azimuth>

Description: The interval residual variogram azimuth. Angle is measured clockwise from north. Units are degrees (full circle is 360°). Any input angle is possible but a warning is issued if angle is outside $[-360^\circ, 360^\circ]$.

Argument: Real

Default: 0.0

17.5.1.9.5 <SD>

Description: The interval residual [SD](#) (square root of sill).

Argument: SD as a constant or a grid file name, or elements `<relative>` and `<minimum>`. See [Section 6.2](#) for possible file formats.

Default: 1.0

Example: Constant SD:

```
<SD> 0.001 </SD>
```

Example: SD given by a surface grid file:

```
<SD> sd_intervalAB.rxb </SD>
```

Example: Relative SD:

```
<SD>
  <relative> 0.10 </relative>
  <minimum> 1.00 </minimum>
</SD>
```

17.5.1.9.5.1 `<relative>`

Description: The SD relative to the thicknesses or interval velocities specified in the interval `<trend>`.

Argument: Positive real

Default: 0.1

17.5.1.9.5.2 `<minimum>`

Description: Minimum SD. This has only effect if `<relative>` has been used.

Argument: Non-negative real

Default: 0.0

17.5.1.9.6 `<power>`

Description: The interval residual variogram power, p . Only used for the variograms generalized exponential and rational quadratic (see [Table 17.2](#)).

Argument: Positive real. Can not exceed 2.0 for generalized exponential

Default: 1.0

17.5.1.10 `<minimum-thickness>`

Description: Rejection sampling criteria to ensure that the interval is thicker than zero. This will only have effect in simulation `<mode>`. Current implementation only allows a minimum thickness of 0.0, any other value specified gives an error message.

Argument: Real

Default: No default

17.5.1.11 `<output>`

Description: Wrapper for elements specifying if a map (grid) should be written to file.

Argument: Elements for each map

Default: Void

17.5.1.11.1 `<thickness>`

Description: The thickness of the interval, i.e., the difference between `<top>` and `<base>` depth surfaces.

Argument: yes / no

Default: no

17.5.1.11.2 `<thickness-trend>`

NEW in 7.0

Description: The thickness trend of the interval, i.e., the difference between the `<top>` trend and the `<base>` trend surfaces.

Argument: yes / no

Default: no

17.5.1.11.3 `<thickness-residual>`

Description: The difference between the thickness and the thickness trend of the interval.

Argument: yes / no

Default: no

17.5.1.11.4 `<velocity>`

Description: The output interval velocity, i.e., the interval thickness divided by the time difference.

Argument: yes / no

Default: no

17.5.1.11.5 `<velocity-trend>`

Description: The posterior interval velocity trend.

Argument: yes / no

Default: no

17.5.2 Example of `<interval>` specification

```
<interval>
  <name>                MSL-to-TopA      </name>
  <top>                  MSL              </top>
  <base>                  TopA            </base>
  <interval-type>        velocity         </interval-type>
  <trend>
    <coefficient-mean> 2500              </coefficient-mean>
    <coefficient-SD>   200              </coefficient-SD>
    <value>             1               </value>
  </trend>
  <trend>
    <coefficient-mean> 25.0              </coefficient-mean>
    <coefficient-SD>   12.5             </coefficient-SD>
    <value>             v-overburden.rxb </value>
  </trend>
  <correlations>
    <c1-2>               0.9             </c1-2>
  </correlations>
  <variogram>
    <type>                spherical       </type>
    <range>                1000           </range>
    <subrange>             2000          </subrange>
    <azimuth>              45            </azimuth>
    <SD>
      <relative>          0.05           </relative>
    </SD>
  </variogram>
</output>
```


<thickness>	yes	</thickness>
<thickness-trend>	yes	</thickness-trend>
<velocity>	yes	</velocity>
</output>		
</interval>		

17.6 <volumes>

Description: Wrapper for elements describing the gross rock volume of one or more reservoirs.

Volumes are reported as cubic meters. See [Section 9](#) for details and an example.

Argument: <volume> elements

Default: No default

17.6.1 <volume>

Description: Wrapper for elements describing the surfaces outlining one reservoir unit. There is an option for assigning the volume to different areas (segment, license, political boundary, etc.) using <area-names>.

Argument: Elements describing the volume of a reservoir unit

Default: No default

17.6.1.1 <reservoir-name>

Description: The name of the reservoir unit. This name is required. This name is used for reporting to [volumes.csv](#).

Argument: String

Default: No default

Example: <reservoir-name> Upper Brent </reservoir-name>

17.6.1.2 <top-surface>

Description: The name of the top surface of a reservoir, usually the base of the reservoir caprock.

Argument: Surface <name>

Default: The name of the <reference> surface

17.6.1.3 <base-surface>

Description: The name of the base surface of a reservoir. Note that either this surface or the <base-contact> must be specified.

Argument: Surface <name>

Default: No default

17.6.1.4 <top-contact>

Description: Optional name of the top HCC of a (oil) reservoir. This is usually the GOC. This surface must be a free surface ([Section 13](#)).

Argument: Surface <name>

Default: No default

17.6.1.5 <base-contact>

Description: Optional name of the base HCC of a reservoir. This is the oil water contact (OWC) for oil reservoirs and the GWC or GOC for gas reservoirs. This surface must be a free surface ([Section 13](#)). Note that either this surface or the <base-surface> must be specified.

Argument: Surface <name>

Default: No default

17.6.1.6 <area-file>

Description: File with a unique area number (integer) for every area (segment, license, political territory, etc.) of interest. The area numbers are represented as real numbers with decimal point (−1.0, 0.0, 1.0, 2.0, . . .). Volumes will be recorded separately for every non-negative area number presented in the grid. Areas with negative area numbers are ignored. Non-integer area numbers are ignored.

Areas are by default named by the area number. Other names can be supplied using

`<area-names>`.

The area file *must* include the whole `<output-grid>` and the grid nodes *must* match the grid nodes of the output grid. We recommend to use exactly the grid format of the `<output-grid>`. See [Section 6.2](#) for possible file formats.

Argument: File name

Default: No default

17.6.1.7 `<area-names>`

Description: Used to associate the area numbers in the `<area-file>` by names. If `<area-names>` is used then only area numbers that are associated with area names will be included in the volume calculations.

Argument: Comma separated list with alternating area number and area name.

Default: No default

Example:

```
<area-names>
0, Central Block, 2, East Block, 3, West Block
</area-names>
```

17.6.1.8 `<only-trapped-volume>`

Description: If yes, then the spill point for the `<top-surface>` will be calculated and possible volumes outside the trap will be discarded. This option requires that `<xstart>` and `<ystart>` in `<spill-point>` are specified.

This option should be used in combination with `<condition-to-spill-point-at-surface>` for `<base-contact>`. This ensures that the base contact is consistent with the spill point depth.

In some situations the trap might be split into disconnected volumes by the `<base-surface>`. The disconnected volumes can be removed using `<connected-volume>`.

Argument: yes / no

Default: no

17.6.1.9 `<remove-isolated-volumes-less-than>`

Description: Small pockets of rock volume is removed from the rock column map before the volumes are calculated.

Nothing is removed if the minimum volume is zero.

Argument: Minimum volume (cubic meters)

Default: 1000000 (one million cubic meters)

17.6.1.10 `<connected-volume>`

Description: Only a single connected volume in the rock column map is kept. The connected volume must include the coordinates specified by `<xstart>` and `<ystart>`.

Argument: The coordinates to a point inside the connected volume

Default: No default

Example:

```
<connected-volume>
<xstart> 314680.00 </xstart>
<ystart> 7348210.00 </ystart>
</connected-volume>
```

17.6.1.10.1 `<xstart>`

Description: X-coordinate to a point inside the connected volume. This could typically be the starting point, [<xstart>](#), of the [<spill-point>](#) algorithm.

Argument: Real

Default: No default

17.6.1.10.2 [<ystart>](#)

Description: Y-coordinate to a point inside the connected volume. This could typically be the starting point, [<ystart>](#), of the [<spill-point>](#) algorithm.

Argument: Real

Default: No default

17.6.1.11 [<column-map>](#)

Description: If yes, then a map of the rock column height of the reservoir is written to a grid file in surfaces/.

Argument: yes / no

Default: yes

18 List of all elements

<cohiba> (required)

<project-settings> (required)

- <project-title>
- <project-description>
- <seed>
- <project-directory>
- <input-directory>
- <input-directory-surfaces>
- <input-directory-well-data>
- <output-directory>
- <number-of-threads> ⚠
- <measurement-units>
 - <z-unit>
 - <xyz-unit>
 - <time-unit>
 - <two-way-time>
- <output-grid> (required)
 - <format>
 - <read-from-file>
 - <xstart>
 - <ystart>
 - <xinc>
 - <yinc>
 - <xlength>
 - <ylength>
 - <grid-azimuth>
- <messages>
 - <logfile>
 - <name>
 - <detail-level>
 - <overall>
 - <model-settings>
 - <data-loading>
 - <pre-processing>
 - <surface-models>
 - <well-points>
 - <extra-points>
 - <distance-points>
 - <well-branching>
 - <well-paths>
 - <trend-coefficients>
 - <residual-uncertainties>
 - <outliers>
 - <dip-points>
 - <well-point-conditioning>


```

. . . . <help-points>
. . . . <well-path-conditioning>
. . . . <target-point-qc>
. . . . <post-processing>
. . . . <zonation-checking>
. . . . <updated-well-paths>
. . . . <spill-points>
. . . . <volume-calculations>
. . . . <interval-export>
. . . . <surface-export>
. . . . <timings>
. . . . <tasks>
. . <screen>
. . . <detail-level>
<write-expert-files>
<additional-output-control>
. . <write-all-logfiles>
. . <write-realization-maps>
. . <write-xyz-point-files>
. . <write-correlation-files> NEW in 7.0
. . <write-scaled-input-isochores>
. . <write-scaled-input-SD-isochores>
. . <write-filtered-velocity-trends>
. . <write-filtered-SD-maps>
. . <write-regridded-input-maps>
. . <write-unfiltered-output-velocities>
. . <write-wells>
. . <prefix-for-log-files>
. . <csv-file-style>
. . <anonymize-output>
. . <add-active-attribute-to-output> NEW in 7.0

```



```

<model-settings>
.   <mode>
.   <kriging-method>
.   <number-of-realizations>
.   <condition-to-well-paths>
.   <allow-wells-to-move>
.   <condition-to-surface-dip> NEW in 7.0
.   <check-specified-residual-uncertainties>
.   <cross-validate-wells>
.   <minimize-broken-zonation>
.   <add-uncertainty-to-severe-outliers> ⚠
.   <include-all-well-points-in-kriging> ⚠
.   <include-all-distance-points-in-kriging> ⚠ NEW in 7.0
.   <air-interpretations-present> ⚠ NEW in 7.0
.   <pre-process-surfaces>
.   .   <make-time-surfaces-consistent>
.   .   <scale-isochores-to-seismic-envelopes>
.   .   <extrapolate-input-surfaces>
.   .   .   <extrapolation-method> ⚠
.   .   .   <extrapolation-kriging-thinning-correlation> ⚠
.   .   .   <extrapolation-kriging-range> ⚠
.   .   .   <extrapolation-inverse-distance-weighting-power> ⚠
.   .   .   <extrapolation-SD-factor> ⚠
.   .   <smoothing-factor-velocity-trends> ⚠
.   .   <smoothing-factor-SD-maps> ⚠
.   <post-process-surfaces>
.   .   <erode-and-onlap>
.   .   <treat-reflectors-as-eroding-and-onlapped>
.   .   <make-average-of-crossing-surfaces>
.   .   <make-surfaces-interpolate-well-points>
.   .   <allow-small-surface-adjustment-at-zonation-points>
.   .   <set-eroded-nodes-to-undefined>
.   .   <smoothing-factor-calculated-velocities> ⚠
.   <correlated-intervals> ⚠
.   .   <correlated-intervals-range-for-residuals> ⚠
.   .   <correlated-intervals-power-for-residuals> ⚠
.   .   <correlated-intervals-simulations> ⚠
.   .   <correlated-intervals-range-for-trends> ⚠
.   .   <correlated-intervals-power-for-trends> ⚠
.   .   <correlated-intervals-ratios-for-trends> ⚠
.   <advanced-settings> ⚠
.   .   <simulate-simple-kriging-trends> ⚠
.   .   <max-rejection-rate> ⚠
.   .   <model-weight-resolution> ⚠
.   .   <max-SD-for-well-points-interpolation> ⚠
.   .   <max-residual-for-well-points-interpolation> ⚠
.   .   <max-gradient-for-surface-adjustment> ⚠
.   .   <max-residual-for-adjustment-at-zonation-points> ⚠
.   .   <min-distance-from-surface-to-zonation-points> ⚠
.   .   <allow-zonation-points-near-faults> ⚠
.   .   <base-help-points-on-simulated-surfaces> ⚠
.   .   <solver-for-weights> ⚠

```


- . . <max-iterations-to-avoid-broken-zonation> ⚠
- . . <correlate-close-reflectors> ⚠
- . . <max-obs-direct-estim-trend-coef> ⚠
- . . <max-obs-GLS-approx-trend-coef> ⚠
- . . <max-obs-GLS-approx-extreme-outliers> ⚠
- . . <max-obs-update-trend-coef-using-well-paths> ⚠
- . . <threshold-for-trace-clustering> ⚠
- . . <threshold-for-cluster-merging> ⚠
- . . <threshold-for-well-point-cluster-inclusion> ⚠
- . . <threshold-for-removing-undefined-well-sections> ⚠
- . . <threshold-for-help-point-deactivation> ⚠
- . . <threshold-for-special-help-point-deactivation> ⚠
- . . <threshold-for-high-correlation-wp-wp> ⚠
- . . <threshold-for-high-correlation-wp-ip> ⚠
- . . <threshold-for-high-correlation-wp-ep> ⚠
- . . <min-isochore-thickness> ⚠
- . . <threshold-for-mild-error> ⚠
- . . <t-value-outlier> ⚠
- . . <t-value-severe-outlier> ⚠
- . . <t-value-error> ⚠
- . . <t-value-extreme-error> ⚠
- . . <t-value-first-help-point> ⚠
- . . <t-value-second-help-point> ⚠
- . . <max-generalized-eigenvalue-for-inequality-points> ⚠
- . . <max-dxy-for-identical-well-points> ⚠
- . . <max-dz-for-identical-well-points> ⚠
- . . <max-slope-before-possible-conflict> ⚠
- . . <min-SD-close-well-points> ⚠
- . . <threshold-for-conditioning-in-neighbourhood> ⚠
- . . <preprocess-range-factor-for-neighbourhood> ⚠
- . . <min-range-factor-for-neighbourhood> ⚠
- . . <max-range-factor-for-neighbourhood> ⚠
- . . <target-number-of-data-in-neighbourhood> ⚠
- . . <min-generalized-eigenvalue-for-residual-uncert> ⚠
- . . <volume-calculation-method> ⚠
- . . <keep-all-pinchout-points> ⚠
- . . <normalize-interval-weights-table> ⚠
- . . <check-zonation-in-branching-wells> ⚠
- . . <add-uncertainty-to-close-observations> ⚠
- . . <min-dip-for-azimuth-calculation> ⚠ NEW in 7.0
- . . <number-of-dip-points> ⚠ NEW in 7.0
- . . <dip-points-radius> ⚠ NEW in 7.0
- . . <align-dip-points-to-dip-direction> ⚠ NEW in 7.0
- . . <add-dip-uncertainty-for-trend-conflicts> ⚠ NEW in 7.0
- . . <lateral-threshold-for-well-grouping> ⚠ NEW in 7.0
- . . <threshold-for-branching-points> ⚠ NEW in 7.0


```

<well-data>
.   <wellpath-TVD-SD-range>
.   <wells>
.   .   <files>
.   .   <zone-log-specification>
.   .   <zone-log-specification-file>
.   .   <zone-log-name>
.   .   <fault-log-name>
.   .   <MD-log-name>
.   .   <wellpoint-TVD-pick-SD-log-name>
.   .   <wellpath-TVD-SD-log-name>
.   .   <wellpath-TVD-SD-increase-rate>
.   .   <tops-as-mean-values>
.   .   <first-log-entry-as-top>
.   .   <TVD-values-are-negative>
.   .   <sampling-distance> ⚠
.   <well-points>
.   .   <files>
.   <well-points-to-ignore>
.   .   <files>
.   <distance-points> NEW in 7.0
.   .   <files> NEW in 7.0
.   .   <sampling-type> NEW in 7.0
.   .   <sampling-distance> NEW in 7.0
.   .   <width-of-smoothing-kernel> NEW in 7.0
.   .   <min-uncertainty> NEW in 7.0

```



```

<surfaces> (required)
.   <reference>
.   .   <name>
.   .   <depth>
.   .   <common-top-for-correlated-intervals> ⚠
.   .   <travel-time>
.   <surface> (required)
.   .   <name> (required)
.   .   <top-of-zone>
.   .   <erosive>
.   .   <onlapped>
.   .   <free-surface>
.   .   <reflector>
.   .   <common-top-for-correlated-intervals> ⚠
.   .   <travel-time>
.   .   .   <value>
.   .   .   <variogram>
.   .   .   .   <type>
.   .   .   .   <range>
.   .   .   .   <subrange>
.   .   .   .   <azimuth>
.   .   .   .   <SD>
.   .   .   .   .   <relative>
.   .   .   .   .   <minimum>
.   .   .   .   <power>
.   .   <spill-point>
.   .   .   <missing-as-wall>
.   .   .   <xstart>
.   .   .   <ystart>
.   .   <acceptance-criteria>
.   .   .   <spill-point-above>
.   .   .   <spill-point-below>
.   .   .   <spill-point-at>
.   .   .   <spill-point-tolerance>
.   .   .   <trap-larger-than>
.   .   <condition-to-spill-point-at-surface>
.   .   <weight-isochore-package-above> ⚠
.   .   <output>
.   .   .   <depth>
.   .   .   <depth-uncertainty>
.   .   .   <depth-trend>
.   .   .   <depth-trend-uncertainty>
.   .   .   <depth-residual>
.   .   .   <depth-residual-uncertainty>
.   .   .   <trap>
.   .   .   <dip> NEW in 7.0
.   .   .   <dip-trend> NEW in 7.0
.   .   .   <azimuth> NEW in 7.0
.   .   .   <azimuth-trend> NEW in 7.0
.   .   .   <simulated-time> NEW in 7.0

```



```

<intervals> (required)
.   <interval> (required)
.   .   <name>
.   .   <top> (required)
.   .   <base> (required)
.   .   <interval-type> (required)
.   .   <trend>
.   .   .   <coefficient-mean>
.   .   .   <coefficient-SD>
.   .   .   <relative-SD>
.   .   .   <value>
.   .   <linvel-trend>
.   .   .   <linvel-expansion-type>
.   .   .   <linvel-reference>
.   .   .   <V0-mean>
.   .   .   <V0-SD>
.   .   .   <k-mean>
.   .   .   <k-SD>
.   .   <polynomial-trend>
.   .   .   <polynomial-degree>
.   .   .   <polynomial-scaling-factor>
.   .   .   <polynomial-type> ⚠
.   .   <correlations> ⚠
.   .   .   <cp-q> ⚠
.   .   <variogram> (required)
.   .   .   <type>
.   .   .   <range>
.   .   .   <subrange>
.   .   .   <azimuth>
.   .   .   <SD>
.   .   .   .   <relative>
.   .   .   .   <minimum>
.   .   .   <power>
.   .   <minimum-thickness> NEW in 7.0
.   .   <output>
.   .   .   <thickness>
.   .   .   <thickness-trend>
.   .   .   <thickness-residual>
.   .   .   <velocity>
.   .   .   <velocity-trend>

```



```
<volumes>
.   <volume>
.   .   <reservoir-name>
.   .   <top-surface>
.   .   <base-surface>
.   .   <top-contact>
.   .   <base-contact>
.   .   <area-file>
.   .   <area-names>
.   .   <only-trapped-volume>
.   .   <remove-isolated-volumes-less-than>
.   .   <connected-volume>
.   .   .   <xstart>
.   .   .   <ystart>
.   .   <column-map>
```


19 COHIBA model file example

See [Section 19.1](#) for the [COHIBA log file](#) generated from this example.

```
<?xml version="1.0" encoding="utf-8"?>
<cohiba>
  <project-settings>
    <project-title>          Synthetic Vilje          </project-title>
    <project-description> This example has two crossing wells </project-description>

    <project-directory> 23_syntetic-vilje-crossing-wells-meter </project-directory>

    <additional-output-control>
      <csv-file-style>      fixed width                </csv-file-style>
    </additional-output-control>
    <messages>
      <logfile>
        <detail-level>
          <overall> 4 </overall>
        </detail-level>
      </logfile>
      <screen>
        <detail-level>
          <overall> 4 </overall>
        </detail-level>
      </screen>
    </messages>

    <measurement-units>
      <z-unit>              m </z-unit>
      <time-unit>          ms </time-unit>
      <two-way-time>       no </two-way-time>
    </measurement-units>

    <output-grid>
      <xstart>              0.0 </xstart>
      <ystart>              0.0 </ystart>
      <xlength>             4800.0 </xlength>
      <ylength>             3800.0 </ylength>
      <xinc>                50.0 </xinc>
      <yinc>                50.0 </yinc>
      <format>             roxar text </format>
    </output-grid>
  </project-settings>

  <modelling-settings>
    <mode>                  prediction </mode>
    <kriging-method>        bayesian </kriging-method>
    <condition-to-well-paths> yes </condition-to-well-paths>
    <check-specified-residual-uncertainties> yes </check-specified-residual-uncertainties>
    <post-process-surfaces>
      <make-surfaces-interpolate-well-points> no </make-surfaces-interpolate-well-points>
```



```

    <allow-small-surface-adjustment-at-sample-points> no </allow-small-surface-adjustment-at-sample-points>
  </post-process-surfaces>
</modelling-settings>

<well-data>
  <well-log>
    <zone-log-name>      PD2011      </zone-log-name>
    <files>              w1.rmswell  </files>
    <files>              w4.rmswell  </files>
  </well-log>
  <well-points>
    <files>              synthetic_markers.dat </files>
  </well-points>
</well-data>

<surfaces>
<!--Surfaces must be listed in stratigraphic order -->
  <reference>
    <name>               MSL          </name>
    <depth>              0           </depth>
  </reference>

  <surface>
    <name>               TopA         </name>
    <erosive>            no           </erosive>
    <onlapped>           no           </onlapped>
    <top-of-zone>        A            </top-of-zone>
    <output>
      <depth>            yes          </depth>
      <depth-trend>      yes          </depth-trend>
      <depth-error>      yes          </depth-error>
      <depth-trend-error> yes         </depth-trend-error>
      <depth-residual>   yes          </depth-residual>
    </output>
    <travel-time>
      <value>            T_TopA.storm </value>
      <variogram>
        <type>           spherical   </type>
        <range>          1000        </range>
        <subrange>       2000        </subrange>
        <azimuth>        20.00       </azimuth>
        <SD>             2.0         </SD>
      </variogram>
    </travel-time>
  </surface>

  <surface>
    <name>               TopB         </name>
    <erosive>            no           </erosive>
    <onlapped>           no           </onlapped>
    <top-of-zone>        B            </top-of-zone>
    <output>
      <depth>            yes          </depth>
      <depth-trend>      yes          </depth-trend>
      <depth-error>      yes          </depth-error>
      <depth-trend-error> yes         </depth-trend-error>
      <depth-residual>   yes          </depth-residual>
    </output>
  </surface>

```



```

    </output>
  </surface>

  <surface>
    <name>TopC</name>
    <erosive>no</erosive>
    <onlapped>no</onlapped>
    <top-of-zone>C</top-of-zone>
    <output>
      <depth>yes</depth>
      <depth-trend>yes</depth-trend>
      <depth-error>yes</depth-error>
      <depth-trend-error>yes</depth-trend-error>
      <depth-residual>yes</depth-residual>
    </output>
  </surface>
</surfaces>

<interval-models>
  <interval>
    <name>MSL-to-TopA</name>
    <top>MSL</top>
    <base>TopA</base>
    <interval-type>velocity</interval-type>
    <trend>
      <coefficient-mean>1.00</coefficient-mean>
      <coefficient-SD>0.08</coefficient-SD>
      <value>2500</value>
    </trend>
    <trend>
      <relative-SD>0.50</relative-SD>
      <value>Vcorr.storm</value>
    </trend>
    <variogram>
      <type>spherical</type>
      <range>1000</range>
      <subrange>2000</subrange>
      <azimuth>20.00</azimuth>
      <SD>10.00</SD>
    </variogram>
    <output>
      <velocity>yes</velocity>
    </output>
  </interval>

  <interval>
    <name>TopA-to-TopB</name>
    <top>TopA</top>
    <base>TopB</base>
    <interval-type>thickness</interval-type>
    <trend>
      <relative-SD>0.2</relative-SD>
      <value>S_IsochoreA.storm</value>
    </trend>
    <variogram>
      <type>spherical</type>
      <range>1000</range>

```



```

        <subrange>                2000                </subrange>
        <azimuth>                 20.00               </azimuth>
        <SD>                      10.00               </SD>
    </variogram>
</interval>

<interval>
    <name>                        TopB-to-TopC          </name>
    <top>                         TopB                  </top>
    <base>                        TopC                    </base>
    <interval-type>               thickness             </interval-type>
    <trend>
        <relative-SD>            0.2                  </relative-SD>
        <value>                  S_IsochoreB.storm      </value>
    </trend>
    <variogram>
        <type>                   spherical              </type>
        <range>                  1000                  </range>
        <subrange>               2000                  </subrange>
        <azimuth>                20.00                 </azimuth>
        <SD>                     9.00                  </SD>
    </variogram>
</interval>
</interval-models>
</cohiba>

```


19.1 COHIBA log file example

The following [COHIBA log file](#) was generating using the [COHIBA model file](#) in [Section 19](#).

```
*****
****
****              C O H I B A   -   7.0.0              ****
****
****              Copyright (c) 2020 by Norsk Regnesentral ****
****
*****

License expiration           : 90 days
Licensed to                 : Norsk Regnesentral

Log written by              : pdahle
Date and time               : Wed Mar 24 10:34:41 2021
Host                        : metusalem
Threads in use              : 8 / 8

*****
****      Section 1: Model settings                      ****
*****

Model file                  : 23_syntetic-vilje-crossing-wells-meter/modelfile.xml

Project title               : Synthetic Vilje
Project description         : This example has two crossing wells

Project directory           : /home/opt/project/Cohiba/cohiba_git/test_suite/23_syntetic-vilje-crossin
Input directory for surfaces : input/surfaces
Input directory for well data : input/welldata
Output directory            : output

Modelling mode              : prediction
Conditioning method         : Bayesian kriging
Condition to well paths     : yes
Allow wells to move         : no
Condition to surface dip    : yes
Cross validate wells        : no
Air interpretations present : no
Check specified residual uncertainties : yes
Iterate to minimize amount of broken zonation : no
Add uncertainty to severe outliers : yes
Include all well points in kriging : no
Include all distance points in kriging : no
Add control points for erosion and onlap : yes

Pre-process surfaces:
  Make time surfaces consistent : no
  Smooth velocity trends if needed : yes
  Smooth standard deviation maps if needed : yes
  Scale isochores to fit seismic envelopes : no
  Extrapolation of input surfaces : no

Post-process surfaces:
  Treat reflectors as eroding and onlapped : yes
  Set eroded nodes to undefined : no
  Truncate against erosive/onlapped surfaces : yes
  Make average of crossing surfaces : yes
  Make surfaces interpolate well points : no
  Allow small surface adj. at zonation points : no
  Smooth calculated velocities : no

Additional output control:
```



```

Also write point files using XYZ format      : no
Include all log files if simulation           : yes
Surface and interval realization output      : yes
Export scaled input isochores                : no
Export scaled input std grid isochores       : no
Export filtered velocity trends              : no
Export filtered standard deviation maps      : no
Export regridded input maps                  : no
Export unfiltered output velocity            : no
Export wells                                : no
Export (expert) files used for debugging     : no
Anonymize surfaces and wells when output     : no
Add 'active' attribute to depth surfaces     : yes
Write Petrel well point data                 : no
Delimiter type used for CSV log files        : fixed width

Well logs:
Zone log name                               : PD2011
File names                                  : w1.rmswell; w4.rmswell
Interpret first log entry as zone top       : no
Find zone tops as mean values               : yes

Well points:
File names                                  : synthetic_markers.dat

Output grid:
format                                       : roxar text
xstart (rot. point)                         : 0.00
ystart (rot. point)                         : 0.00
azimuth                                     : 0.00
xinc                                         : 50.00
yinc                                         : 50.00
nx                                           : 97
ny                                           : 77

Measurement types:
Depth                                       : True vertical depth (TVD)
Time                                       : One-way time (OWT)

Measurement units:
Lateral distance                           : m
Depth                                       : m
Time                                       : ms
Velocity                                   : m/s

Reference surface:
Name                                       : MSL
Depth                                       : 0.00
Time                                       : 0.00

```

Surface	TravelTime	Variogram [Type	Range	Subr. Power	Azimuth	SD]
MSL	0.0000	-	-	-	-	-
TopA	T_TopA.storm	spherical	1000	2000	-	2.0000

Surface	Erosive	Onlapped	Reflector	Free	IsoWeight	ComRefSurf	TopOfZones
MSL	no	no	yes	no	-	no	-
TopA	no	no	yes	no	-	no	A
TopB	no	no	no	no	-	no	B
TopC	no	no	no	no	-	no	C

Surface output	Depth	Trend	Residual	DepthSD	TrendSD	ResidualSD	Trap	Dip	TrendDip
----------------	-------	-------	----------	---------	---------	------------	------	-----	----------


```

-----
MSL          yes    no    no    no    no    no    no    no    no
TopA         yes    yes   yes   yes   yes   no    no    no    no
TopB         yes    yes   yes   yes   yes   no    no    no    no
TopC         yes    yes   yes   yes   yes   no    no    no    no

Interval      Trend [   Mean      SD          Value]  Variogram [ Type      Range  Subr. Power  Azimuth
-----
MSL-to-TopA      1.0000   0.0800      2500.0000      spherical   1000  2000    -    20.00    10
MSL-to-TopA      1.0000   0.5000 Vcorr.storm      spherical   1000  2000    -    20.00    10
TopA-to-TopB     1.0000   0.2000 S_IsochoreA.storm spherical   1000  2000    -    20.00    10
TopB-to-TopC     1.0000   0.2000 S_IsochoreB.storm spherical   1000  2000    -    20.00    9

Interval      TopSurface  BaseSurface  Type
-----
MSL-to-TopA      MSL        TopA        velocity
TopA-to-TopB     TopA        TopB        thickness
TopB-to-TopC     TopB        TopC        thickness

Interval output  Thickness  ThicknessTrend  Residual  Velocity  VelocityTrend
-----
MSL-to-TopA      no         no              no         yes       yes
TopA-to-TopB     no         no              no         no        no
TopB-to-TopC     no         no              no         no        no

*****
*****      Section 2: Loading input data      *****
*****

The specification for zone log 'PD2011' is taken from the well 'w1'

Well points are extracted between the following groups of zones:

ZoneTop      Erosive/Onlapped      ZoneNum  SubZones
-----
MSL          no / no              0      ( Above )
TopA         no / no              1      ( A )
TopB         no / no              2      ( B )
TopC         no / no              3      ( C )

Well          MD          x          y          TVD  Block  WellTVD-SD  PickTVD-SD  Fault  Zones
Upper/Lower  ZoneTop
-----
w4            1210.80   2602.51   1840.00   1039.18  -      0.00      0.05      no    0 / 1    1
w4            1955.85   3347.51   1840.01   1045.01  -      0.00      0.00      no    1 / 2    2
w4            1960.85   3352.50   1840.00   1045.00  -      0.00      0.00      no    1 / 2    2
w4            2110.85   3502.50   1840.00   1045.00  -      0.00      0.00      no    0 / 1    1

w4            : Number of zone tops :      4

Well          MD          x          y          TVD  Block  WellTVD-SD  PickTVD-SD  Fault  Zones
Upper/Lower  ZoneTop
-----
w1            1078.69   3001.00   2272.50   1015.81  -      0.00      0.40      no    0 / 1    1
w1            1755.85   3001.00   1597.50   1042.16  -      0.00      0.08      no    1 / 2    2
w1            2053.97   3001.00   1300.00   1061.00  -      0.00      0.00      no    2 / 3    3
w1            2103.99   3001.00   1250.00   1062.00  -      0.00      0.00      no    2 / 3    3
w1            2286.52   3001.00   1067.50   1059.96  -      0.00      0.02      no    1 / 2    2
w1            2366.52   3001.00   987.50    1059.00  -      0.00      0.00      no    0 / 1    1

w1            : Number of zone tops :      6

```


Valid wells : 2
 1 : w1
 2 : w4

Number of zone tops found in logs : 10

Well points read from file '/home/opt/project/Cohiba/cohiba_git/test_suite/23_syntetic-vilje-crossing-wells-meter/input/w

Well points added : 6
 Duplicate well points : 0
 Total number of well points : 16

Finished loading well point files.

Wells added from point file(s) : 2
 3 : w2
 4 : w3

No well points have been assigned measured depth (MD) from well logs.

No well points from points file were marked as close to a fault.

No well points were assigned well path TVD uncertainties from well logs.

Well points read from file (before processing in COHIBA):

Surface	Well	MD	x	y	TVD	Block	WellTVD-SD	PickTVD-SD
TopA	w1	1078.69	3001.00	2272.50	1015.81	-	0.00	0.40
TopB	w1	1755.85	3001.00	1597.50	1042.16	-	0.00	0.08
TopC	w1	2053.97	3001.00	1300.00	1061.00	-	0.00	0.00
TopC	w1	2103.99	3001.00	1250.00	1062.00	-	0.00	0.00
TopB	w1	2286.52	3001.00	1067.50	1059.96	-	0.00	0.02
TopA	w1	2366.52	3001.00	987.50	1059.00	-	0.00	0.00
TopA	w4	1210.80	2602.51	1840.00	1039.18	-	0.00	0.05
TopB	w4	1955.85	3347.51	1840.01	1045.01	-	0.00	0.00
TopB	w4	1960.85	3352.50	1840.00	1045.00	-	0.00	0.00
TopA	w4	2110.85	3502.50	1840.00	1045.00	-	0.00	0.00
TopA	w2	-	900.00	2001.00	1052.50	-	0.00	0.00
TopB	w2	-	900.00	2001.00	1072.63	-	0.00	0.00
TopC	w2	-	900.00	2001.00	1109.46	-	0.00	0.00
TopA	w3	-	2225.00	3101.00	1085.21	-	0.00	0.00
TopB	w3	-	2225.00	3101.00	1115.44	-	0.00	0.00
TopC	w3	-	2225.00	3101.00	1143.62	-	0.00	0.00

No well points were assigned pick uncertainties from well logs.

Surface	Time map nodes		Time SD map nodes	
	Defined	Undefined	Defined	Undefined
TopA	7469 (100.00%)	0 (0.00%)	7469 (100.00%)	0 (0.00%)

Interval	Trend	Interval trend map nodes		Interval SD map nodes	
		Defined	Undefined	Defined	Undefined
MSL-to-TopA	a	7469 (100.00%)	0 (0.00%)	7469 (100.00%)	0 (0.00%)
MSL-to-TopA	b	7469 (100.00%)	0 (0.00%)	7469 (100.00%)	0 (0.00%)
TopA-to-TopB	a	7469 (100.00%)	0 (0.00%)	7469 (100.00%)	0 (0.00%)
TopB-to-TopC	a	7469 (100.00%)	0 (0.00%)	7469 (100.00%)	0 (0.00%)

Surface	Time map				Time SD map			
	Avg	RMS	Min	Max	Avg	RMS	Min	Max

TopA		447.71	9.78	422.24	471.19	2.00	0.00	2.00	2.00
Interval	Trend	Avg	Interval trend map			Interval SD map			
			RMS	Min	Max	Avg	RMS	Min	Max
MSL-to-TopA	a	2500.00	0.00	2500.00	2500.00	10.00	0.00	10.00	10.00
MSL-to-TopA	b	0.07	9.78	-25.39	23.56	10.00	0.00	10.00	10.00
TopA-to-TopB	a	17.06	7.03	5.00	29.12	10.00	0.00	10.00	10.00
TopB-to-TopC	a	23.09	10.55	5.00	41.17	9.00	0.00	9.00	9.00

Memory usage for grids

```
-----
Memory needed to hold all input grids      ( 11) :    0.6 MB
Memory needed to hold all output grids     ( 15) :    0.9 MB
Total memory usage needed for grids        :    1.5 MB
```

```
*****
****      Section 3: Pre-processing input data      ****
*****
```

Extrapolation of input surfaces is not activated.

Converting time grid and time standard deviation grid for surface MSL into seconds.
 Converting time grid and time standard deviation grid for surface TopA into seconds.

Crossing time surfaces are allowed.

Time surface residuals of close reflectors are not correlated.

Difference between input velocity trend and filtered velocity trends:

Interval	Trend	Minimum	Maximum	Average	SD	Smooth
MSL-to-TopA	a	0.000	0.000	0.000	0.000	no
MSL-to-TopA	b	-0.794	0.863	0.002	0.156	no

Difference between standard deviation maps given as input and filtered standard deviation maps:

Interval	Minimum	Maximum	Average	SD	Smooth
MSL-to-TopA	0.000	0.000	0.000	0.000	no
TopA-to-TopB	0.000	0.000	0.000	0.000	no
TopB-to-TopC	0.000	0.000	0.000	0.000	no

Scaling of isochores to fit seismic envelopes is not activated.

Scaling of isochore standard deviations is not activated.

```
*****
****      Section 4: The alternative ways to build each surface      ****
*****
```

Surface	Model weights				Models
	Avg	SD	Min	Max	
TopA	1.000	0.000	1.000	1.000	1: MSL -> TopA
TopB	1.000	0.000	1.000	1.000	1: MSL -> TopA -> TopB
TopC	1.000	0.000	1.000	1.000	1: MSL -> TopA -> TopB -> TopC

Surface	Depth uncertainty (SD)				Models
	Avg	SD	Min	Max	
TopA	6.728	0.080	6.528	6.896	1: MSL -> TopA
TopB	12.053	0.044	11.942	12.147	1: MSL -> TopA -> TopB
TopC	15.042	0.035	14.954	15.118	1: MSL -> TopA -> TopB -> TopC

Total weight of intervals used when building the surface (average):

Surface	MSL-to-TopA	TopA-to-TopB	TopB-to-TopC
TopA	1.000	-	-
TopB	1.000	1.000	-
TopC	1.000	1.000	1.000

 ***** Section 5: Processing well points *****

Processing close points belonging to the same surface and different wells.

Identifying points that will be treated as duplicates (identical points).

Maximum lateral distance for considering well point identical : 5.0
 Maximum vertical distance for considering well points identical : 0.5

The following well points have been identified as identical. One is kept for calculations, both are used for visualization. If both well points are taken from zone logs or both taken from a well point file, the observation with the lowest pick uncertainty is kept. Otherwise the well point taken from the well point file is kept.

Surface	Well 1	MD	x	y	TVD	Block	Well 2	MD	x	
TopB	w4	1955.85	3347.51	1840.01	1045.01	-	w4	1960.85	3352.50	1840.01
Number of duplicate points deleted					:	1				
Number of well points left for calculation					:	15				

Identifying points that are close but not in conflict (slope < 0.1). Uncertainty will be added :

Surface	Well 1	MD	x	y	TVD	Block	Well 2	MD	x	
TopC	w1	2053.97	3001.00	1300.00	1061.00	-	w1	2103.99	3001.00	1250.00
Number of well point pairs otherwise too close					:	1				

The following well points have been given increased uncertainty (due to proximity to another point):

Surface	Well	MD	x	y	TVD	Block	Well	TVD-SD	Pick	Old	New
TopC	w1	2053.97	3001.00	1300.00	1061.00	-	0.00	0.00	0.71		
TopC	w1	2103.99	3001.00	1250.00	1062.00	-	0.00	0.00	0.71		

Number of well points with increased uncertainty : 2

Number of well points before processing : 16
 Well points available for conditioning : 15

Surfaces	WellPoints
TopA	6
TopB	5
TopC	4
Total	15

 ***** Section 6: Processing erosion/onlap constraints *****

Interval	Specified/Obs Uncertainty	95% AcceptanceRange		NumberOf WellPoints	Specified Uncertainty
		LowerLimit	UpperLimit		
MSL-to-TopA	-	-	-	-	-
TopA-to-TopB	1.443	0.624	2.453	5	OK
TopB-to-TopC	5.210	0.566	3.729	3	Too high
Overall	1.528	0.739	1.548	15	High

Consider reducing the prior residual uncertainty for interval 'TopB-to-TopC'

 ***** Section 12: Well points quality control *****

No well point leverage points found.

No distance point leverage points found.

No well point outliers found.

No distance point outliers found.

Surface	WellPoints	Residual		DistPoints	Residual	
		Bias	SD		Bias	SD
TopA	6	0.18	5.05	0	-	-
TopB	5	0.57	9.98	0	-	-
TopC	4	-0.07	12.30	0	-	-

Well	WellPoints	Residual		DistPoints	Residual	
		Bias	SD		Bias	SD
w1	6	-7.21	7.95	0	-	-
w4	3	2.87	3.74	0	-	-
w2	3	-2.32	3.20	0	-	-
w3	3	15.11	16.38	0	-	-

 ***** Section 13: Processing dip constraints *****

No dip information found in well points.

Nothing to do here when there are no dip constraints available.

 ***** Section 14: Conditioning on well points along well paths *****

In the pre-processing for conditioning to well paths: 1.66% of the grid nodes will be active.

Trends
 0% 20% 40% 60% 80% 100%
 | | | | | | | | | | |
 ~~~~~

Residuals  
 0%      20%      40%      60%      80%      100%  
 |   |   |   |   |   |   |   |   |   |   |  
 ~~~~~

Deleting surface constraints that are redundant due to correlation with well points (Del-E), distance constraints (Del-D) or other surface constraints (Del-I)

Del-E / Del-D / Del-I / Left / Total : 0 / 24 / 0 / 28 / 52

w1 : Zonation points in wrong zone/total number of points 5/ 25
w4 : Zonation points in wrong zone/total number of points 4/ 24
Summary : Zonation points in wrong zone/total number of points 9/ 49

***** Section 15: Finding surface constraints for well path conditioning *****

Grouping surface constraints

0% 20% 40% 60% 80% 100%
| | | | | |
.....

Merging clusters ...

Distribution of surface constraints in clusters:

Cluster size	Count	Frequency
1- 5	4	66.67%
6- 10	1	16.67%
11- 20	1	16.67%
21- 50	0	0.00%
51- 100	0	0.00%
101- 200	0	0.00%
201- 500	0	0.00%
501-1000	0	0.00%
1001-2000	0	0.00%
2001-5000	0	0.00%
5000+	0	0.00%
Total	6	100.00%

Largest cluster has 14 surface constraints, 15 well points, 0 distance points and 0 dip points.

Calculating surface constraints

0% 20% 40% 60% 80% 100%
| | | | | |
.....

Calculating surface conditioning points from surface target points

Number of well points : 15
Number of distance data points : 0
Number of dip data points : 0
Number of surface constraints : 28
Total number of conditioning points : 43

***** Section 16: Trend coefficients based on well points and well paths *****

Interval	Coef	Trend map		Trend coefficients					
		TrendMean	TrendRMS	PriorMean	PriorSD	PostMean	PostSD	PostMeanUpd	PostUpdSD
MSL-to-TopA	a	2500.000	0.000	1.000	0.080	0.972	0.003	0.972	0.003
MSL-to-TopA	b	0.075	9.777	1.000	0.500	1.020	0.426	1.106	0.425
TopA-to-TopB	a	17.058	7.034	1.000	0.200	1.025	0.163	1.068	0.155
TopB-to-TopC	a	23.086	10.550	1.000	0.200	1.043	0.142	1.055	0.136

***** Section 17: Conditioning surfaces on all available points *****

Trends

0%	20%	40%	60%	80%	100%
-----	-----	-----	-----	-----	-----

Residuals

0%	20%	40%	60%	80%	100%
-----	-----	-----	-----	-----	-----

***** Section 18: Target point quality control *****

Mismatch between target point depths and actual surface values. A part of the mismatch is due to gridding errors. This error is roughly equal to the numbers given in the average mismatch column.

Surface	Points	Minimum	Maximum	Bias	Average	SD
TopA	7	-0.19	0.12	-0.03	0.07	0.07
TopB	16	-0.79	1.06	0.13	0.31	0.35
TopC	5	-0.00	0.65	0.26	0.27	0.27

For 1 target point(s), the mismatch between the predicted and the observed surface value is large. This suggests that the model is poor in that area:

Cluster	Well	Surface	Mismatch
1	w4	TopB	1.06
Average			1.06

***** Section 19: Post-process surfaces *****

Treating reflector depth trends as erosive and onlapped surfaces. The tables below give the number of grid nodes moved by a reflector.

No erosion truncations performed.

No onlap truncations performed.

The total number of grid nodes that have been moved on each surface.

Truncating surface	Erosive	Onlapped	Reflector	Moved nodes
TopA	no	no	yes	0
TopB	no	no	no	0
TopC	no	no	no	0

Treating reflector depths as erosive and onlapped surfaces. The tables below give the number of grid nodes moved by a reflector.

No erosion truncations performed.

No onlap truncations performed.

The total number of grid nodes that have been moved on each surface.

Truncating surface	Erosive	Onlapped	Reflector	Moved nodes
--------------------	---------	----------	-----------	-------------

TopA	no	no	yes	0
TopB	no	no	no	0
TopC	no	no	no	0

 ***** Section 20: Checking zonation *****

The table(s) below give zonation status at zonation point locations. The letters used in the 'Fix' column are explained at the end of the section.

At the medium log-level (4) we log all wells with erroneous zonation status. At the high log level we also include wells for which the zone log conditioning corrected the zonation.

Below, 'unchanged zonation' refers to zonation points that had correct zonation after conditioning to well points only and for which the zonation is still correct.

Final zonation status at zonation points	< 1.0	> 1.0	Total
Number of zonation points with unchanged zonation (-) :			40
Number of zonation points with zonation corrected (Y) :			9
Number of zonation points for which correction failed (N) :	0	0	0
Number of zonation points with broken zonation (B) :	0	0	0
Number of zonation points with fixable broken zonation (F) :	0	0	0
Number of zonation points with incorrectable zonation (X) :	0	0	0
Number of zonation points with undefined zonation (U) :			0
Number of zonation points with no zone information (=) :			0
Total number of zonation points :			49

Final zonation status for wells:

Number of wells with correct zonation after pre-processing :	0
Number of wells with zonation corrected by conditioning :	2
Number of wells with correct zonation :	2
Number of wells with incorrect zonation < 1.0 :	0
Number of wells with incorrect zonation > 1.0 :	0
Number of wells with undefined zonation :	0
Number of wells with zonation problems :	0
Total number of wells :	2

Length of correct zonation for each well:

Well	Correct	Incorrect	< 1.0	> 1.0	Undef	Avg miss	Correct
w1	1470.8	25.0	25.0	-	-	0.1	98.3%
w4	1375.9	10.0	5.0	5.0	-	0.7	99.3%
Total	2846.7	35.0	30.0	5.0	-	0.2	98.8%

Length of correct zonation summed over all wells:

Zone	Correct	Incorrect	< 1.0	> 1.0	Undef	Avg miss	Correct
Above	688.8	5.0	5.0	-	-	0.2	99.3%
A	1652.2	-	-	-	-	-	100.0%
B	480.6	5.0	-	5.0	-	1.2	99.0%
C	25.0	25.0	25.0	-	-	0.1	50.0%
Total	2846.7	35.0	30.0	5.0	-	0.2	98.8%


```

*****
**** Section 21: Updated well paths ****
*****

```

Nothing to do here when wells are not allowed to move and wells are not exported.

```

*****
**** Section 22: Spill points ****
*****

```

No spill point detection has been requested.

```

*****
**** Section 23: Volume calculations ****
*****

```

No volume calculations have been requested.

```

*****
**** Section 24: Make and export interval thickness maps and velocities ****
*****

```

No interval maps exported.

Interval velocities are calculated differently depending on the interval thickness (dt):

```

dt < 1.00 ms : Use posterior trend
dt > 9.00 ms : Use v = dz/dt
In between   : Use an arctan weight of the two above approaches

```

```

Number of unsmoothed velocity trends exported : 0
Number of smoothed velocity trends exported   : 0
Number of unsmoothed velocity maps exported   : 1
Number of smoothed velocity maps exported     : 0

```

```

*****
**** Section 25: Export surfaces ****
*****

```

```

Number of depth surfaces exported           : 3
Number of depth uncertainty surfaces exported : 3
Number of depth residual surfaces exported   : 3
Number of depth residual uncertainty surfaces exported : 0
Number of depth trend surfaces exported      : 3
Number of depth trend uncertainty surfaces exported : 3
Number of trap surfaces exported             : 0

```

```

*****
**** Section 26: Timings summary ****
*****

```

Section	CPU Time/s		Real Time/s	
-----	-----	-----	-----	-----
Loading input data	0.03	1.54%	0.00	0.00%
Regridding input data	0.02	1.36%	0.00	0.00%
Pre-processing	0.03	1.76%	0.00	0.00%
Processing well data	0.03	1.63%	0.00	0.00%
Checking residual uncertainties	0.00	0.03%	0.00	0.00%
Finding trend coefficients	0.00	0.00%	0.00	0.00%
Preparing prediction along well paths	0.00	0.00%	0.00	0.00%
Define conditioning regions	0.00	0.03%	0.00	0.00%
Predicting surfaces along well paths	0.04	2.20%	0.00	0.00%
Finding help point clusters	0.00	0.09%	0.00	0.00%
Finding help point probability dist.	0.98	60.01%	1.00	100.00%
Preparing prediction	0.00	0.01%	0.00	0.00%

Predicting surfaces	0.27	16.75%	0.00	0.00%
Post-processing	0.01	0.47%	0.00	0.00%
Calculate zonation statistics	0.00	0.21%	0.00	0.00%
Calculate average statistics	0.00	0.01%	0.00	0.00%
Dip and azimuth maps	0.00	0.00%	0.00	0.00%
Spill point calculations	0.00	0.00%	0.00	0.00%
Writing files	0.15	8.92%	0.00	0.00%
Miscellaneous	0.08	4.95%	0.00	0.00%

Total	1.63	100.00%	1.00	100.00%

 ***** Section 27: Suggested tasks *****

1. A change of specified residual uncertainty has been suggested. See residual uncertainty section.

Total CPU time used by COHIBA: 1.63 s
 Total real time used in COHIBA: 1.00 s

Part V

Theory

20 Prediction of surfaces

20.1 Surfaces and intervals

The basic assumption made by COHIBA is that any surface is obtained by adding the thickness of intervals. So the fundamental building blocks are the `<intervals>` specified by `<interval>`. The connection between surfaces and intervals is made by specifying the `<top>` and `<base>` surface of every `<interval>`. COHIBA will add the intervals necessary to obtain any surface. Figure 20.1 illustrates a typical situation¹ where surfaces TB, TC, and TD can be obtained in two different ways.

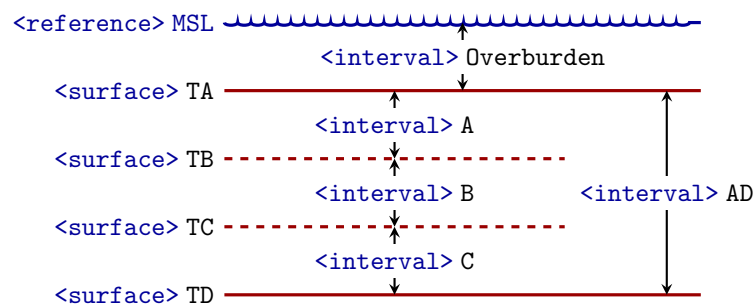


Figure 20.1. Schematic cross section of `<surfaces>` (TA, TB, TC, TD) and intervals (Overburden, A, B, C, AD). Note that `<surface>` TA is the `<top>` for `<interval>` A and AD, and `<surface>` TD is the `<base>` of `<interval>` D and AD.

Any combination of surfaces and intervals is possible as long as three requirements are fulfilled:

1. At least one of the intervals must have the `<reference>` surface as its `<top>` surface.
2. For every `<interval>`, the `<top>` surface must be above the `<base>` surface².
3. For every surface, there must be *at least one* combination of intervals that connects the surface to the `<reference>` surface.

These three requirements guarantees a consistent specification that links any `<surface>` to the `<reference>` surface by adding (or subtracting) intervals.

COHIBA requires a strict ordering of surfaces entering the stratigraphic framework. The order is the sequence `<surface>` elements appear in the [COHIBA model file](#). The order determines:

- Truncation hierarchy caused by `<erosive>` and `<onlapped>` surfaces during the final `<post-process-surfaces>`.
- Identification of zone log transition for `<erosive>` and `<onlapped>` surfaces.
- Determine if an interval is added or subtracted to obtain a particular surface. (This happens when intervals are added on top of deeper surfaces).

Intervals have no specific order and any `<surface>` can be the `<top>` and `<base>` of several intervals.

1. An extensive example is given in [Section 11](#).

2. Not required if `<top>` or `<base>` is a `<free-surface>` not belonging to the stratigraphic framework ([Section 13](#)).

20.2 Stochastic model for surfaces and intervals

The number of intervals defined in the model is denoted I and the number of surfaces are denoted L . There might be more intervals than surfaces so $I \geq L$. To simplify the notation we introduce the set of all intervals that contribute to surface l by \mathcal{J}^l . The depth to surface l is obtained by adding³ the thicknesses of all intervals, i , that belongs to the set \mathcal{J}^l :

$$(20.1) \quad Z^l(\mathbf{x}) = z^{\text{ref.}}(\mathbf{x}) + \sum_{i \in \mathcal{J}^l} \Delta Z_i(\mathbf{x}), \quad \mathbf{x} \in \mathbb{R}^2.$$

The reference surface, $z^{\text{ref.}}(\mathbf{x})$, is usually **MSL** but can be replaced by an arbitrary reference surface using `<reference>`. In the following we will assume that $z^{\text{ref.}}(\mathbf{x}) = 0$ to simplify the notation.

The thickness of interval i is modeled as

$$(20.2) \quad \Delta Z_i(\mathbf{x}) = \Delta m_i(\mathbf{x}) + \Delta \epsilon_i(\mathbf{x}),$$

where $\Delta m_i(\mathbf{x})$ is the *interval thickness trend* and $\Delta \epsilon_i(\mathbf{x})$ is the *interval thickness residual*. The interval thickness residual is modeled as a zero mean *Gaussian random field* (Abrahamsen, 1997) specified by the correlation function, $\rho(h)$, and the **standard deviation (SD)**, $\sigma_i(\mathbf{x})$, so that

$$(20.3a) \quad E\{\Delta \epsilon_i(\mathbf{x})\} = 0,$$

$$(20.3b) \quad \text{Var}\{\Delta \epsilon_i(\mathbf{x})\} = \sigma_i^2(\mathbf{x}),$$

$$(20.3c) \quad \text{Cov}\{\Delta \epsilon_i(\mathbf{x}), \Delta \epsilon_j(\mathbf{y})\} = \delta_{ij} \sigma_i(\mathbf{x}) \sigma_j(\mathbf{y}) \rho(\|\mathbf{x} - \mathbf{y}\|).$$

Interval thickness residuals from different intervals are assumed independent. This is obtained by the Kronecker delta⁴ in Eq. 20.3c. The **SD**, $\sigma_i(h)$, is specified by `<SD>` and the correlation function, $\rho_i(h)$, is specified by the `<variogram>` element.

The interval thickness trend for interval i , is a linear combinations of P_i known trend maps, $f_{i,p}(\mathbf{x})$:⁵

$$(20.4) \quad \Delta m_i(\mathbf{x}) = \sum_{p=1}^{P_i} \beta_{i,p} f_{i,p}(\mathbf{x}).$$

These trend maps are typically constants, isochore maps, or any map used to model the thickness of interval i . The specification of the known trend maps is done by repeated use of the `<value>` in the wrapper element `<trend>`. To simplify, we organize the P_i known trend maps for interval i as a vector $\mathbf{f}_i'(\mathbf{x}) = [f_{i,1}(\mathbf{x}), \dots, f_{i,P_i}(\mathbf{x})]$ so that Eq. 20.4 can be written

$$(20.5) \quad \Delta m_i(\mathbf{x}) = \mathbf{f}_i'(\mathbf{x}) \cdot \boldsymbol{\beta}_i.$$

Using this notation we can write the depth to a surface as

$$(20.6) \quad Z^l(\mathbf{x}) = m^l(\mathbf{x}) + \epsilon^l(\mathbf{x}),$$

where

$$(20.7) \quad m^l(\mathbf{x}) = \sum_{i \in \mathcal{J}^l} \mathbf{f}_i'(\mathbf{x}) \cdot \boldsymbol{\beta}_i$$

$$(20.8) \quad \epsilon^l(\mathbf{x}) = \sum_{i \in \mathcal{J}^l} \Delta \epsilon_i(\mathbf{x}).$$

3. Or subtracting if intervals are added on top of deeper surfaces. We omit this to simplify the notation in this section. COHIBA will of course take proper care of possible negative signs.

4. Kronecker delta: $\delta_{ii} = 1$ and $\delta_{ij} = 0$ for $i \neq j$.

5. The trend coefficients $\beta_{i,1}, \beta_{i,2}, \beta_{i,3}, \dots$ are labeled by italic letters a, b, c, \dots in log files and in most parts of this manual.

These are called the *depth trend* and the *depth residual* respectively. The depth residual is a sum of Gaussian random fields and is therefore also a Gaussian random field.

To further simplify the notation, consider all trend maps and corresponding trend coefficients for all I intervals organized as two vectors:

$$(20.9) \quad \mathbf{f}(\mathbf{x}) = \begin{bmatrix} \mathbf{f}_1(\mathbf{x}) \\ \vdots \\ \mathbf{f}_I(\mathbf{x}) \end{bmatrix}, \quad \boldsymbol{\beta} = \begin{bmatrix} \beta_1 \\ \vdots \\ \beta_I \end{bmatrix}.$$

These vectors contain all the trend maps and all the trend coefficients belonging to all the I intervals so the size of these vectors are $P = \sum_{i=1}^I P_i$.

We can now write Eq. 20.6 as

$$(20.10) \quad Z^l(\mathbf{x}) = \mathbf{f}^{l'}(\mathbf{x}) \cdot \boldsymbol{\beta} + \epsilon^l(\mathbf{x}),$$

where trend maps in $\mathbf{f}_i(\mathbf{x})$ are replaced by zeros when they belong to intervals that does *not* contribute to surface l . That is, $\mathbf{f}_i(\mathbf{x}) = \mathbf{0}$ in \mathbf{f}^l if $i \notin \mathcal{J}^l$.

20.3 Estimating the trend coefficients

All the TVD values at the well points from all the L surfaces can be organized in a column vector:

$$(20.11) \quad \mathbf{Z} = \begin{bmatrix} \mathbf{Z}^1 \\ \vdots \\ \mathbf{Z}^L \end{bmatrix},$$

where $\mathbf{Z}^{l'} = [Z^l(\mathbf{x}_1^l), \dots, Z^l(\mathbf{x}_{N^l}^l)]$ is a column vector of the N^l TVD observations of the depth to surface l . So \mathbf{Z} is a vector of dimension $N = \sum_{l=1}^L N^l$.

Similarly we can organize all the P trend map values at the N well points as a $N \times P$ dimensional *design matrix*⁶

$$(20.12) \quad \mathbf{F} = \begin{bmatrix} \mathbf{F}^1 \\ \vdots \\ \mathbf{F}^L \end{bmatrix},$$

that is build up by $N^l \times P$ dimensional sub-matrices for each surface:

$$(20.13) \quad \mathbf{F}^l = \begin{bmatrix} \mathbf{f}^{l'}(\mathbf{x}_1^l) \\ \vdots \\ \mathbf{f}^{l'}(\mathbf{x}_{N^l}^l) \end{bmatrix}.$$

Using this notation we can write Eq. 20.10 for all the observed TVD values as

$$(20.14) \quad \mathbf{Z} = \mathbf{F}\boldsymbol{\beta} + \boldsymbol{\epsilon},$$

where the residual vector, $\boldsymbol{\epsilon}$, is organized in the same sequence as the vector, \mathbf{Z} . Eq. 20.14 is recognized as a standard linear regression problem for the trend coefficients $\boldsymbol{\beta}$ with correlated residuals.

6. In statistics the design matrix is often denoted by the symbol \mathbf{X} . We use \mathbf{F} and \mathbf{f} here to avoid confusion with the coordinates \mathbf{x} .

20.3.1 Linear regression

The standard estimate for the coefficients, β , in a linear regression model such as Eq. 20.14 can be found in any textbook on (multiple) linear regression as the **ordinary least squares (OLS)** solution:

$$(20.15a) \quad \hat{\beta}_{\text{OLS}} = (\mathbf{F}' \mathbf{F})^{-1} \mathbf{F}' \mathbf{Z}$$

$$(20.15b) \quad \hat{\Sigma}_{\text{OLS}} = \sigma^2 (\mathbf{F}' \mathbf{F})^{-1},$$

where $\text{Var}\{\epsilon_i\} = \sigma^2$ is assumed constant and independent for *all* TVD values. This is not a reasonable assumption in this case since surface depths are highly correlated.

According to equations Eq. 20.3c and Eq. 20.8 the covariance between two surface depths are

$$(20.16) \quad \begin{aligned} \text{Cov}\{Z^l(\mathbf{x}), Z^k(\mathbf{y})\} &= \text{Cov}\{\epsilon^l(\mathbf{x}), \epsilon^k(\mathbf{y})\} \\ &= \text{Cov}\left\{ \sum_{i \in \mathcal{I}^l} \Delta \epsilon_i(\mathbf{x}), \sum_{j \in \mathcal{I}^k} \Delta \epsilon_j(\mathbf{y}) \right\} \\ &= \sum_{i \in \mathcal{I}^l \cap \mathcal{I}^k} \text{Cov}\{\Delta \epsilon_i(\mathbf{x}), \Delta \epsilon_i(\mathbf{y})\} \\ &= \sum_{i \in \mathcal{I}^l \cap \mathcal{I}^k} \sigma_i(\mathbf{x}) \sigma_i(\mathbf{y}) \rho(\|\mathbf{x} - \mathbf{y}\|). \end{aligned}$$

The double sum is removed by using the assumption that interval residuals from different intervals are independent; see the Kronecker delta in Eq. 20.3c. The significance of Eq. 20.16 is that it gives a simple recipe for calculating the covariance between two surface depths at two arbitrary well points. We see that the correlation between the surface depths at different well points is caused by spatial correlation and that surfaces have residuals in common.

The covariances between depths at all well points can be organized in a covariance matrix called the *kriging matrix*:

$$(20.17) \quad \mathbf{K} = \text{Var}\{\mathbf{Z}\}.$$

It is possible to show (Mardia et al., 1979, p. 172) that the best linear unbiased estimator (BLUE) for the coefficients is the **generalized least squares (GLS)** estimator:

$$(20.18a) \quad \hat{\beta}_{\text{GLS}} = (\mathbf{F}' \mathbf{K}^{-1} \mathbf{F})^{-1} \mathbf{F}' \mathbf{K}^{-1} \mathbf{Z}$$

$$(20.18b) \quad \hat{\Sigma}_{\text{GLS}} = (\mathbf{F}' \mathbf{K}^{-1} \mathbf{F})^{-1}.$$

The correlations between the depths at different well points and the local varying variance, $\sigma_i(\mathbf{x})$, at different well points will influence the estimate through the kriging matrix. Note that the ordinary least squares estimate is retrieved if well points are independent and the variance is the same at all well points, that is, $\mathbf{K} = \sigma^2 \mathbf{I}$.

If the number of well points, N , is very large, COHIBA uses a **weighted least squares (WLS)** estimate:

$$(20.19a) \quad \hat{\beta}_{\text{WLS}} = (\mathbf{F}' \mathbf{D}^{-1} \mathbf{F})^{-1} \mathbf{F}' \mathbf{D}^{-1} \mathbf{Z}$$

$$(20.19b) \quad \hat{\Sigma}_{\text{WLS}} = (\mathbf{F}' \mathbf{D}^{-1} \mathbf{F})^{-1},$$

where $\mathbf{D} = \text{Diag}\{\mathbf{K}\}$. This amounts to ignoring the correlation between well points. This approximation is necessary to avoid using too much CPU and RAM. The number of well points where COHIBA switches from GLS to WLS can be changed by `<max-obs-GLS-approx-trend-coef>`. The default is $N = 2000$.

20.3.2 Bayesian estimation

OLS, WLS and GLS methods requires that $N > P$ and that all columns of \mathbf{F} are non-parallel so that $\text{rank}(\mathbf{F}) = P$. If the columns of \mathbf{F} are near parallel or linear combinations of the columns are near parallel a problem called *collinearity* occurs (Weisberg, 1985, p. 196). This is a serious problem since the estimates of the coefficients become unreliable and the estimation variance becomes very large. Collinearity occurs when the data is unable to distinguish the contribution from the different trend maps, $f_{i,p}(\mathbf{x})$. This is usually caused by too few well points, clustering of wells, unobserved surfaces due to pinch outs or too many coefficients in the trend model. Simplifying the thickness trends by removing some of the trend maps is one solution, but usually the chosen trend maps have a particular purpose. So COHIBA supports an alternative way of handling collinearity. This is done by specifying the coefficient values using `<coefficient-mean>` and `<coefficient-SD>`. These numbers are the prior means and the prior SDs in the prior P -dimensional multinormal distribution for the coefficient values

$$(20.20) \quad \beta \sim N_P(\beta_0, \Sigma_0).$$

The diagonal elements of Σ_0 are specified using `<coefficient-SD>` and some of the off-diagonals can be set to non-zero by using `<correlations>`.

The Bayesian estimate for the posterior expectations and covariances are

$$(20.21a) \quad \hat{\beta}_{\text{Bayes}} = \beta_0 + \Sigma_0 \mathbf{F}' (\mathbf{K} + \mathbf{F} \Sigma_0 \mathbf{F}')^{-1} (\mathbf{Z} - \mathbf{F} \beta_0)$$

$$(20.21b) \quad \hat{\Sigma}_{\text{Bayes}} = \Sigma_0 - \Sigma_0 \mathbf{F}' (\mathbf{K} + \mathbf{F} \Sigma_0 \mathbf{F}')^{-1} \mathbf{F} \Sigma_0.$$

This estimate is robust for any N , including $N = 0$. In that case the prior guess, β_0 , is returned. If the prior uncertainty vanishes, $\Sigma_0 \rightarrow \mathbf{0}$, then the prior guess, β_0 , is also returned. It is also possible to fix one or more coefficients by specifying zero prior uncertainty and use the well points for estimating the rest. It can also be shown, on reasonable assumptions, that if $\Sigma_0 \rightarrow \infty$ then we obtain the GLS estimate (Omre and Halvorsen, 1989).

Eq. 20.21a and Eq. 20.21b includes an inversion of the $N \times N$ matrix $(\mathbf{K} + \mathbf{F} \Sigma_0 \mathbf{F}')$. This is CPU and RAM demanding so alternative expressions are used when N is large:

$$(20.22a) \quad \hat{\beta}_{\text{Bayes}} = \hat{\Sigma}_{\text{Bayes}} (\Sigma_0^{-1} \beta_0 + \hat{\Sigma}_{\text{xLS}}^{-1} \hat{\beta}_{\text{xLS}})$$

$$(20.22b) \quad \hat{\Sigma}_{\text{Bayes}} = \left(\Sigma_0^{-1} + \hat{\Sigma}_{\text{xLS}}^{-1} \right)^{-1}.$$

These expressions are algebraically identically to Eq. 20.21a and Eq. 20.21b provided $\text{rank}(\mathbf{F}) = \text{rank}(\Sigma_0) = P$ and $N > P$.

COHIBA uses the robust formulas Eq. 20.21a and Eq. 20.21b when the number of data, N , is few⁷. Otherwise Eq. 20.22a and Eq. 20.22b are used.

The estimates $\hat{\Sigma}_{\text{xLS}}$ and $\hat{\beta}_{\text{xLS}}$ are GLS estimates for moderate number of data, N , and WLS estimates for large N . The number of data where COHIBA switches from GLS to WLS can be changed by `<max-obs-GLS-approx-trend-coef>`.

COHIBA will automatically switch to Bayesian estimation using Eq. 20.21a and Eq. 20.21b if $\text{rank}(\mathbf{F}) < P$ even though the user has chosen universal for the `<kriging-method>`. This is necessary since the GLS and WLS estimates fail to exist if $\text{rank}(\mathbf{F}) < P$.

20.3.3 Trend and trend uncertainty

The estimated depth trend is

$$(20.23) \quad \hat{m}^l(\mathbf{x}) = \mathbf{f}'^l(\mathbf{x}) \cdot \hat{\beta},$$

7. This number is set in the COHIBA model file using the element `<max-obs-direct-estim-trend-coef>`. The current default is 200

where the estimates, $\hat{\beta}$, depends on the estimation methods. This map can be written to file using element `<depth-trend>`.

The estimation method is chosen using the element `<kriging-method>` in the COHIBA model file. Choosing universal amounts to using the GLS estimate, β_{GLS} (Eq. 20.18a) and choosing bayesian amounts to using $\hat{\beta}_{\text{Bayes}}$ (Eq. 20.21a or Eq. 20.22a). Choosing simple amounts to skipping estimation and use the prior guess β_0 (Eq. 20.20).

The depth trend uncertainty is given by

$$(20.24) \quad \hat{\sigma}^l(\mathbf{x}) = \sqrt{\mathbf{f}'^l(\mathbf{x}) \hat{\Sigma} \mathbf{f}^l(\mathbf{x})},$$

where the covariance estimate, $\hat{\Sigma}$, depends on the estimation methods. The estimation method is chosen by `<kriging-method>`; see discussion above. Choosing simple means that $\hat{\Sigma} = \mathbf{0}$ so that the trend uncertainty is zero. Eq. 20.24 ignores the local adaption to well points. This trend uncertainty map (SD) can be written to file using the element `<depth-trend-uncertainty>`.

20.3.4 Residual uncertainty

The surface residual variance is (compare Eq. 20.16)

$$(20.25) \quad \begin{aligned} \sigma^{l^2}(\mathbf{x}) &= \text{Var}\{\epsilon^l(\mathbf{x})\} = \sum_{i \in \mathcal{I}^l} \text{Var}\{\Delta \epsilon_i(\mathbf{x})\} \\ &= \sum_{i \in \mathcal{I}^l} \sigma_i^2(\mathbf{x}). \end{aligned}$$

The residual uncertainty map (SD) can be written to file using the element `<depth-residual-uncertainty>`.

20.3.5 Quality control of the trend estimation

The QC consist of two main objectives: Removing corrupted well points and checking that the trend coefficient estimates are reliable.

20.3.5.1 Outliers

Outliers (Weisberg, 1985, pp. 114–118) are well points that match the trends poorly. This might be an indication that the well points are corrupted. Consider all trend estimates at the well points and organize them in an N dimensional vector similar to \mathbf{Z} . They are obtained by

$$(20.26) \quad \hat{\mathbf{m}} = \mathbf{F} \hat{\beta}.$$

Denote $\mathbf{Z}_n, \hat{\mathbf{m}}_n$ etc. as the values belonging to well point n .

Outliers are identified by calculating a t -value for every well point:

$$(20.27) \quad \mathbf{t}_n = \frac{|\mathbf{z}_n - \hat{\mathbf{m}}_n|}{\sqrt{\mathbf{K}_{nn}}}, \quad \text{for } n = 1, \dots, N,$$

with the classification rules:⁸

$$(20.28) \quad \text{If } \mathbf{t}_n \geq \begin{cases} 1.95996 & \text{then } n \text{ is an outlier (5 \%).} \\ 2.57583 & \text{then } n \text{ is a severe outlier (1 \%).} \\ 3.09023 & \text{then } n \text{ is an error. (0.2 \%).} \\ 3.89059 & \text{then } n \text{ is an extreme error. (0.01 \%).} \end{cases} \quad \begin{array}{l} \text{Action: Flag for inspection} \\ \text{Action: Add uncertainty} \\ \text{Action: Delete from kriging} \\ \text{Action: Delete and reestimate trend.} \end{array}$$

The uncertainty added to a severe outlier is $\sigma = |\mathbf{z}_n - \hat{\mathbf{m}}_n|/2$.

The thresholds can be changed using `<t-value-outlier>`, `<t-value-severe-outlier>`, `<t-value-error>`, and `<t-value-extreme-error>`.

8. Percentages are the fraction of data classified if \mathbf{t}_n has a normal distribution. This is a good approximation if $N \gg P$.

20.3.5.2 Leverage points

Leverage points are well points that strongly influence the estimated trend coefficients. A leverage point might not be identified as an outlier because the trend coefficient estimates adapts strongly to the leverage point.

Using Eq. 20.18a gives

$$(20.29) \quad \hat{\mathbf{m}} = \mathbf{F} \hat{\boldsymbol{\beta}}_{\text{GLS}} = \mathbf{H} \mathbf{Z},$$

where the so-called hat matrix⁹, \mathbf{H} , is

$$(20.30) \quad \mathbf{H} = \mathbf{F}(\mathbf{F}' \mathbf{K}^{-1} \mathbf{F})^{-1} \mathbf{F}' \mathbf{K}^{-1}.$$

Consider

$$(20.31) \quad \mathbf{h}_n = \frac{\partial \hat{\mathbf{m}}_n}{\partial \mathbf{Z}_n} = \mathbf{H}_{nn} \quad (h_n \in [0, 1]).$$

Large \mathbf{h}_n values indicates that the observed depth value, \mathbf{Z}_n , at well point n , has large influence on the estimated trend, $\hat{\mathbf{m}}_n$, at that well point. Note that this analysis is only possible when $\text{rank}(\mathbf{F}) = P$ so that \mathbf{H} exist. This often fails.

A well point n is classified as a leverage point using the following classification rule:

$$(20.32) \quad \text{If } \mathbf{h}_n \geq 2 \cdot P/N \text{ then } n \text{ is a leverage point. Action: Flag for inspection.}$$

Leverage points are seldom classified as outliers using Eq. 20.27 since the estimate is highly influenced by the well points depth value. An alternative is to use the Studentized residuals (Weisberg, 1985, pp. 113-116):

$$(20.33) \quad \mathbf{t}_n^{\text{Student}} = \frac{|\mathbf{z}(\mathbf{x}_n) - \hat{\mathbf{m}}_n|}{\sqrt{\mathbf{K}_{nn}} \sqrt{1 - \mathbf{h}_n}},$$

which will identify outliers that are leverage points using the criteria in Eq. 20.28. COHIBA uses $\mathbf{t}_n^{\text{Student}}$ rather than \mathbf{t}_n for classifying outliers when $\mathbf{t}_n^{\text{Student}}$ is available, that is, when $\text{rank}(\mathbf{F}) = P$.

The `wellpoints.csv` file contains one row for each well point. It is the most important source of information for analyzing the consistency between well points and trends. All columns in `wellpoints.csv` are described in Table 7.7 The formulas used for the calculating the values in `wellpoints.csv` are listed in Table 20.1.

20.3.5.3 Checking the trend coefficient estimates

The trend coefficients, $\boldsymbol{\beta}$, are distributed according to the the prior guess, $N(\boldsymbol{\beta}_0, \boldsymbol{\Sigma}_0)$, the least squares estimates (GLS or WLS), $N(\hat{\boldsymbol{\beta}}_{\text{xLS}}, \hat{\boldsymbol{\Sigma}}_{\text{xLS}})$, or the posterior estimate, $N(\hat{\boldsymbol{\beta}}_{\text{Bayes}}, \hat{\boldsymbol{\Sigma}}_{\text{Bayes}})$. Interesting checks are to compare prior versus xLS and Bayesian estimates for both expectation and standard error. Check if

$$(20.34) \quad \boldsymbol{\Sigma}_{0,pp} > \hat{\boldsymbol{\Sigma}}_{\text{xLS},pp}.$$

Violation of this means that the prior distribution carry more information than the well points. This is not a healthy sign if there is a lot of data. However, this situation is common when there is little data supporting the estimation of a particular trend coefficient.

The following inequality is always satisfied:

$$(20.35) \quad \hat{\boldsymbol{\Sigma}}_{\text{Bayes},pp} \leq \begin{cases} \boldsymbol{\Sigma}_{0,pp} \\ \hat{\boldsymbol{\Sigma}}_{\text{xLS},pp} \end{cases}.$$

9. The name, hat matrix, comes from the observation that \mathbf{H} puts the hat on \mathbf{Z} . According to Eq. 20.26: $\hat{\mathbf{m}} = \mathbf{H} \mathbf{Z}$.

Table 20.1. Formulas used in `wellpoints.csv` for well point n . See Table 7.7 for description of all columns in `wellpoints.csv`.

Column name	Formula	Comment
PriorTrend	$m_0^{l_n}(\mathbf{x}_n) = \mathbf{f}^{l_n'}(\mathbf{x}_n) \cdot \beta_0$	Prior guess on trend.
EstimTrend	$\hat{m}_{\text{xLS}}^{l_n}(\mathbf{x}_n) = \mathbf{f}^{l_n'}(\mathbf{x}_n) \cdot \hat{\beta}_{\text{xLS}}$	Only relevant for universal and Bayesian kriging.
PostTrend	$\hat{m}_{\text{Bayes}}^{l_n}(\mathbf{x}_n) = \mathbf{f}^{l_n'}(\mathbf{x}_n) \cdot \hat{\beta}_{\text{Bayes}}$	Only relevant for Bayesian kriging.
SimTrend	$m^{l_n,s}(\mathbf{x}_n) = \mathbf{f}^{l_n'}(\mathbf{x}_n) \cdot \beta^s$	Simulated trend.
PriorTrendSD	$\sigma_0^{l_n}(\mathbf{x}_n) = \sqrt{\mathbf{f}^{l_n'}(\mathbf{x}_n) \Sigma_0 \mathbf{f}^{l_n}(\mathbf{x}_n)}$	Prior guess on uncertainty (SD).
EstimTrendSD	$\hat{\sigma}_{\text{xLS}}^{l_n}(\mathbf{x}_n) = \sqrt{\mathbf{f}^{l_n'}(\mathbf{x}_n) \hat{\Sigma}_{\text{xLS}} \mathbf{f}^{l_n}(\mathbf{x}_n)}$	Only relevant for universal and Bayesian kriging.
PostTrendSD	$\hat{\sigma}_{\text{Bayes}}^{l_n}(\mathbf{x}_n) = \sqrt{\mathbf{f}^{l_n'}(\mathbf{x}_n) \hat{\Sigma}_{\text{Bayes}} \mathbf{f}^{l_n}(\mathbf{x}_n)}$	Only relevant for Bayesian kriging.
TrendSDRed	$100 \cdot \frac{\sigma_0(\mathbf{x}_n) - \hat{\sigma}_{\text{Bayes}}(\mathbf{x}_n)}{\hat{\sigma}_{\text{Bayes}}(\mathbf{x}_n)}$	Only relevant for Bayesian kriging.
PickSD	$\sigma_{\text{pick}}^{l_n}(\mathbf{x}_n)$	User specified well point TVD pick uncertainty (SD). (Usually zero.)
TotPickSD	$\sqrt{\sigma_{\text{pick}}^{l_n 2}(\mathbf{x}_n) + \sigma_{\text{aut.add}}^{l_n 2}(\mathbf{x}_n)}$	User specified + automatically added TVD pick uncertainty (SD).
Residual	$z^{l_n}(\mathbf{x}_n) - \hat{m}^{l_n}(\mathbf{x}_n)$	Data – estimated trend.
ResidualSD	$\sigma^{l_n}(\mathbf{x}_n) = \sqrt{\mathbf{K}_{nn}}$, see Eq. 20.25.	Specified residual uncertainty (SD).
TotSD	$\hat{\sigma}^{l_n}(\mathbf{x}_n)$, see Eq. 20.24	Residual uncertainty + trend uncertainty.
Mismatch	$z^{l_n}(\mathbf{x}_n) - z_{\text{bilinear}}^{l_n}(\mathbf{x}_n)$	$z_{l_n \text{ bilinear}}(\mathbf{x}_n)$ is the bilinear interpolation of the four closest values in grid.
h	$\mathbf{h}_n = \mathbf{H}_{nn}$	Used to detect leverage points.
t	\mathbf{t}_n , see Eq. 20.27.	Used to detect outliers.
tStud	$\mathbf{t}_n^{\text{Student}}$, see Eq. 20.33.	Used to detect outliers when available.

Note that $\hat{\Sigma}_{\text{xLS}}$ fails to exist if the least squares problem has a non-unique solution, that is, $\text{rank}(\mathbf{F}) < P$.

Too many trend coefficients compared to the number of data gives inaccurate estimates. A simple t-statistic is again efficient:

$$(20.36) \quad t_p = \hat{\beta}_p / \sqrt{\hat{\Sigma}_{pp}}.$$

Finding $t_p < 2$ is a *possible* sign of a trend not supported by the well data.

The `trend-estimation.csv` has one row for each trend coefficient. The six first columns identify the coefficient (interval, surfaces, number of well points etc.). The next columns are described in Table 20.2.

20.4 Prediction of surfaces using kriging

COHIBA uses kriging for interpolation and extrapolation between well points.

The user choose the kriging method by selecting *universal*, *bayesian*, or *simple* in the element `<kriging-method>` in the COHIBA model file. The predicted depth for all these three choices is

Table 20.2. Formulas used in `trend-estimation.csv` for trend coefficient p . See Table 7.6 for description of all columns in `trend-estimation.csv`.

Column name	Value	Comment
PriorMean	β_{0p}	Prior guess on coefficient. (User specified.)
EstimMean	$\hat{\beta}_{\text{xLS},p}$	Estimated coefficient (least squares). This might fail to exist if there are too few data.
PostMean	$\hat{\beta}_{\text{Bayes},p}$	Posterior mean. This value is calculated if <code><kriging-method></code> is bayesian or least squares estimation fails.
PostMeanUpd	$\hat{\beta}_{\text{Bayes},p}$	Posterior mean including zone log information.
SimMean	β_p^s	Simulated value. The value is drawn from estimated or posterior distribution depending on <code><kriging-method></code> .
PriorSD	$\sqrt{\Sigma_{0,pp}}$	Prior SD.
EstimSD	$\sqrt{\hat{\Sigma}_{\text{xLS},pp}}$	Estimation SD.
PostSD	$\sqrt{\hat{\Sigma}_{\text{Bayes},pp}}$	Posterior SD.
PostSDUpd	$\sqrt{\hat{\Sigma}_{\text{Bayes},pp}}$	Posterior SD including zone log information.
UncertRed	$100 \frac{\sqrt{\hat{\Sigma}_{\text{Bayes},pp}} - \sqrt{\Sigma_{0,pp}}}{\sqrt{\Sigma_{0,pp}}}$	Uncertainty reduction in percent.
tPrior	$\beta_{0p} / \sqrt{\Sigma_{0,pp}}$	t-statistic for prior guess.
tEstim	$\hat{\beta}_{\text{xLS},p} / \sqrt{\hat{\Sigma}_{\text{xLS},pp}}$	t-statistic for estimated coefficient.
tPost	$\hat{\beta}_{\text{Bayes},p} / \sqrt{\hat{\Sigma}_{\text{Bayes},pp}}$	t-statistic for posterior estimate.

given by the so-called kriging predictor:

$$(20.37) \quad Z^{*l}(\mathbf{x}) = \hat{m}^l(\mathbf{x}) + \mathbf{k}^{l'}(\mathbf{x}) \mathbf{K}^{-1}(\mathbf{Z} - \hat{\mathbf{m}}),$$

where the N covariances

$$(20.38) \quad \mathbf{k}^{l'}(\mathbf{x}) = \text{Cov}\{Z^l(\mathbf{x}), \mathbf{Z}\}$$

are calculated using Eq. 20.16 and $\hat{m}^l(\mathbf{x})$ is the estimated depth trend given by Eq. 20.23. So the difference between the three available kriging methods is the choice of trend estimation.

Note that the kriging predictor consists of the estimated trend and the predicted residual:

$$(20.39) \quad \epsilon^{*l}(\mathbf{x}) = Z^{*l}(\mathbf{x}) - \hat{m}^l(\mathbf{x}) = \mathbf{k}^{l'}(\mathbf{x}) \mathbf{K}^{-1}(\mathbf{Z} - \hat{\mathbf{m}}).$$

Estimating the trend is fast compared to predicting the residual at every grid node. To speed up the calculation of the residual, COHIBA calculates

$$(20.40) \quad \mathbf{w} = \mathbf{K}^{-1}(\mathbf{Z} - \hat{\mathbf{m}})$$

once, and use

$$(20.41) \quad \epsilon^{*l}(\mathbf{x}) = \mathbf{k}^{l'}(\mathbf{x}) \cdot \mathbf{w}$$

for every grid node. This is called the *dual kriging system*. The most time consuming task is therefore to calculate all the N covariances at every grid node for every surface.

The prediction uncertainty¹⁰ that correspond to the three different kriging choices can not be formulated as one single formula, although they are closely related. The prediction uncertainties are

$$(20.42a) \quad \sigma^{*l^2}(\mathbf{x}) = \sigma^{l^2}(\mathbf{x}) - \mathbf{k}^{l'}(\mathbf{x})\mathbf{K}^{-1}\mathbf{k}^l(\mathbf{x}) \quad \text{Simple kriging}$$

$$(20.42b) \quad \sigma^{*l^2}(\mathbf{x}) = \sigma^{l^2}(\mathbf{x}) - \mathbf{k}^{l'}(\mathbf{x})\mathbf{K}^{-1}\mathbf{k}^l(\mathbf{x}) + (\mathbf{f}^{l'}(\mathbf{x}) - \mathbf{k}^{l'}(\mathbf{x})\mathbf{K}^{-1}\mathbf{F})(\mathbf{F}'\mathbf{K}^{-1}\mathbf{F})^{-1} \cdot (\mathbf{f}^{l'}(\mathbf{x}) - \mathbf{k}^{l'}(\mathbf{x})\mathbf{K}^{-1}\mathbf{F})' \quad \text{Universal kriging}$$

$$(20.42c) \quad \sigma^{*l^2}(\mathbf{x}) = \sigma^{l^2}(\mathbf{x}) + \mathbf{f}^{l'}(\mathbf{x})\Sigma_0\mathbf{f}^l(\mathbf{x}) - (\mathbf{k}^{l'}(\mathbf{x}) + \mathbf{f}^{l'}(\mathbf{x})\Sigma_0\mathbf{F}')(\mathbf{K} + \mathbf{F}\Sigma_0\mathbf{F}')^{-1} \cdot (\mathbf{k}^{l'}(\mathbf{x}) + \mathbf{f}^{l'}(\mathbf{x})\Sigma_0\mathbf{F})' \quad \text{Bayesian kriging}$$

These expressions are more cumbersome to evaluate than the kriging predictor since we can't use the dual kriging system, Eq. 20.41, and must calculate the so-called kriging weights:

$$(20.43) \quad \mathbf{w}^{l'}(\mathbf{x}) = \mathbf{k}^{l'}(\mathbf{x})\mathbf{K}^{-1}.$$

This involves solving an N -dimensional linear equation system for every grid node for every surface. So execution time is longer when choosing to include the prediction uncertainty. This is chosen by `<depth-uncertainty>`.

To speed up calculations COHIBA divides the `<output-grid>` area into smaller rectangles¹¹. A subset of the N well points are selected for each rectangle. The subset contains all well points within the rectangle as well as all well points within a neighborhood of the rectangle defined by the variogram ranges. The number of well points in the subset and therefore the size of \mathbf{Z} , \mathbf{F} , $\mathbf{k}(\mathbf{x})$ and \mathbf{K} , can be dramatically reduced in this way giving short execution time even with thousands of well points. The approach is an adaption of the ideas presented in Vignès et al. (2017).

It is easy to see that Bayesian kriging becomes simple kriging if $\Sigma_0 \rightarrow \mathbf{0}$ since all expressions involving Σ_0 vanish. It is also possible to show that Bayesian kriging becomes universal kriging if $\Sigma_0 \rightarrow \infty$ (Omre and Halvorsen, 1989). This limit is not numerically stable so we discourage the specification of large uncertainties in Σ_0 .

20.4.1 Well point pick uncertainty and well path uncertainty

COHIBA gives the possibility of specifying a TVD pick uncertainty for well points. Pick uncertainty is automatically added when COHIBA detects inconsistent well points at the same map location.

The user may add pick uncertainty to well points using ROXAR ATTRIBUTES TEXT files or COHIBA well points file. It is also possible to specify a well path TVD uncertainty using `<wellpoint-TVD-pick-SD-log-name>`. The well point pick uncertainties are assumed to be independent whereas the well path uncertainties are highly correlated along the well path.

The TVD pick uncertainty, ϵ_{pick} , in the well points is introduced as

$$(20.44) \quad Z_{\text{well point}}^l(\mathbf{x}) = m^l(\mathbf{x}) + \epsilon^l(\mathbf{x}) + \epsilon_{\text{pick}}^l(\mathbf{x}) + \epsilon_w^l(\mathbf{x}).$$

The pick uncertainty is assumed to be a Gaussian probability distribution with zero expectation. It is assumed that the pick uncertainty and the depth residuals are uncorrelated.

The equations for the trend coefficient estimates and the kriging equations are unaltered, but the

10. Prediction uncertainty is also called prediction error or kriging error.

11. COHIBA subdivides into rectangles and uses well points from neighborhoods if the number of well points exceed the number set by `<threshold-for-conditioning-in-neighbourhood>`.

kriging matrix, \mathbf{K} , that is, the covariances between well points, is modified:

$$(20.45) \quad \begin{aligned} \mathbf{K} &= \text{Var}\{\mathbf{Z}_{\text{well point}}\} \\ &= \text{Var}\{\boldsymbol{\epsilon}\} + \text{Var}\{\boldsymbol{\epsilon}_{\text{pick}}\} + \text{Var}\{\boldsymbol{\epsilon}_w\}. \end{aligned}$$

The TVD pick uncertainty specified in the [COHIBA well points file](#) are assumed independent so $\text{Var}\{\boldsymbol{\epsilon}_{\text{pick}}\}$ is diagonal. The well path TVD uncertainties are correlated among well points belonging to well branches from one multilateral well. The well path TVD uncertainty is strongly correlated along the well path so $\text{Var}\{\boldsymbol{\epsilon}_w\}$ will normally be non-diagonal. The covariances are given by [Eq. 23.5](#). This correlation can be modified using [<wellpath-TVD-SD-range>](#).

The surfaces themselves have no pick uncertainty or well path uncertainty so these uncertainties do not affect $\mathbf{k}^l(\mathbf{x})$ in the kriging predictor since $\mathbf{k}^l(\mathbf{x})$ is the covariances between all the well points and surface l at \mathbf{x} .

Non-zero pick uncertainty implies that the kriging predictor is no longer a perfect interpolator. This means that the predicted or simulated surfaces will not honor the well points exactly. Significant well pick uncertainties will also increase the uncertainty in the trend coefficient estimates.

If the pick uncertainties are zero and the well path TVD uncertainty is non-zero and [<allow-wells-to-move>](#) is yes (default no), then the surfaces will interpolate the wells exactly at the well points at their modified positions.

20.5 Depth conversion

COHIBA uses vertical depth conversion defined by the basic kinematic relation

$$(20.46) \quad z = v \cdot \Delta t,$$

where v is the *interval velocity* and Δt is the seismic *travel time* in the interval.

The interval velocities are not exactly known so they are modeled as the sum of an interval velocity trend and an interval velocity residual:

$$(20.47) \quad V_i(\mathbf{x}) = v_i(\mathbf{x}) + \epsilon_{v,i}(\mathbf{x}).$$

The interval velocity trend

$$(20.48) \quad v_i(\mathbf{x}) = \mathbf{f}_i'(\mathbf{x}) \cdot \beta_i$$

consist of known trend maps $\mathbf{f}_i'(\mathbf{x})$ and the trend coefficients β_i . The trends have exactly the same form as the interval thickness trend in Eq. 20.5. The interval velocity residuals, $\epsilon_{v,i}(\mathbf{x})$, are zero mean Gaussian random fields and they are assumed to be independent of residuals from other intervals. The residual represents local interval velocity variations that the interval velocity trend is unable to capture.

The seismic travel times are modeled as

$$(20.49) \quad T^l(\mathbf{x}) = t^l(\mathbf{x}) + \epsilon_t^l(\mathbf{x}),$$

where $t^l(\mathbf{x})$ is the interpreted travel times to surface l and the travel time residual $\epsilon_t^l(\mathbf{x})$ is a zero mean Gaussian random field that accounts for measurement uncertainty and interpretation uncertainty. The travel time residuals for different surfaces are assumed independent¹².

By inserting the interval velocity model and the travel time model into the basic kinematic relation Eq. 20.46, we get

$$(20.50) \quad \Delta Z_i(\mathbf{x}) = V_i(\mathbf{x}) \Delta T_i(\mathbf{x}),$$

where $\Delta T_i(\mathbf{x})$ is the difference between $T^l(\mathbf{x})$ at the base and at the top of interval i .

According to Eq. 20.1 the depth to a surface l is obtained by adding (or subtracting) intervals:

$$(20.51) \quad Z^l(\mathbf{x}) = \sum_{i \in \mathcal{J}^l} \Delta Z_i(\mathbf{x}),$$

where \mathcal{J}^l is the set of intervals that contributes to surface l . This general notation is inconvenient for explaining depth conversion of a set of surfaces. Therefore, the notation is simplified by assuming a set of stacked intervals that can be ordered by the surfaces between them. This makes it possible to replace the sum over all contributing intervals by an ordinary sum over surface and interval order:¹³

$$(20.52) \quad Z^l(\mathbf{x}) = \sum_{i=1}^l \Delta Z_i(\mathbf{x}).$$

12. The assumption of independence is unreasonable when two reflectors are close. It is therefore possible to relax this assumption. See <correlate-close-reflectors> for details.

13. Note that COHIBA always uses the general form Eq. 20.51 so Eq. 20.52 is only used to simplify the notation when explaining the details of the uncertainty models used for travel times and interval velocities.

This sum can be expanded and reordered in the following way:

$$\begin{aligned}
(20.53) \quad Z^l(\mathbf{x}) &= \sum_{i=1}^l V_i(\mathbf{x}) \Delta T_i(\mathbf{x}) \\
&= \sum_{i=1}^l \left(v_i(\mathbf{x}) + \epsilon_{v,i}(\mathbf{x}) \right) \left(t^i(\mathbf{x}) + \epsilon_t^i(\mathbf{x}) - t^{i-1}(\mathbf{x}) - \epsilon_t^{i-1}(\mathbf{x}) \right), \\
&= \sum_{i=1}^l v_i(\mathbf{x}) \left(t^i(\mathbf{x}) - t^{i-1}(\mathbf{x}) \right) + \epsilon_{v,i}(\mathbf{x}) \left(t^i(\mathbf{x}) - t^{i-1}(\mathbf{x}) \right) \\
&\quad + v_i(\mathbf{x}) \left(\epsilon_t^i(\mathbf{x}) - \epsilon_t^{i-1}(\mathbf{x}) \right) + \epsilon_{v,i}(\mathbf{x}) \left(\epsilon_t^i(\mathbf{x}) - \epsilon_t^{i-1}(\mathbf{x}) \right) \\
&= \sum_{i=1}^l v_i(\mathbf{x}) \Delta t_i(\mathbf{x}) + \epsilon_{v,i}(\mathbf{x}) \Delta t_i(\mathbf{x}) + v_i(\mathbf{x}) \left(\epsilon_t^i(\mathbf{x}) - \epsilon_t^{i-1}(\mathbf{x}) \right) + \mathcal{O}(\epsilon^2),
\end{aligned}$$

where $\Delta t_i(\mathbf{x}) = t^i(\mathbf{x}) - t^{i-1}(\mathbf{x})$ is the interval travel time. This can be written as

$$(20.54) \quad Z^l(\mathbf{x}) = \sum_{i=1}^l \left(\Delta m_i(\mathbf{x}) + \Delta \epsilon_i(\mathbf{x}) \right) + \epsilon_z^l(\mathbf{x}) + \sum_{i=1}^{l-1} \Delta \epsilon_t^i(\mathbf{x}) + \mathcal{O}(\epsilon^2),$$

where

$$\begin{aligned}
(20.55a) \quad \Delta m_i(\mathbf{x}) &= v_i(\mathbf{x}) \Delta t_i(\mathbf{x}) && \text{Interval thickness trend.} \\
&= (\mathbf{f}_i'(\mathbf{x}) \cdot \boldsymbol{\beta}_i) \Delta t_i(\mathbf{x}) && \text{(See Eq. 20.48.)}
\end{aligned}$$

$$(20.55b) \quad \Delta \epsilon_i(\mathbf{x}) = \epsilon_{v,i}(\mathbf{x}) \Delta t_i(\mathbf{x}) \quad \text{Interval thickness residual.}$$

$$(20.55c) \quad \epsilon_z^l(\mathbf{x}) = \epsilon_t^l(\mathbf{x}) v_l(\mathbf{x}) \quad \text{Depth residual.}$$

$$(20.55d) \quad \Delta \epsilon_t^i(\mathbf{x}) = \epsilon_t^i(\mathbf{x}) \left(v_i(\mathbf{x}) - v_{i+1}(\mathbf{x}) \right) \quad \text{Velocity contrast residual.}$$

$$(20.55e) \quad \mathcal{O}(\epsilon^2) = \sum_{i=1}^l \epsilon_{v,i}(\mathbf{x}) \left(\epsilon_t^i(\mathbf{x}) - \epsilon_t^{i-1}(\mathbf{x}) \right).$$

These five contributions deserves some explanations:

$\Delta m_i(\mathbf{x})$ is the *interval thickness trend* formed by the interval velocity trend multiplied by the interpreted interval travel time. This thickness trend enters the surface models similar to interval thickness trend in Eq. 20.2.

$\Delta \epsilon_i(\mathbf{x})$ is the *interval thickness residual* caused by the the *interval velocity residual*, $\epsilon_{v,i}(\mathbf{x})$, multiplied by the interval travel time, $\Delta t_i(\mathbf{x})$. This residual plays the exact same role as the interval thickness residual in Eq. 20.2.

$\epsilon_z^l(\mathbf{x})$ is a *depth residual* at surface l caused by the travel time uncertainty at surface l multiplied by the interval velocity in the interval above surface l . This residual is unique for seismic reflectors and have no parallel when considering interval thickness models.

$\Delta \epsilon_t^i(\mathbf{x})$ is a *velocity contrast residual* caused by the travel time uncertainties at surfaces i . The velocity contrast residual adds uncertainty to all surfaces below surface i . The velocity contrast residual is proportional to the interval velocity *contrast*, $v_i(\mathbf{x}) - v_{i+1}(\mathbf{x})$, at surface i and the travel time residual, $\epsilon_t^i(\mathbf{x})$, at surface i .

This residual is usually small compared to the depth residual, $\epsilon_z^l(\mathbf{x})$, since the interval velocity contrasts are small compared to the interval velocities¹⁴.

14. The predecessor of COHIBA called HORIZON ignored this residual since it is dominated by the depth residual and the interval thickness residuals.

$\mathcal{O}(\epsilon^2)$ is the sum of all products of two residuals. This second order residual is ignored in the calculations since it would destroy the Gaussianity and thereby make it impossible to use the efficient methods used by COHIBA for prediction and conditional simulation. Ignoring $\mathcal{O}(\epsilon^2)$ is a good approximation since the product of two residuals will be small compared to other residuals given the reasonable assumptions that $t(\mathbf{x}) \gg \text{Var}\{\epsilon_t^l(\mathbf{x})\}^{1/2}$ and $v_i(\mathbf{x}) \gg \text{Var}\{\epsilon_{v,i}(\mathbf{x})\}^{1/2}$.

The principal difference between Eq. 20.1 for interval thickness models and Eq. 20.54 for interval velocity models are the additional residuals $\epsilon_z^l(\mathbf{x})$ and $\Delta\epsilon_t^i(\mathbf{x})$. These will enter the calculation of covariances so that for instance Eq. 20.16 must include contributions from these additional residuals.

COHIBA allows any combination of thickness interval models and velocity interval models. This may become quite complex when combined with the possibility to use multiple models (Section 11). However, COHIBA keeps track of the bookkeeping so this is not a problem.

20.6 Gridding effects

COHIBA represents surfaces and trend maps on regular grids where the grid nodes represent the accurate value at that point. Well data however, are located at arbitrary locations and these are rarely at the grid nodes. COHIBA must therefore interpolate grid values at well data locations using *bilinear interpolation*. This introduces a gridding error.

Kriging is an exact interpolation technique and will always honor the well points provided that no well point TVD pick uncertainty has been introduced. However, COHIBA represent surfaces by regular grids so kriging is only performed at grid nodes. This implies that comparing surfaces to well points will always give a small gridding mismatch unless the well point is located exactly at a grid node. This is illustrated in Figure 20.2. The gridding mismatch is reported in the `wellpoints.csv` file as `Mismatch`. A similar problem will occur along well paths.

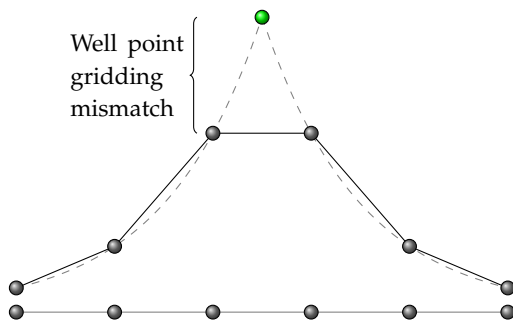


Figure 20.2. Vertical cross section of a surface. Grid nodes are marked as grey dots. A single well point is marked as a green dot. The dashed line is the kriging predictor and the solid line is the bilinear interpolation between the grid nodes. The gridding error is the vertical difference between the dashed line (kriging) and the solid line segments (bilinear interpolation). The gridding mismatch at a well point is the vertical difference between the green dot and the solid line connecting the two nearest grid nodes.

The gridding mismatch is by default removed in the post processing. The four grid nodes closest to well points and zonation points along the well paths are modified so that bilinear interpolation of these nodes will give perfect match at all the well points and zonation points. All the affected grid nodes are adjusted so that the sum of all adjustments is as small as possible. There are rare situations where this approach will fail such as multiple well points within a single cell. The adjustment of grid nodes around well points can be turned off by `<make-surfaces-interpolate-well-points>` and the adjustment of grid nodes along well paths can be turned off by `<allow-small-surface-adjustment-at-zonation-points>`.

20.6.1 Bilinear interpolation

Bilinear interpolation provides a simple and fast way of interpolating four grid node values at any point inside a rectangular cell and is therefore widely used. COHIBA uses bilinear interpolation to interpolate trend values at well points and zonation points.

Consider a rectangle defined by the four corners (x_1, y_1) , (x_1, y_2) , (x_2, y_1) , and (x_2, y_2) and assume that a function $f(x, y)$ is known at these four corners. Bilinear interpolation provides an approximation to $f(x, y)$ at any arbitrary location in that rectangle and is defined as

$$(20.56) \quad f_{BL}(x, y) = c_{11} f(x_1, y_1) + c_{21} f(x_2, y_1) + c_{12} f(x_1, y_2) + c_{22} f(x_2, y_2),$$

for $x_1 \geq x \geq x_2$, and $y_1 \geq y \geq y_2$,

where

$$\begin{aligned} c_{11} &= \frac{(x_2 - x)(y_2 - y)}{\Delta_x \Delta_y} & c_{21} &= \frac{(x - x_1)(y_2 - y)}{\Delta_x \Delta_y} \\ c_{12} &= \frac{(x_2 - x)(y - y_1)}{\Delta_x \Delta_y} & c_{22} &= \frac{(x - x_1)(y - y_1)}{\Delta_x \Delta_y} \\ \Delta_x &= x_2 - x_1 & \Delta_y &= y_2 - y_1. \end{aligned}$$

Note that the weights sum to one: $c_{11} + c_{21} + c_{12} + c_{22} = 1$. The weights, c_{ij} , are proportional to the area of the rectangle opposite to the corner point. This is illustrated in Figure 20.3.

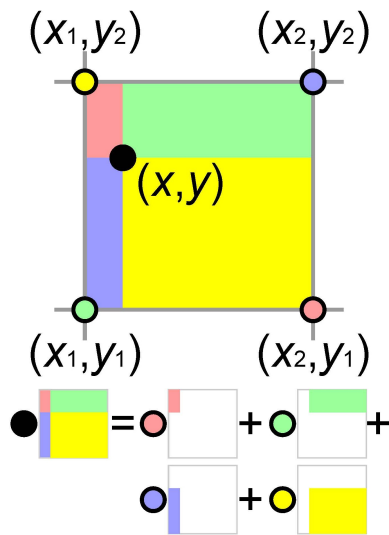


Figure 20.3. Illustration of bilinear interpolation. The value at the black dot, (x, y) , is the weighted average of the values at the colored dots, (x_i, y_j) ; $i, j = 1, 2$, where the weights are proportional to the area of the rectangle of the same color. The illustration is taken from [Wikipedia](#).

The bilinear interpolation surface is continuous but the derivatives are discontinuous perpendicular to cell edges. The bilinear interpolation surface follow straight lines along the x - and y -direction of the grid. Following any direction not parallel with the x - or y -direction gives a second order polynomial. Bilinear interpolation is illustrated in [Figure 20.4](#).

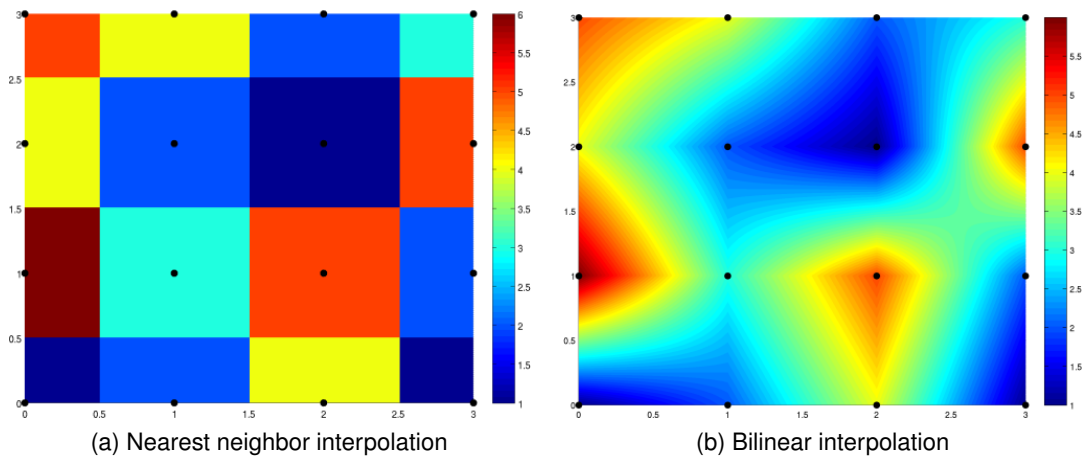


Figure 20.4. The images show how interpolation is applied to a series of data points (black dots) in the box $[0, 3] \times [0, 3]$. Pictures are taken from [www.codecogs.com](#).

The integral of the bilinear interpolation in the rectangle is

$$(20.57) \quad \int_{x_1}^{x_2} \int_{y_1}^{y_2} f_{BL}(x, y) \, dx \, dy = \Delta_x \Delta_y \frac{f(x_1, y_1) + f(x_2, y_1) + f(x_1, y_2) + f(x_2, y_2)}{4}.$$

This can be used for finding volume of the rectangle between two surfaces. The situation is slightly more complicated for the volume between two crossing surfaces since only the positive part contribute. This is also possible to calculate analytically and is used when `<volume-calculation-method>` is bilinear.

21 Stochastic simulation

Stochastic simulation is chosen by selecting `simulation` in `<mode>`. Stochastic simulation generates a set of realizations by randomly drawing all the trend coefficients and all the Gaussian residuals. The trend coefficients are drawn from the posterior distributions and the Gaussian residuals are drawn conditioned on the well points and well paths. The number of realizations can be specified by `<number-of-realizations>`.

COHIBA uses a simulation algorithm for conditional simulation that is based on (Journel and Huijbregts, 1978, pp. 495–498)

$$(21.1) \quad Z^{ls}(\mathbf{x}) = m^{ls}(\mathbf{x}) + \epsilon^{ls}(\mathbf{x}) + \mathbf{k}^l(\mathbf{x})\mathbf{K}^{-1}(\mathbf{Z} - \mathbf{m}^s - \boldsymbol{\epsilon}^s),$$

where superscript s indicates simulated (randomly drawn) and where

$$(21.2a) \quad m^{ls}(\mathbf{x}) = \mathbf{f}^{l'}(\mathbf{x}) \cdot \boldsymbol{\beta}^s$$

$$(21.2b) \quad \mathbf{m}^s = \mathbf{F} \boldsymbol{\beta}^s$$

$$(21.2c) \quad \epsilon^{ls}(\mathbf{x}) = \sum_{i \in \mathcal{I}^l} \Delta \epsilon_i^s(\mathbf{x}).$$

Eq. 21.1 should be compared to the kriging predictor Eq. 20.37. The differences are that a simulated trend is used instead of an estimated trend, and a simulated residual, $\epsilon^{ls}(\mathbf{x})$, is added to the trend. Note that the marginal expectation and SD of $Z^{ls}(\mathbf{x})$ are $Z^{*l}(\mathbf{x})$ and $\sigma^{*l}(\mathbf{x})$. It is possible to show that $Z^{ls}(\mathbf{x})$ has the correct conditional spatial covariance.

Expression Eq. 21.1 gives the following simulation algorithm:

1. Estimate the trend coefficients in the linear trends. The estimation method will depend on the chosen `<kriging-method>`.
2. Randomly draw the trend coefficients from the multi-normal distribution

$$\boldsymbol{\beta}^s \sim N_P(\hat{\boldsymbol{\beta}}, \hat{\boldsymbol{\Sigma}}),$$

where $\hat{\boldsymbol{\beta}}$ and $\hat{\boldsymbol{\Sigma}}$ are the estimated expectations and the estimation variances. Use the drawn coefficients to form the *simulated trends* (Eq. 21.2a).

3. Randomly draw all the interval residuals, $\Delta \epsilon_i^s(\mathbf{x})$, using an `fast Fourier transform (FFT)` algorithm. See Dietrich and Newsam (1993), Wood and Chan (1994) and Abrahamsen et al. (2018). These simulated interval residuals are added to form the simulated surface residuals according to Eq. 21.2c.
4. The *simulated residuals* are added to the simulated trends to obtain the *unconditionally simulated surfaces* $m^{ls}(\mathbf{x}) + \epsilon^{ls}(\mathbf{x})$.
5. Extract the simulated trends and residuals at the well points to form the vectors \mathbf{m}^s and $\boldsymbol{\epsilon}^s$. Subtract these simulated trend values from the well point depths, \mathbf{Z} , and add the simulated residuals to obtain the vector $\mathbf{Z} - \mathbf{m}^s + \boldsymbol{\epsilon}^s$.
6. The final step is to condition the unconditionally simulated surfaces to the well points by performing simple kriging. This is done by solving $\mathbf{k}^l(\mathbf{x})\mathbf{K}^{-1}(\mathbf{Z} - \mathbf{m}^s + \boldsymbol{\epsilon}^s)$ and adding the result to the unconditionally simulated surfaces.

The first and the last step are by far the most time consuming, and they are identical to the operations performed when doing deterministic modeling using the kriging predictor, Eq. 20.37. Therefore, the CPU time for prediction and stochastic simulation is comparable.

The stochastic simulation algorithm is very accurate and will ensure almost perfect agreement with the specified model (trends, variograms, uncertainties, dependencies, pick uncertainties, etc.) and the supplied data. The expectation of Eq. 21.1 gives the kriging predictor Eq. 20.37.

21.1 Unconditional simulation

The simulated residuals, $\Delta\epsilon_i^s(\mathbf{x})$, are realizations from *Gaussian random fields*. These are drawn using an FFT simulation algorithm. See Ripley (1987), Dietrich and Newsam (1993), Wood and Chan (1994) and Abrahamsen et al. (2018). The FFT algorithm reproduces any variogram almost perfect. It is superior to any other algorithm for stochastic simulation of unconditional Gaussian random fields including the two most common approaches: Sequential Gaussian simulation (SGS) and turning bands simulation. Section 22 contains examples of simulated residuals.

21.2 Depth conversion

The situation is in principal identical when intervals are formed using depth conversion. However, the details are slightly more complex: Interval velocity residuals and travel time residuals are drawn independently and the interval thickness residuals, depth residuals and velocity contrast residuals are formed according to Eq. 20.55b, Eq. 20.55c and Eq. 20.55d respectively. These residuals are used to obtain the simulated surfaces according to Eq. 20.54. Note that the second order residual, Eq. 20.55e, is dropped to guarantee perfect data conditioning and to ensure consistency with prediction of deterministic surfaces. The simulated travel time maps are written to file (Table 7.2). The simulated travel time residual can be obtained by subtracting the specified <travel-time> surface. The velocity residual is not written to file.

21.3 Stochastic simulation versus prediction

21.3.1 Monte Carlo uncertainty

The average of a large number of simulated realizations will approximate the kriging predictor. Also the (pointwise) empirical SD of a large set of simulated realizations will approximate the prediction uncertainty. Note however that the Monte Carlo uncertainty converges slowly. The average of N samples from a normal distribution is distributed as

$$\bar{x} \sim N(\mu, \sigma/\sqrt{N}), \quad \text{where } x \sim N(\mu, \sigma).$$

So the average of 100 simulated realizations has a SD that is 10 % of the SD of the set of realizations. So the average map of 100 simulated surface realizations can easily differ from the predicted surface by 20 % of the prediction uncertainty. Increasing the number of realizations to 1000 helps but the SD of the average is still 3.2 % of the prediction uncertainty. Again, differences of 6 % of the prediction uncertainty is not unlikely.

The situation is slightly more complicated for the uncertainty of the empirical SD. The empirical SD has a χ -distribution that is skewed and the estimate is biased. The bias is insignificant for large samples (> 100) and it will drown in the estimation uncertainty even for small samples sizes. From Wikipedia on SD:

To show how a larger sample will increase the confidence interval, consider the following examples: For a small population of $N = 2$, the 95 % confidence interval of SD is from 0.45 SD to 31.9 SD. In other words, the SD of the distribution in 95 % of the cases can be larger by a factor of 31 or smaller by a factor of 2. For a larger population of $N = 10$, the confidence interval is 0.69 SD to 1.83 SD. So even with a sample population of 10, the actual SD can still be almost a factor 2 higher than the sampled SD. For a sam-

ple population $N = 100$, this is down to 0.88 SD to 1.16 SD. To be more certain that the sampled SD is close to the actual SD we need to sample a large number of points.

So expect to find a lot of noise in the empirical SD maps. Again the noise drops at approximately $1/\sqrt{N}$.

21.3.2 Systematic differences

There are also a few approximations that might introduce differences between prediction and stochastic simulation.

1. The β^s is drawn independently of $R^{ls}(\mathbf{x})$ and this is not strictly correct. The (posterior) distribution of β^s depend on the residuals since observations include the residuals.
2. Predictions conditioned on well paths introduces *surface help points*. These surface help points replaces the constraints imposed by the well path. This replacement is an approximation that might introduce bias. Stochastic simulation does not require any surface help points and a set of simulated realizations will have the correct non-Gaussian distribution. See [Section 23.1](#) for some detail on conditioning on well paths and [Abrahamsen and Benth \(2001\)](#) for the technical details.
3. Rejection sampling will affect stochastic simulation and not prediction. See [Section 21.4](#).

21.4 Rejection sampling

Rejection sampling is a stochastic simulation technique that can be used in simulation `<mode>` to draw realizations that are in agreement with some non-linear acceptance criteria.

COHIBA can use rejection sampling to ensure that the following acceptance criteria are fulfilled:

- An interval is thicker than `<minimum-thickness>` everywhere.
- The `<spill-point>` of a surface is `<spill-point-above>`, `<spill-point-below>` or `<spill-point-at>`.
- The area trapped above a `<spill-point>` is larger than `<trap-larger-than>`.

It is possible to impose several acceptance criteria on multiple surfaces and intervals.

There is a risk of getting extremely high rejection (low acceptance) rates, and therefore extremely slow generation of accepted realizations. This is in particular true if multiple acceptance criteria are imposed. COHIBA will abort execution during the initial realizations if the rejection rate is higher than `<max-rejection-rate>`. The default maximum rejection rate is 90 %. The estimation of the rejection rate is performed during the first 10 % of the specified `<number-of-realizations>`. The estimation is performed during the 10 first simulations if the number of realizations is less than 100. If the estimated rejection rate is so high that it is improbable (less than 5 %) that it is less than the maximum rejection rate, then the simulation is aborted during these initial simulations. COHIBA will provide an estimate of the true rejection rate if the simulations are aborted.

If COHIBA estimates a rejection rate higher than `<max-rejection-rate>` the user must make changes to obtain the required `<number-of-realizations>`. One possibility is to increase the `<max-rejection-rate>` and be patient. The alternative is to relax the `<acceptance-criteria>` or modify the stochastic model for the surfaces so that acceptance criteria are less challenging.

The average maps (see [Section 7.1](#)) will normally be similar to the predicted maps if the number of realizations is large¹. This is not so if an `<acceptance-criteria>` apply, unless the rejection rate is zero. It is recommended to compare the predicted depth to the average map from a stochastic simulation. A difference shows that the acceptance criteria have a noticeable impact on the surface depths. It can also be interesting to compare the prediction uncertainty map to the empirical uncertainty (SD) maps obtained from all the realizations. The empirical uncertainty maps are usually quite noisy but it is usually possible to see reduction in uncertainty due to the acceptance criteria.

For an example illustrating rejection sampling see [Section 10](#).

1. See [Section 21.3](#) for a discussion on the difference between average maps and predicted maps.

22 Variogram examples

This section contains some realizations made by stochastic simulation to illustrate different variograms specified by `<type>` in `<variogram>`. All realizations have the same expectation and SD. The `<range>` is one fifth of the length of the sides. All realizations are generated using the same random `<seed>` so that many features appear similar.

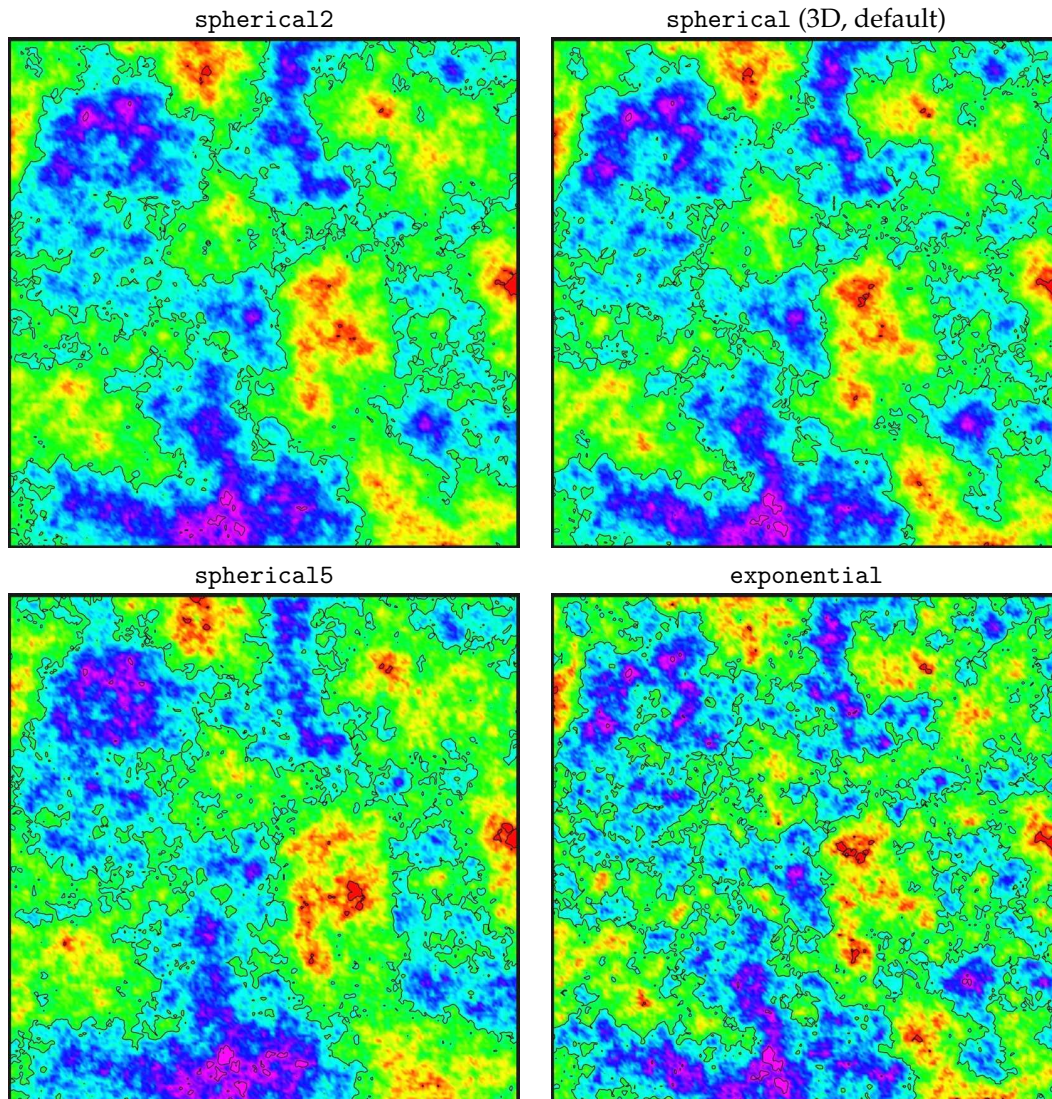


Figure 22.1. Spherical and exponential variograms.

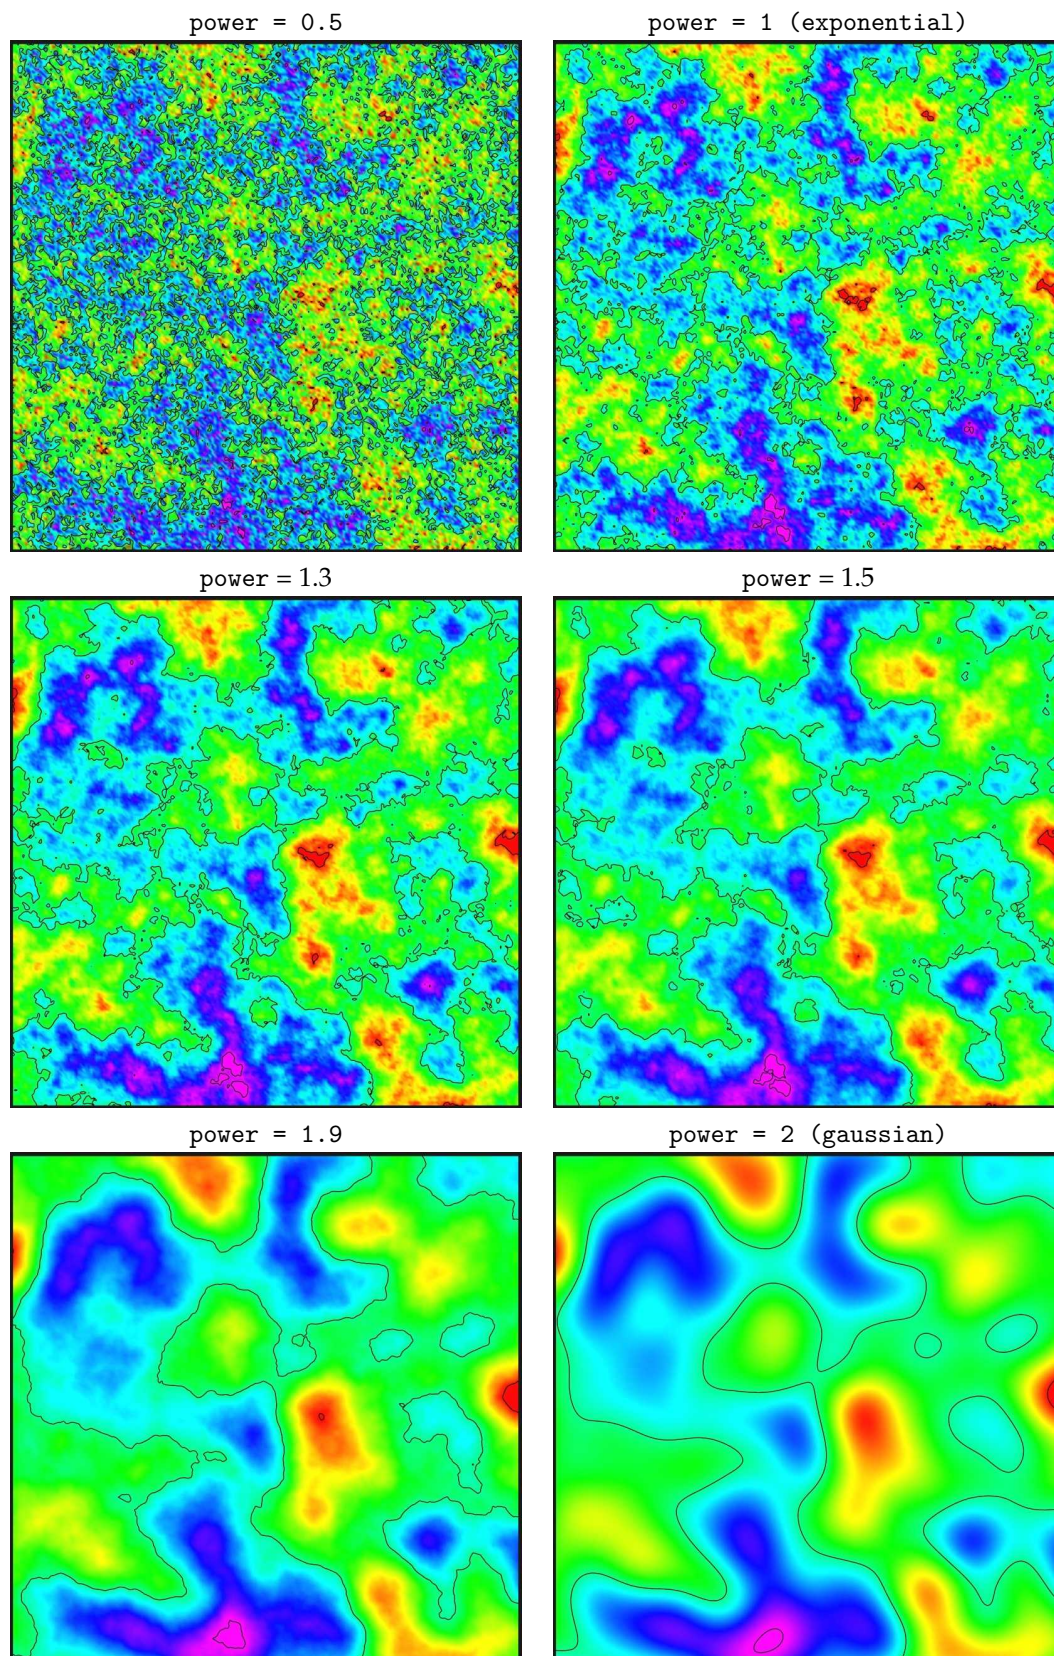


Figure 22.2. General exponential variograms for different `<power>`. Note that the exponential variogram is identical to power = 1 and the gaussian variogram is identical to power = 2.

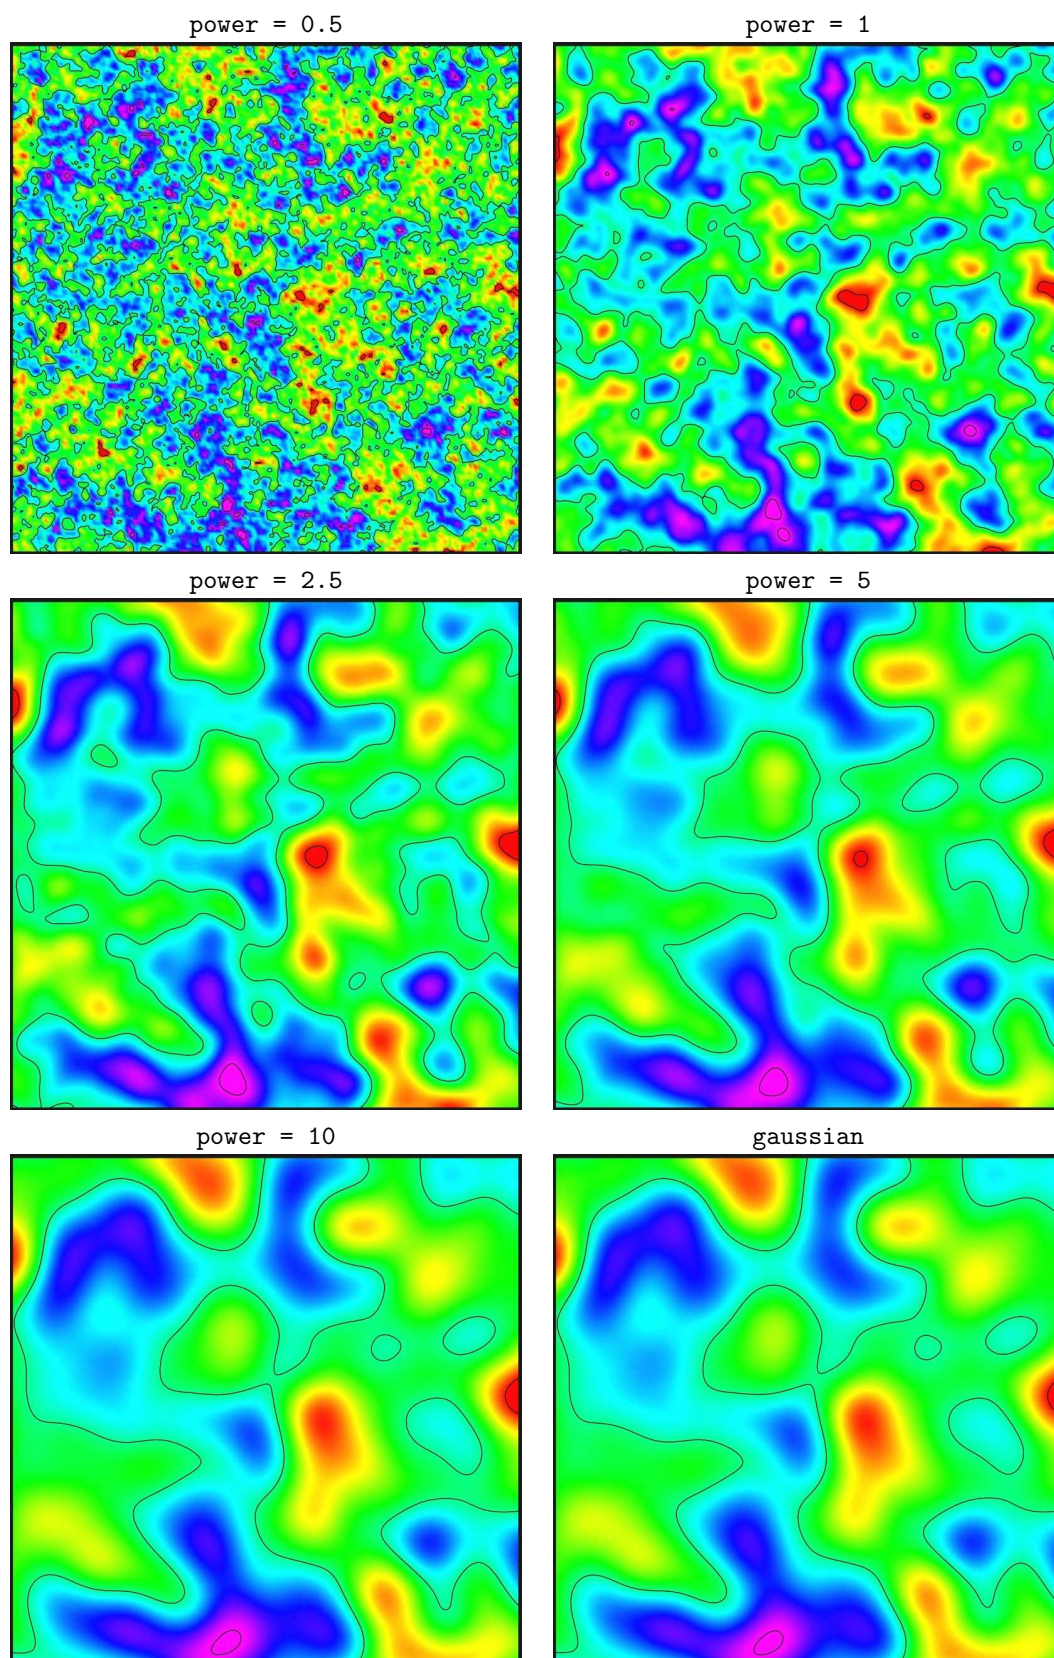


Figure 22.3. Rational quadratic variograms. Note that these variograms approach the gaussian variogram when power becomes large. This variogram is not numerically stable for large values of power so we recommend to use the gaussian variogram instead for power > 10.

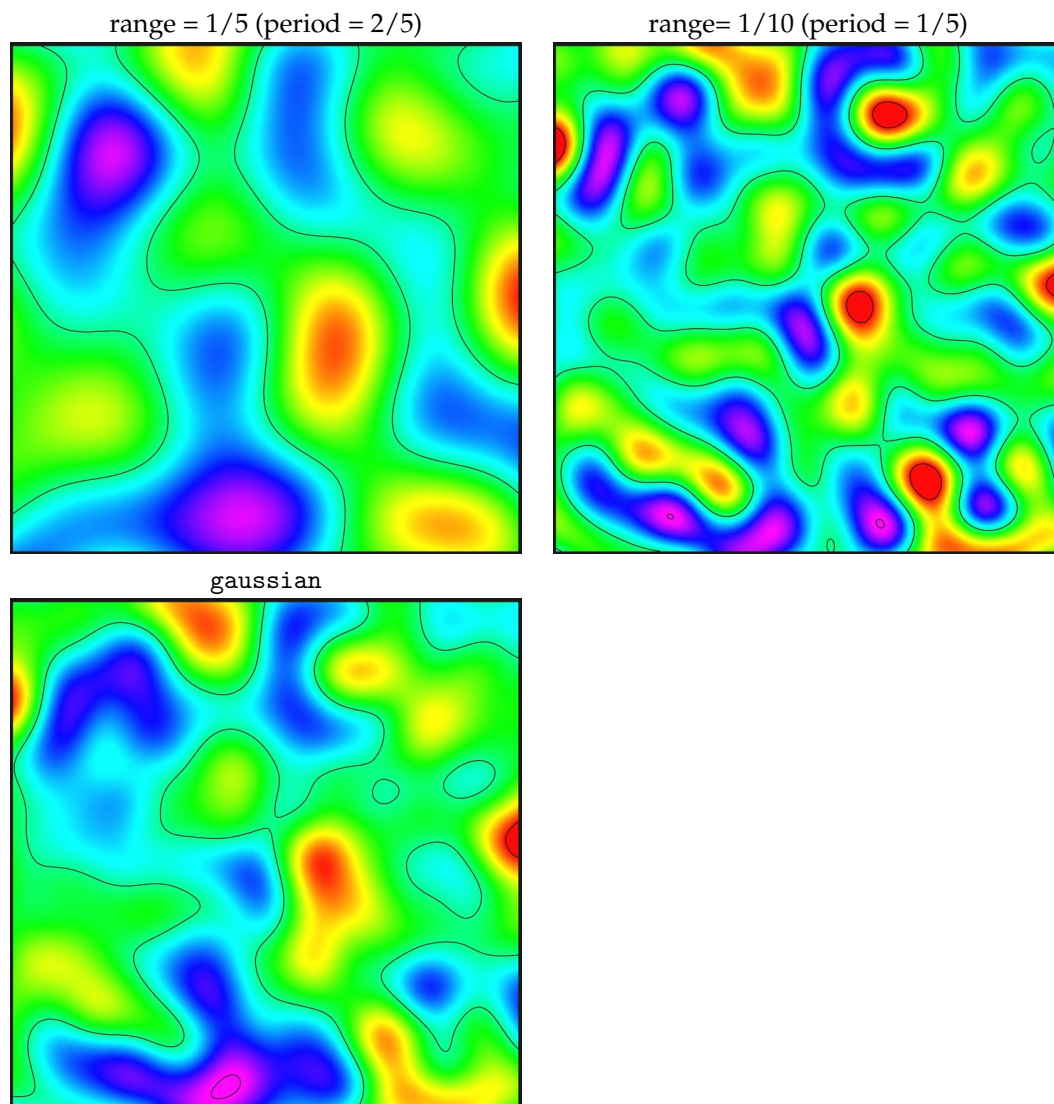


Figure 22.4. Damped sine variograms. The damped sine variogram gives a smooth regular cyclic appearance. The full period is twice the specified range. The *gaussian* variogram is added for comparison.

23 Conditioning to zone logs

The challenge of using the full well path is that these impose a soft restriction on the surfaces. The zone logs tells that surfaces are above or below the well path at any particular location. This boils down to conditioning surfaces to inequality constraints. Standard kriging techniques does not include the possibility to condition on constraints (or inequalities).


The approach used by COHIBA is a development of the ideas in [Abrahamsen and Benth \(2001\)](#). The article shows how to use inequality constraints in a kriging setting. Here we outline the basic ideas and the modifications necessary to make this work for a multi layered model.

Using zone log information is activated by choosing yes in the `<condition-to-well-paths>` element. This is the default.


23.1 Procedure for conditioning to zone logs

The approach can be looked upon as a sequence of steps:

1. Select **zonation points** (gray discs) along the well path at a resolution approximately twice the grid resolution. (Typically at 100 meter intervals.) The well path is shown as a red line. The well point is shown as a black disc and the **zonation points** are the gray discs. The two black lines are cross sections of the surfaces above and below the main part of the well path.

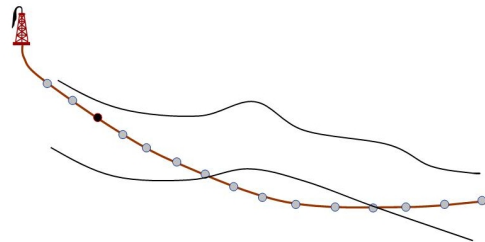

2. Along the well paths, calculate the deterministic surface (solid lines), and the prediction uncertainty (dashed lines) given the well points. This is quite efficient since only a fraction of the grid nodes are close to the well paths.

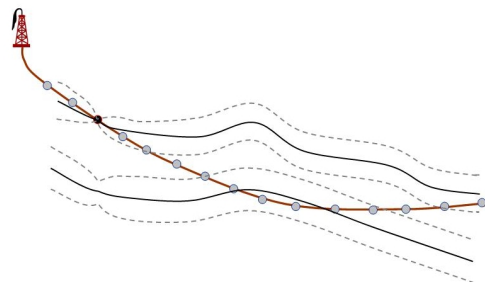


3. Select the zonation points that are in conflict with the zone log, that is, they are on the wrong side of the deterministic surface. Two yellow zonation points are on the wrong side.


Also select the zonation points that are on the correct side of the deterministic surface but are *close* to the deterministic surface. By close is meant less than two times the prediction uncertainty (SD). This thresholds can be modified using `<t-value-first-help-point>`. These additional selected zonation points are marked green in the figure. More zonation points are selected for stochastic simulation than deterministic surfaces because there is a higher risk of ending up on the wrong side for stochastic simulation.

The zonation points that are in conflict with the zone log and the zonation points that are *close* are called the **selected zonation points**. The **surface constraints** that must be fulfilled at the selected zonation points are indicated by the green arrows.


Surface constraints usually come in pairs — one constraint on the surface above and one constraint on the surface below. This is to ensure that the primary surface constraint does not cause a violation of the other. These additional surface constraints are indicated by light green arrows. A single constraint is used when there is no risk of violating the other constraint.

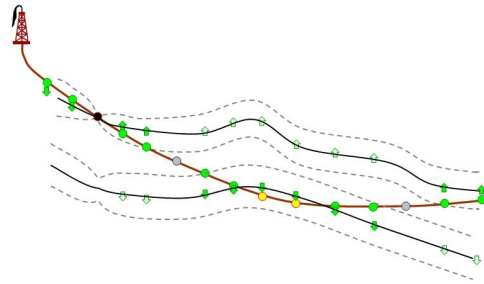

4. Run the Data Augmentation Algorithm to obtain 256 simulated surface realizations at the surface constraints. These 256 realizations represent the non-Gaussian probability distribution for depth at the selected zonation points. The 256 realizations will all be in agreement with the well points and the surface constraints at the selected zonation points. The small black dots in the figure illustrates the spread of the 256 realizations at each surface constraint. The Data Augmentation Algorithm is a stochastic simulation technique for evaluating numerical integrals. The method was introduced by [Tanner and Wong \(1987\)](#).

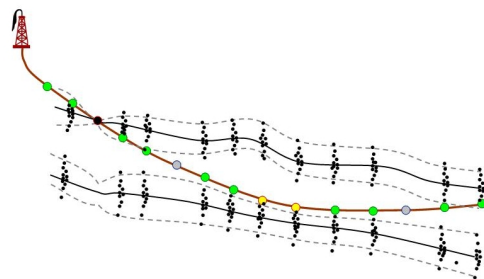

5. **For stochastic simulation:** Select randomly one of the 256 realizations. This set of simulated depth values of the surfaces are called **surface target points**. The simulated trend use the coefficients belonging to the selected realization. The surface target points are seen as small points along the surfaces. The selected surface target points are included as additional well points when conditioning the simulated realization. So the stochastic simulation is essentially made exactly as usual except that the additional surface target points make the kriging system (a lot) larger.
6. **For deterministic surfaces:** Calculate the expectation and the covariances of the 256 simulated realizations at the surface constraints. The expectations at the surface constraints are called **surface target points** since this is where we want the predicted surfaces to go. These surface target points and the covariances are used to calculate a set of **surface help points** that replace the surface constraints. These help points have an associated **TVD** pick uncertainty that are illustrated by the error-bars in the figure. The help points are included as additional well points in the prediction and prediction uncertainty expressions. The expectations and **TVD** pick uncertainty of the surface help points are chosen so that predictions and prediction uncertainty exactly reproduce the surface target points at the selected zonation points.

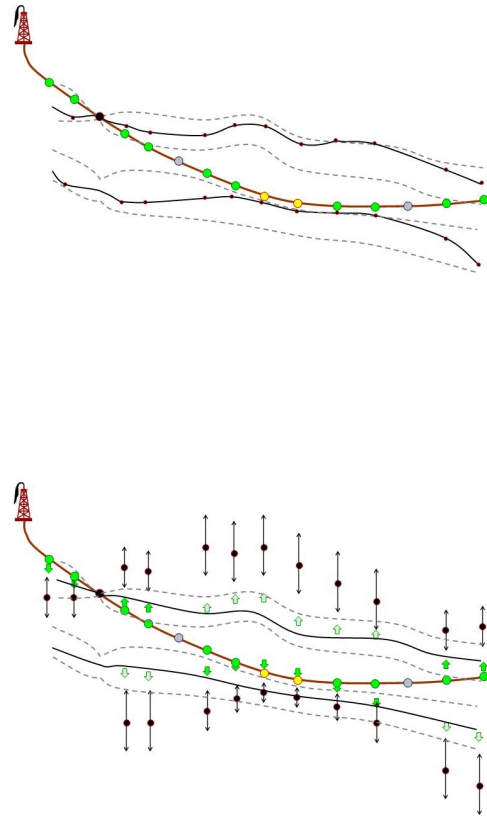

23.2 Well path TVD uncertainty

The well path **TVD** uncertainty describes the difference between the true well path **TVD** values and the **TVD** values obtained from the positioning survey along the well path. This is discussed in [Section 8.4.2](#).

The stochastic model for the true well path **TVD** is

$$(23.1) \quad Z_w(t) = m_w(t) + \epsilon_w(t),$$

where t is **MD** along the well path, $m_w(t)$ is the **TVD** values obtained from the positioning survey at t , and $\epsilon_w(t)$ is the unknown **TVD** residual. The **TVD** residual is modeled as a one-dimensional Gaussian process (random field) with expectation zero and a correlation structure determined by the integrated Ornstein-Uhlenbeck process ([Barndorff-Nielsen, 1997](#)) that behaves like a smoothed Wiener process¹ (continuous random walk). The stochastic model for the well path **TVD** is similar to the stochastic model for a surface. This is seen by comparing [Eq. 20.6](#) for surfaces to [Eq. 23.1](#) for well paths. Both have a trend m and an unknown residual ϵ that is modeled as a random Gaussian variable with spatial correlation. The surface residuals are specified using (a sum of) Gaussian random fields whereas the well path **TVD** residual use a one

1. A Wiener process is the scaling limit of random walk in dimension 1. This means that if you take a random walk with very small steps, you get an approximation to a Wiener process.

dimensional Gaussian process that is a smoothed Wiener process. [Figure 8.11](#) contains simulated realizations of well path TVD residuals.

The predicted well path TVD, conditioned to well points and surface constraints, are calculated using the same formulas as predicting the surfaces. That is, [Eq. 20.37](#) for well path TVD prediction and [Eq. 20.42a](#) for the well path TVD prediction uncertainty. The covariances in these formulas origin from the residual terms in the stochastic model for the well path, [Eq. 23.1](#), and the stochastic model for the well points, [Eq. 20.44](#). The covariaces are calculated using [Eq. 20.16](#) and [Eq. 23.5](#).

The predicted well path TVD values and the well path TVD prediction uncertainties are exported to well files described in [Section 7.6](#).

23.2.1 Stochastic model for well path TVD uncertainty

The integrated Ornstein-Uhlenbeck process , that is used as a model the well path TVD residual, can be expressed as

$$(23.2) \quad \epsilon_w(t) = \frac{a(t)}{r} \int_0^t X(s) ds,$$

where

$$(23.3) \quad X(s) = \int_0^s e^{(\tau-s)/r} dW_\tau$$

is the Ornstein-Uhlenbeck process with mean 0, variance 1 and "range" parameter r . The stochastic integral in [Eq. 23.3](#) is an Itô integral with respect to a standard Wiener (white noise) process, W_t . The deterministic function a_t is chosen such that $\text{Var}\{\epsilon_w(t)\} = \sigma_w^2(t)$, the uncertainty (SD) specified by `<wellpath-TVD-SD-log-name>`. See [Barndorff-Nielsen \(1997\)](#) for more details on the integrated Ornstein-Uhlenbeck process.

The `<wellpath-TVD-SD-range>` specifythe range, r . A large range gives a stiffer well path, that is, the inclination variations are smaller. For a short range, the residual behaves as a random walk model, which produces unrealistically wiggly well paths. The default range (300 meters) is based on a heuristic estimation from a few horizontal wells. See [Figure 8.11](#) for some examples of simulated residuals.

The integrated Ornstein-Uhlenbeck model provides a continuous and smooth (differentiable) model for the residuals. And importantly, it is possible to find formulas for the variance

$$(23.4) \quad \sigma_w^2(t) = a^2(t) \left[t - 2r \left(1 - e^{-t/r} \right) - \frac{r}{2} \left(1 - e^{-2t/r} \right) \right],$$

and the covariance between any pair of points along the well path:

$$(23.5) \quad \text{Cov}\{\epsilon_w(t), \epsilon_w(u)\} = a(t) a(u) \left[t - r \left(1 - e^{-t/r} - e^{-u/r} + e^{-(u-t)/r} \right) + \frac{r}{2} \left(e^{-(u-t)/r} - e^{-(u+t)/r} \right) \right], \quad \text{for } t \leq u.$$

[Eq. 23.4](#) is used to calculate $a(t)$ given the $\sigma_w(t)$ specified by `<wellpath-TVD-SD-log-name>`. If this log is unspecified and `<allow-wells-to-move>` is yes, a parametric TVD uncertainty log is generated using

$$(23.6) \quad \begin{aligned} \sigma_w(t_n) &= c \sum_{i=2}^n |\sin \alpha(t_i)| (t_i - t_{i-1}) \\ &= c \sum_{i=2}^n \sqrt{(x_i - x_{i-1})^2 + (y_i - y_{i-1})^2}, \end{aligned}$$


where t_i is the MD value and $\alpha(t_i)$ is the inclination at zonation point i . The formula essentially says that the well path TVD uncertainty increases proportional to the *lateral distance* of the well. The increase rate, c , is by default 0.002 which is an increase of 2 meters SD for every 1000 meters along a horizontal well path. The increase rate is modified by `<wellpath-TVD-SD-increase-rate>`.

The integrated Ornstein-Uhlenbeck process is naturally extended to calculate covariances between zonation points from different branches of a multilateral well.


23.3 Procedure for conditioning to zone logs with well path TVD uncertainty

This procedure is almost identical to the procedure in Section 23.1. We therefore repeat the steps with focus on the extensions needed to handle the well path TVD uncertainty:


1. The well path is shown as a red line. The well point is shown as a black disc and the **zonation points** are the gray discs. The two black lines are cross sections of the surfaces above and below the main part of the well path. The uncertainty envelope (shaded cone) represents one SD away from the well path (cf. `<wellpath-TVD-SD-log-name>`).

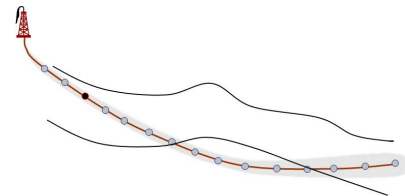


2. Along the well paths, calculate the deterministic surface (solid lines), and the prediction uncertainty (dashed lines) given the well points.

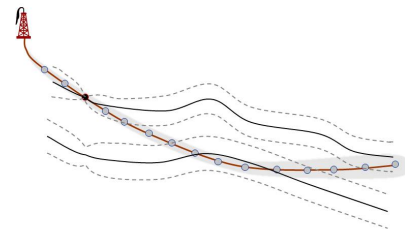


3. Select the zonation points that are in conflict with the zone log or are *close*. The closeness criteria also account for the uncertainty in the well path. Consequently, more zonation points will be selected compared to the case with a certain well path. The associated **surface constraints** are indicated by green and light-green arrows. Note that in this case the surfaces also impose a well position constraint since the wells can move vertically.

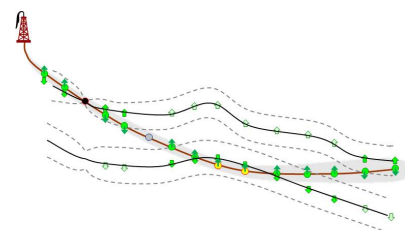


4. Run the Data Augmentation Algorithm to obtain 256 simulated realizations of surface depth values at the surface points *and* 256 samples of well TVD values. The small black dots in the figure illustrates the spread of the 256 surface depth realizations and the small red triangles shows realizations of TVD at the selected zonation points.

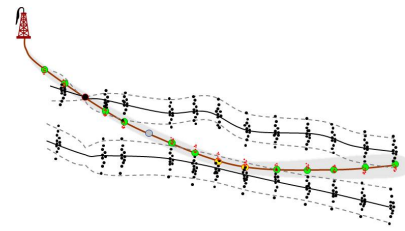

5. **For stochastic simulation:** Select randomly one of the 256 realizations of surface depths and the corresponding TVD values at the selected zonation points. The selected realization of surface depths and well TVD values are used as **surface target points** for the surfaces *and* the well paths.

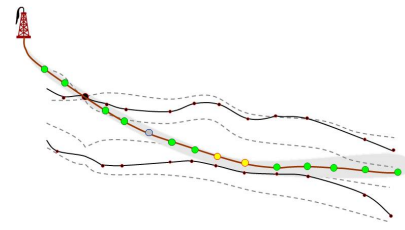


6. **For deterministic surface:** Calculate the expectation and the covariances of the 256 simulated realizations at the surface constraints. Use the 256 realizations of surface depths and the corresponding TVD values at the selected zonation points to obtain the average depth and TVD values. As in Step 6 in Section 23.1 above, the expectations at the surface constraints are called **surface target points** since this is where we want the predicted surfaces to go. These surface target points are again replaced by **surface help points**.

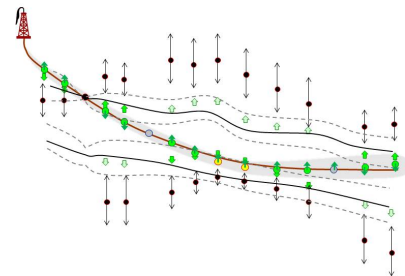

To predict a new well path, the average of the 256 realizations of the TVD values at the selected zonation points are used. The difference between these average values and the original well path is interpolated using simple kriging and added to the original well path. The kriging uses the covariances from the integrated Ornstein-Uhlenbeck process. See Section 8.4.2 for some details.

23.4 Clusters of surface constraints

The drawing of the 256 depth samples at the surface constraints in Step 4 in the previous section, , can be very time consuming if the constraints are strong and there are many constraints. Therefore COHIBA splits the target points and the corresponding surface constraints into *clusters* and treats each cluster independently. A cluster contains target points that constrain highly correlated surface areas. Typically, well points decouple target points so that clusters are split at these well points. This is illustrated in Figure 23.1. The element `<threshold-for-trace-clustering>` specifies the threshold for the correlations. Specifying a high value means that constrained surface values must be strongly correlated to be in the same cluster. Small clusters are important to obtain fast performance. The default correlation threshold is 0.1.

The drawing of the depth samples for each cluster is based on surrounding well points. All points closer than one range and all points on the corresponding well path is collected, before a filtering based on correlation is done. The threshold for this filtering can be specified by `<threshold-for-well-point-cluster-inclusion>`, with a default value of 0.1. Specifying a high value means that fewer well points are used in each cluster. Note that filtering based on this correlation threshold is only done if the number of well points considered is above 200.

Target points from different well paths can belong to the same cluster if they constrain surface values that have a correlation larger than the threshold specified by `<threshold-for-cluster-merging>`. A small value can cause (very) large clusters. The default value is 0.2. Note that correlation with a second well, may force target points that are separated by a well point in their well to be in the same cluster.

If `<threshold-for-trace-clustering>` and `<threshold-for-cluster-merging>` are chosen close to 0, then all target points may end up in one cluster. This is prohibitive for large problems with many well points and many target points and we may get convergence problems. On the other hand, too low correlation thresholds cause COHIBA to treat all surface constraints independently and this will underestimate the true uncertainty and cause zonation errors. So, there is a trade-off between speed and quality. The files `cluster-large-mismatch-Num.rxat` and `cluster-large-mismatch-Well.rxat` contain target points for which there are large mismatches between the target point depth (ie. the predicted surface depth) and the actual surface depth (as interpolated between grid nodes), and may be used to identify problems.

The distribution of the size of clusters are reported in [Section 15.x: Finding surface constraints for well path conditioning](#) in the COHIBA log file and in section [Section 18.x: Target point quality control](#) we give statistics of mismatches between predicted and actual surface depths. The target points and well points in the clusters can be written to files for inspection (see [Section 7.11.2](#)).

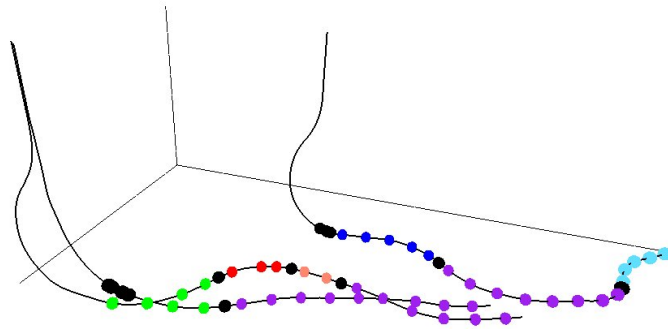


Figure 23.1. Selected zonation points belonging to the same cluster have the same color. The well points are the black. Note how well points splits zonation points in a well into separate clusters. Also note that the two largest clusters contain zonation points from two or three wells.

Part VI

Appendix

A Release notes

The tags (e.g. [952](#)) are links to the COHIBA issue and bug tracking system called [JIRA](#). Permission is required to access the links.

Changes from COHIBA Version 6.1 to Version 7.0



New features:

- Enable the use of distance data in the form of `<distance-points>` in `<well-data>` from deep directional resistivity (DDR) measurements. The data are imported using the ROXAR ATTRIBUTES TEXT file format. See [Section 8.5](#) for more details. These data behave like an additional set of well points. [952](#), [965](#), [968](#), [969](#), [971](#), [974](#), [976](#), [978](#), [985](#), [987](#), [990](#), [1015](#), [1080](#)
 - Export distance points as ROXAR ATTRIBUTES TEXT files to `distance-points/` and export distance data as polylines. [988](#), [1062](#)
- Possibility to use surface dip as input data. The data are supplied in ROXAR ATTRIBUTES TEXT files. See [Section 8.6](#) for more details. [958](#), [1016](#), [1043](#), [1044](#), [1063](#), [1064](#)
 - Uncertainty added to dip points when in conflict with well points or distance points. [1049](#), [1067](#), [1084](#)
 - Add uncertainty to dip points when in big conflict with trend surface. Switched off by `<add-dip-uncertainty-for-trend-conflicts>`. The affected dip points are reported in [Section 13: Processing dip constraints](#) in the COHIBA log file. [1054](#), [1082](#)
 - Export dip points and polylines. Add new labels for well points. [1059](#)
 - Dip data are represented by dip points. The number and position of these are controlled by `<number-of-dip-points>`, `<dip-points-radius>` and `<align-dip-points-to-dip-direction>`. [1077](#)
- Export of dip and azimuth maps from depth and depth trend surfaces. See [Table 7.1](#). [1034](#), [1042](#), [1079](#)
- Implement PETREL POINT WELL DATA format for input of well points, dip points and distance points. [1041](#), [1053](#)
- Export minimum and maximum maps of intervals when simulating. See [Section 7.1.1](#). [1029](#)
- Enable extraction of coordinates from well paths using MD. This makes it possible to use MD instead of coordinates in ROXAR ATTRIBUTES TEXT and PETREL POINT WELL DATA input files. Extracted coordinates are reported in [Section 2: Loading input data](#) of the COHIBA log file. [1055](#)



Improvements:

- New `<add-active-attribute-to-output>` under `<additional-output-control>`. [938](#)
- Accept well names containing space in ROXAR RMS WELL files. [945](#)
- Modified calculation of help points when not moving wells. [972](#)
- New `<air-interpretations-present>` to simplify the use of air-interpreted travel time maps. [989](#)

- Log statistics of attribute ACTIVE for input maps in the [COHIBA log file](#). 996
- Improved logging for the linear (instantaneous) velocity model in [Section 1: Model settings](#) and [Section 2: Loading input data](#) in the [COHIBA log file](#). 999, 1076
- Accept # as start-of-comment in the [COHIBA model file](#) to simplify commenting and to avoid an infinite loop when reading the model file. 1012
- The "[Float] Well point TVD pick uncertainty" column is now required in all input [ROXAR ATTRIBUTES TEXT](#) and [PETREL POINT WELL DATA](#) files. 1013
- New element `<write-correlation-files>` switches on or off the writing of [posterior-correlation-matrix.dat](#) and [residual-correlation-matrix.dat](#). 1014
- For consistency, a few remaining uses of *well trajectory* has been replaced by *well path* in the [COHIBA log file](#). 1017
- Rename [COHIBA model file](#) elements:
 - For consistency, `<distance-between-zonation-points>` in `<model-settings>` has been renamed to `<sampling-distance>` and moved to `<wells>`. 983
 - `<well-trajectories>` has been renamed `<updated-well-paths>`. 1017
 - To avoid confusion, `<simulate-trend-uncertainty>` has been renamed to `<simulate-simple-kriging-trends>` and moved from `<model-settings>` to `<advanced-settings>`. 1018
 - Element `<well-log>` has been renamed to `<wells>` to reflect that it contains a specification of the well path *and* associated well logs. It is still possible to use `<well-log>` but this might be removed in a future release. 1020
 - Element `<interval-models>` has been renamed to `<intervals>`. It is still possible to use `<interval-models>` but this might be removed in a future release. 1093
 - Element `<modelling-settings>` has been renamed to `<model-settings>`. It is still possible to use `<modelling-settings>` but this might be removed in a future release. 1096
- Improved algorithm for finding selected zonation points. The default of `<t-value-first-help-point>` has been increased from 2.0 to 2.5 giving more selected zonation points. However, the increased number of selected zonation points are counteracted by more aggressive removal of redundant constraints. 1021, 1023
- Quality check of MD values read from logs. Possible problems reported in [Section 2: Loading input data](#) in the [COHIBA log file](#). 1027
- Possibility to impose a rejection sampling criteria `<minimum-thickness>` of an `<interval>` to avoid vanishing zones/crossing surfaces. This will only work in simulation `<mode>`. 1028
- Allow blank lines in [ROXAR ATTRIBUTES TEXT](#) input files. 1038
- The linear (instantaneous) velocity model ([Section 16](#)) was unstable in certain situations when $\Delta t \approx 0$. 1039
- The `<values-outside-grid>` option in `<well-data>`, `<travel-time>` and `<interval>` is discontinued and will not be supported in future versions. It is considered to complicated in use and could be replaced by a possibility to provide input maps that extend beyond the output maps. 1050
- Number code for Deleted and Outlier replaced by letter code in [ROXAR ATTRIBUTES TEXT](#) output files. The codes ([Table 7.7](#)) are the same as used in [wellpoints.csv](#). 1051
- Improved reporting of depth uncertainties in [Section 4: The alternative ways to build each surface](#) in the [COHIBA log file](#). Previous reports included extrapolated areas that would lead to misleading (too high) numbers. 1056

- Add discrete (integer) attribute "Extrapolated" to extrapolated surfaces. The code is 1 at extrapolated nodes and 0 in areas where the surface was originally defined. [1058](#)
- New `<simulated-time>` under surface `<output>` to turn on or off the export of simulated time maps when `<write-realization-maps>` is set to yes. The default is no. [1109](#)
- Change default value of `<wellpath-TVD-SD-increase-rate>` from 5 to 2 meters per kilometer.

Bug fixes:

- Error when moving multi-lateral wells caused by incorrect detection of branching points. This cause incorrect calculation of well path continuity. Two new elements are introduced in `<advanced-settings>`: `<threshold-for-branching-points>` and `<lateral-threshold-for-well-grouping>`. [908](#)
- Updated TVD values at well points could be wrong when well paths were updated. [932](#)
- Rare cases of branching wells with same x- and y-coordinates caused a numerical error that wasn't handled. [933](#)
- Number of erosion/onlap points highly correlated with well points were reported incorrectly. [946](#)
- Error in updated well path in rare situations with more than one fault block. [977](#)
- Erosion/onlap constraints are not assigned a TVD uncertainty. [979](#)
- Updating well paths crashes when well was outside `<output-grid>`. This fix has a minor affect on wells that are partly outside the `<output-grid>`. [980](#)
- Residual calculation sometimes failed for excluded well points. [1001](#)
- The Data Augmentation Algorithm used slightly wrong variance and correlations to nearby data. [1005](#)
- Cross validation reports `mismatch-data.csv` and `rmse-mismatch-surfaces.csv` were written out as comma-separated files no matter which `<csv-file-style>` has been specified. [1006](#)
- Travel times incorrectly reported in some cases when running a structural model in ROXAR RMS. [1007](#)
- Wrong depth conversion in some rare cases when running a structural model in ROXAR RMS. [1008](#)
- Incorrect reporting of minimum and average values when running a structural model in ROXAR RMS. [1009](#), [1011](#)
- Some well points were incorrectly marked as close to a fault in the [COHIBA log file](#). [1024](#)
- Inconsistent or wrong cluster index was reported. [1026](#)
- Small inconsistencies corrected for HUM jobs in when running a structural model in ROXAR RMS. [1030](#)
- The same well logs were repeatedly added to output files every time a simulated realization was rejected. [1031](#)
- Well logs are sometimes exported even when `<write-wells>` was set to no. [1032](#)
- Illegal characters, |, \, /, :, ?, <, >, ", ', \$, +, *, in automatically generated file names are now replaced by _ before creating the file. [1033](#)
- Observations close to faults could cause an error. [1035](#)
- Check that imported MD logs are consistent. Erroneous logs caused problems when moving wells. [1036](#)

- Wells that had too large [TVD](#) uncertainty log could cause a crash when moving wells. [1037](#)
- The input parameters [<V0-SD>](#) and [<k-SD>](#) now refer to absolute values instead of values relative to [<V0-mean>](#) and [<k-mean>](#). This was an error in the initial implementation. [1040](#)
- Incorrect reporting of minimum model weights and minimum depth uncertainty in [Section 4: The alternative ways to build each surface](#) in the [COHIBA log file](#). [1057](#)
- Crash when moving wells if no zone log were present. [1070](#)
- Crash in rare cases caused by numerical problems. [1071](#)
- Endless loop when reading empty (only heading) [ROXAR ATTRIBUTES TEXT](#) input files. [1072](#)
- Anisotropic variograms for intervals were not properly orientated in rotated grids unless the uncertainty was given as a map. [1085](#)
- Residuals and trend values were reported incorrectly in [wellpoints.csv](#) and [wellpoints.rxat](#) when a reference surface other than [MSL](#) was used. [1090](#), [1095](#)
- Simple and universal kriging calculations were incorrect given posterior trend values in [wellpoints.csv](#). [1098](#)
- The linear instantaneous velocity model could fail when using simple kriging. [1104](#)
- Error in trend estimation when two well points had identical coordinates. [1105](#)

Changes from COHIBA Version 6.0 to Version 6.1

New features:

- Possibility to use cross validation to compare alternative surface models using [<cross-validate-wells>](#). Results are saved in [cross-validation/](#). This option suppress (almost) all normal output. [653](#), [937](#)
- Linear velocity model for depth conversion. It is chosen using [<linvel-trend>](#). The linear velocity model is discussed in [Section 16](#). [700](#), [981](#)
- Possibility to specify a [<polynomial-trend>](#). The number of polynomial trend maps are chosen by [<polynomial-degree>](#). This is intended to be used when there is an abundance of data. Polynomial trends are discussed in [Section 15](#). [884](#)
- Enable [<anonymize-output>](#) (surface and well names). [955](#)

Improvements:

- Improved reporting of trends in [COHIBA log file](#) and [trend-estimation.csv](#). Two new columns, TrendMapMean and TrendMapRMS, has been added to several tables, and trend coefficients are re-labeled from 1, 2, 3, ... to a, b, c, ... for normal [<trend>](#)s and they have special names for [<linvel-trend>](#) and [<polynomial-trend>](#). [929](#), [956](#), [981](#), [982](#).
- The directory [log-files/](#) in [expert/](#) was renamed to [expert-log-files/](#). [939](#)
- Well points classified as normal outliers were previously not taken into account when [<make-surfaces-interpolate-well-points>](#) was yes (default). Severe outliers and erroneous well points is never taken into account. [943](#)
- Do not report target point mismatch for erosion/onlap control points. [949](#)
- Identify [ROXAR RMS WELL](#) files with wrong [TVD](#) sign. This may occur when exporting data from Petrel. Wells with wrong sign is removed from calculations. [950](#)

- Automatically turn off export of files in `log-files/` and `expert/` for simulations with more than one realization. The `COHIBA log file`, `simulation.log`, and `tasks.log` are always written. [951](#)
- Made extrapolation of missing values in input surfaces faster. [940](#)

Bug fixes:

- Bogus logging for zonation points marked as duplicate when surface/intervals are undefined. [907](#)
- Incorrect reporting of surface name when well points are deactivated because of undefined surface values. [942](#)
- Crash when assigning measured depth MD to a well point. [944](#)
- Erosion rules were not properly honored when using using patches for each fault block in a depth conversion models. [954](#)
- A reflecting `<free-surface>` were truncated by other reflectors when `<make-time-surfaces-consistent>`. [959](#)
- The possibility for `<common-top-for-correlated-intervals>` failed in a depth conversion model. [962](#)
- Error when `<allow-wells-to-move>` was used in simulation `<mode>` with more than one fault block. This affected the position of the updated well paths, but not the surfaces. [977](#)
- Error when `<allow-wells-to-move>` was used and a well is completely outside the output grid. [980](#)
- Crash in debug mode removed. [998](#)
- Trend estimation could fail for rotated grids. [1001](#)
- Error in depth conversion due to inconsistency in the use of truncated travel times is fixed. This only affects models that handle fault blocks semi-independently in combination with ROXAR RMS. [1008](#)
- Calculation of average values for models that handle fault blocks semi-independently is corrected. [1009](#)
- Error if first surface patch only included missing codes. [1011](#)

B The future

B.1 Ongoing funded developments

Use of deep directional resistivity [DDR](#) data: COHIBA is well suited for handling observations of distances between wells and surfaces. This is exactly what [DDR](#) data provides. An important ingredient is the possibility to move wells since the [DDR](#) data provide information on distances, not on [TVD](#). Further refinement such as imposing constraints instead of distances and a more direct link to EM inversion results are ongoing. This initiative is partly funded and needs additional funding. [952](#)

B.2 Possible developments lacking funding

Compaction and subsidence: COHIBA can provide a perfect integration tool that can consistently combine vintage data with recent observations by taking into account possible uncertainty in vintage observations. We believe this approach would be very powerful when operating carbonate fields where compaction makes it almost impossible to combine all data using standard software. All data (wells, travel times,...) must be tagged by date so that they can be moved vertically using a compaction model. It will be possible to predict or simulate surfaces at any time such as today or any time in the past or future. [421](#)

Ranking of alternative models by cross validation: The goal is to (partly) automate the process of selecting surfaces and trends that enter alternative surface models. Possibilities are to replace, include or remove surfaces, intervals or individual trend elements. The ultimate goal would be a fully automated process where the user include several options and COHIBA ranks the alternatives and suggests the optimal models for one or more surfaces. There are several challenges since the number of alternatives easily becomes very large and the selection criteria are not unique. [631](#), [714](#)

Volume calculations: COHIBA can already calculate [gross rock volume \(GRV\)](#) between surfaces and [HCC](#). This could be taken a step further to be able to calculate [HCPV](#)¹ or [STOOIP](#)² by including parameters such as water saturation, porosities, net/gross fraction and fluid factors. There are many levels of sophistication from simple constants to surfaces and vertical proportion curves with or without uncertainty. [638](#)

Interval velocities from stacking velocities: Use stacking velocities as input and extract interval velocities by Dix inversion ([Buland et al., 2011](#)). The method provide uncertainty estimates for the velocities that will be used directly by COHIBA. [437](#)

Modeling of onshore sediments: Accurate description of onshore sediments such as sand, marine clay, quick clay and moraine is important for construction planning and geohazard evaluation. COHIBA is well suited for integrating various sources of constraints, accurate observations and uncertain observations for mapping the interfaces between various sediments and between solid rock (basement) and sediments.

Extract zone-logs from well points: It is possible to extract the most likely zone-log given a COHIBA model and all available well points. If several alternatives zones are possible, the most

1. Hydrocarbone pore volume.

2. Stocked tanked oil originally in place.

likely will be chosen but in cases where several zones are equally likely it is probably best to return unknown zone. [644](#)

B.3 Known issues

- Conditioning to well paths using universal kriging does not work. [23](#)
- Warning and error handling when inversion of Y matrix fails. The Y matrix is only relevant when using universal kriging when depth error is requested. [562](#)
- Post processing (erosion and on lapping) may break the conditioning in rare situations. [592](#)
- The check for large deviations between velocity and posterior velocity must be improved to take into account the travel time uncertainty. Otherwise thin intervals are triggered as problematic too often. [595](#)
- Coordinate MD logs of side tracks in multilateral wells. If side-tracks of a multilateral well have its MD log calculated then this MD log should be coordinated with other MD logs from the same multilateral well. [649](#)
- Add realization index to `wellpoints.rxat` and output wells when doing simulation. [896](#)
- Change default values for TVD uncertainty and TVD pick uncertainty to undefined instead of zero. [900](#)
- Extra points needed for erosion/onlapped surfaces do not have MD assigned. This may lead to a crash when moving wells. [910](#)
- Change internally calculated MD log from meter to customer specified units when different from meters. [1047](#)
- Well conditioning has inconsistencies with faults and observation close to faults. [1083](#)

References

- Abrahamsen, P. (1993). Bayesian kriging for seismic depth conversion of a multi-layer reservoir. In Soares, A., editor, *Geostatistics Tróia '92*, pages 385–398, Dordrecht. proc. '4th Inter. Geostat. Congr.', Tróia Portugal, 1992, Kluwer Academic Publ. Available from: http://dx.doi.org/10.1007/978-94-011-1739-5_31. 10
- Abrahamsen, P. (1997). A review of Gaussian random fields and correlation functions. Report 917, Norwegian Computing Center, P.O.Box 114 Blindern, N-0314 Oslo, Norway. Available from: http://publications.nr.no/2437/Abrahamsen_-_A_Review_of_Gaussian_random_fields_and_correlation.pdf. 71, 151, 196
- Abrahamsen, P. (2005). Combining methods for subsurface prediction. In Leuangthong, O. and Deutsch, C. T., editors, *Geostatistics Banff 2004*, volume 2, pages 601–610, Dordrecht. proc. '7th Inter. Geostat. Congr.', Banff, Canada 2004, Springer-Verlag Inc. Available from: http://dx.doi.org/10.1007/978-1-4020-3610-1_61. 10
- Abrahamsen, P. and Benth, F. E. (2001). Kriging with inequality constraints. *Mathematical Geology*, 33(6):719–744. Available from: <http://dx.doi.org/10.1023/A:1011078716252>. 10, 64, 213, 219
- Abrahamsen, P., Hauge, R., Heggland, K., and Mostad, P. (2000). Estimation of gross rock volume of filled geological structures with uncertainty measures. *SPE Reservoir Evaluation & Engineering*, 3(4):304–309. Available from: <http://dx.doi.org/10.2118/65419-PA>. 10
- Abrahamsen, P., Kvernelv, V., and Barker, D. (2018). Simulation of gaussian random fields using the fast Fourier transform (FFT). In *ECMOR XVI - 16th European Conference on the Mathematics of Oil Recovery*. EAGE. Available from: <http://dx.doi.org/10.3997/2214-4609.201802134>. 10, 211, 212
- Al-Chalabi, M. (2014). *Principles of Seismic Velocities and Time-to-depth Conversion*. EAGE Publications. 104
- Barndorff-Nielsen, O. E. (1997). Processes of normal inverse gaussian type. *Finance and Stochastics*, 2(1):41–68. Available from: <http://dx.doi.org/10.1007/s007800050032>. 66, 221, 222
- Buland, A., Kolbjørnsen, O., and Carter, A. J. (2011). Bayesian dix inversion. *GEOPHYSICS*, 76(2):R15–R22. Available from: <http://dx.doi.org/10.1190/1.3552596>. 233
- Chilés, J.-P. and Delfiner, P. (1999). *Geostatistics: Modeling Spatial Uncertainty*. John Wiley & Sons, New York. 10
- Cressie, N. (1993). *Statistics for Spatial Data*. John Wiley & Sons, New York, revised edition. 10
- Dietrich, C. R. and Newsam, G. N. (1993). A fast and exact method for multidimensional gaussian stochastic simulations. *Water Resources Research*, 29(8):2861–2869. Available from: <http://dx.doi.org/10.1029/93WR01070>. 211, 212
- Isaaks, E. H. and Srivastava, R. M. (1989). *An Introduction to Applied Geostatistics*. Oxford University Press Inc., New York. 10
- Journel, A. G. and Huijbregts, C. J. (1978). *Mining Geostatistics*. Academic Press Inc., London. 211

- Lantuéjoul, C. (2002). *Geostatistical Simulation: Models and Algorithms*. Springer-Verlag Inc., Berlin. 10
- Mardia, K. V., Kent, J. T., and Bibby, J. M. (1979). *Multivariate Analysis*. Academic Press Inc., London. 198
- Matérn, B. (1986). *Spatial Variation*. Springer-Verlag Inc., Berlin, 2nd edition. First edition published in 1960 by the Swedish Forest Research Institute. 151
- Omre, H. and Halvorsen, K. B. (1989). The bayesian bridge between simple and universal kriging. *Mathematical Geology*, 21(7):767–786. Available from: <http://dx.doi.org/10.1007/BF00893321>. 199, 204
- Ripley, B. D. (1987). *Stochastic Simulation*. John Wiley & Sons, New York. 212
- Slotnick, M. M. (1936). On seismic computations, with applications, I. *GEOPHYSICS*, 1(1):9–22. Available from: <http://dx.doi.org/10.1190/1.1437084>. 104
- Tanner, M. A. and Wong, W. H. (1987). The calculation of posterior distributions by data augmentation. *Journal of the American Statistical Association*, 82(398):528–550. Available from: <http://dx.doi.org/10.2307/2289457>. 220
- Vigsnes, M., Kolbjørnsen, O., Hauge, V. L., Dahle, P., and Abrahamsen, P. (2017). Fast and accurate approximation to kriging using common data neighborhoods. *Mathematical Geosciences*, 49(5):619–634. Available from: <http://dx.doi.org/10.1007/s11004-016-9665-7>. 10, 204
- Weisberg, S. (1985). *Applied Linear Regression*. John Wiley & Sons, New York, 2nd edition. 10, 199, 200, 201
- Wood, A. T. A. and Chan, G. (1994). Simulation of stationary gaussian processes in $[0, 1]^d$. *Journal of Computational and Graphical Statistics*, 3(4):409–432. Available from: <http://dx.doi.org/10.1080/10618600.1994.10474655>. 211, 212

Some references are available as pdf's at the bottom of: www.nr.no/COHIBA .

Acronyms

ASCII American Standard Code for Information Interchange: Simplest standard character set used in text files. See [Wikipedia](#) for details. 28–31, 53, 54, 142, 143, 242

BCU Base Cretaceous Unconformity. 47, 158

CPU Central processing unit. The number of parallel processes (cores) used is specified by `<number-of-threads>`. 10, 39, 89, 107, 112, 119, 132, 135, 136, 145, 155, 198, 199, 212, 243, 248

CSV Comma-separated-values: File format ([Section 6.3.3](#)) where values are separated by comma or other special characters. 29, 37, 40, 43, 122, 243–245

DDR Deep directional resistivity: Electromagnetic data obtained to detect resistivity contrast. i, 11, 68, 228, 233

FFT Fast Fourier transform. See [Wikipedia](#) for details. 10, 211, 212, 245

GLS Generalized least squares: Least squares method that takes into account uncertainty *and* correlations between well points. See [Eq. 20.18a](#). 15, 42, 44, 49, 100, 134, 135, 198–201, 242, 244, 245

GOC Gas oil contact. 74, 94, 166, 237, 245

GRV Gross rock volume. 233

GWC Gas water contact. 94, 166, 237, 245

HCC Hydrocarbon contact: Short for [OWC](#), [GOC](#) or [GWC](#). 74, 94, 149, 166, 233, 242, 245, 251, 252

MD Measured depth: The distance from [RKB](#) along the well path. 28, 44, 46, 49, 51, 65, 67, 68, 112, 113, 136, 140, 143–146, 222, 228–230, 232, 234, 247

MSL Mean sea level: Defined as [TVD](#) = 0 meters. 41, 46, 59, 61, 62, 64, 74, 95, 104, 105, 145, 148, 160, 195, 196, 231, 238, 240, 247

OLS Ordinary least squares: Least squares method that minimizes the sum of squares of mismatch between observation and trend. This is the standard linear regression minimization criteria. See [Eq. 20.15a](#). 198, 199, 244, 248

OWC Oil water contact. 69, 70, 74, 75, 77–79, 166, 237, 248

QC Quality control. 12, 29, 33, 37, 43, 53, 66, 107, 118, 120, 144, 200, 243, 248

RKB Rotary Kelly bushing: An adapter that connects the rotary table to the Kelly, which turns the entire drill-string. 237, 249

RMS Root-mean-square: Measure of variation in a known set of values such as a trend map. Calculated by:
$$\text{RMS} = \sqrt{\frac{1}{N} \sum_{i=1}^N (\bar{z} - z_i)^2}$$
. 99, 249

- RMSE** Root-mean-square error: Estimate of [SD](#) between predicted/estimated values and observed values (e.g. well points). [37](#), [46](#), [47](#), [249](#)
- SD** Standard deviation: Measure of uncertainty. See [Wikipedia](#) for details. [3](#), [16](#), [17](#), [21](#), [30](#), [32](#), [33](#), [35](#), [37](#), [41–45](#), [49](#), [53](#), [55](#), [58](#), [65](#), [67](#), [70](#), [71](#), [78–83](#), [85](#), [86](#), [89–91](#), [94](#), [99](#), [105](#), [120](#), [123](#), [126–128](#), [133](#), [134](#), [136](#), [142–144](#), [147](#), [150–152](#), [155](#), [159](#), [160](#), [162](#), [163](#), [196](#), [199](#), [200](#), [202](#), [203](#), [211–215](#), [220](#), [222](#), [223](#), [238–240](#), [248](#), [249](#), [252](#)
- TVD** True vertical depth: The vertical depth from [MSL](#). COHIBA uses positive values below [MSL](#) so negative values means that the location is above sea level. [iv](#), [2](#), [5](#), [9](#), [11](#), [12](#), [28–30](#), [32](#), [33](#), [39](#), [40](#), [43–46](#), [48](#), [49](#), [54](#), [57–59](#), [64–68](#), [71](#), [94](#), [104](#), [112](#), [113](#), [123](#), [124](#), [136](#), [137](#), [140](#), [142–145](#), [147](#), [197](#), [198](#), [202](#), [204](#), [205](#), [209](#), [221–224](#), [230](#), [231](#), [233](#), [234](#), [237](#), [239](#), [252](#), [253](#)
- TWT** Two-way travel time: Seismic travel time down to a reflecting surface and back. [8](#), [85](#), [86](#), [113](#), [150](#), [252](#)
- WLS** Weighted least squares: Least squares method that takes into account uncertainty of well points. See [Eq. 20.19a](#). [134](#), [135](#), [198](#), [199](#), [201](#), [242](#), [244](#), [253](#)
- XML** Extensible Markup Language: File format used by the [COHIBA model file](#). See [Wikipedia](#) for details. [19](#), [24](#), [109](#), [244](#), [249](#), [253](#)

List of Figures

5.1	Skeleton of a COHIBA model file.	25
6.1	Input directory structure	26
6.2	Output directory structure	27
8.1	Transitions between a simple set of zones	59
8.2	Zones with pinch out	59
8.3	Zones where a surface is erosive	61
8.4	Zones where a surface is overlapped	61
8.5	A set of faulted zones	61
8.6	Set of zones with a zonation finer than the surface model	62
8.7	A horizontal well following a zone	64
8.8	Endpoint of zone log sections	65
8.9	Long undefined zone log section	65
8.10	Short undefined zone log section	65
8.11	Well path TVD uncertainty	67
8.12	Distance data	70
8.13	Dip points	71
9.1	Assigning volumes to grid nodes	76
10.1	Map of top surface in simulation example	77
10.2	Fence diagrams in example	78
10.3	Spill points in example	79
10.4	Volume distributions in example	80
10.5	Box plots from example	80
10.6	Mean surfaces compared to predicted surfaces	81
10.7	Empirical SD compared to prediction uncertainty	81
10.8	Map of probability for being inside the trap	82
10.9	Rock column height maps, average and prediction	83
10.10	Rock column height maps, average and SD	83
11.1	Example of multiple models	84
11.2	Specification of multiple models	87
11.3	Report of multiple models and their weights for the Brent case	88
11.4	Report of multiple models and their weights	88

11.5	Model weights	90
11.6	Report of multiple models and their weights for the Brent case, after scaling the isochore uncertainties	91
12.1	Cross section of a fault	93
14.1	Three surfaces, TA, TB, and TC obtained by adding deeper intervals (left) or by at- taching them directly to the reference surface MSL.	95
15.1	Polynomial trend maps	99
15.2	Polynomial trends 1D	102
15.3	Polynomial trend maps (all types)	103
16.1	Linear velocity model	106
16.2	Linear velocity model with different reference	106
17.1	Overview of elements used to specify the output grid definition	114
17.2	Extrapolation using <extrapolate-input-surfaces>	126
17.3	Increase in in residual SD in areas with extrapolated trend maps	128
17.4	The use of <set-eroded-nodes-to-undefined>	130
20.1	Schematic cross section of <surfaces> and intervals	195
20.2	Gridding error	209
20.3	Bilinear interpolation	210
20.4	Nearest neighbor interpolation versus bilinear interpolation	210
22.1	Spherical and exponential variograms.	215
22.2	General exponential variograms	216
22.3	Rational quadratic variograms	217
22.4	Damped sine variograms	218
23.1	Clusters of selected zonation points and well points	226

List of Tables

6.1	The ROXAR ATTRIBUTES TEXT well points file format	30
6.2	The PETREL POINT WELL DATA file format	31
6.3	Definition of the COHIBA well points file format	32
7.1	Output maps found in the surfaces/ directory	35
7.2	Special output maps found in the surfaces/ directory	36
7.3	Columns in the average-statistics.csv file.	37
7.4	Classification of well path zonation points and surface help points	41
7.5	Final zonation status	41
7.6	The trend-estimation.csv file. Description of columns	42
7.7	The wellpoints.csv file. Description of columns.	44
7.8	Columns in the mismatch-data.csv file.	46
7.9	Two rmse-mismatch-surfaces.csv files made by cross validation	47
7.10	Columns in the rmse-mismatch-surfaces.csv and rmse-mismatch-wells.csv files.	47
7.11	Attributes in wellpoints-Well.rxat and wellpoints-Surface.rxat	49
7.12	Zonation point attributes after conditioning to well paths	51
7.13	Zonation attributes in zonationpoints-Well.rxat	51
7.14	Dip points attributes in dip points files	52
7.15	Dip data in well point files	52
7.16	File naming convention for the zonation-Status-Well.xyz files	55
8.1	Surfaces observed for different zone transitions.	60
8.2	Surfaces observed for different zone transitions if surface TB is erosive.	60
10.1	Acceptance criteria in example	78
10.2	Rejection rates, spill point depths and volumes	79
11.1	The Brent model specification	85
11.2	The Brent uncertainties and model weights	85
11.3	Multiple models weights for the Brent example	85
17.1	Measurement units	112
17.2	Supported variogram types in COHIBA	151
20.1	Formulas used in wellpoints.csv	202
20.2	Formulas used in trend-estimation.csv	203

Index

- 999.0, [29](#)
- 999999.0, [29](#)
- . as decimal mark, [29](#)
- . csv, [29](#), [122](#)
- . dat, [29](#)
- . las, [28](#)
- . ppwd, [28](#)
- . rmswell, [28](#)
- . rxat, [28](#), [30](#)
- . rxb, [28](#)
- . rxt, [28](#)
- . storm, [28](#)
- . xyz, [29](#), [121](#)
- / or \ in directories, [13](#)
- _ in file names, [33](#)
- #, start-of-comment [COHIBA model file](#), [24](#)
- #, start-of-comment [COHIBA well points file](#), [32](#)
- * in file path, [142](#), [145](#), [146](#)

- <acceptance-criteria>, [34](#), [132](#), [153](#), [214](#)
- acronyms, list of, [237](#)
- <add-active-attribute-to-output>, [122](#), [228](#)
- <add-dip-uncertainty-for-trend-conflicts>, [38](#), [72](#), [141](#), [228](#)
- <add-uncertainty-to-close-observations>, [140](#)
- <add-uncertainty-to-severe-outliers>, [124](#)
- <additional-output-control>, [120](#), [228](#)
- <advanced-settings>, [37](#), [132](#), [229](#), [230](#)
- air interpretations, [125](#)
- <air-interpretations-present>, [125](#), [125](#), [129](#), [228](#)
- algorithms, [132](#)
- <align-dip-points-to-dip-direction>, [140](#), [228](#)
- <allow-small-surface-adjustment-at-zonation-points>, [130](#), [133](#), [209](#)
- <allow-wells-to-move>, [27](#), [33](#), [44](#), [48](#), [49](#), [64](#)–[66](#), [68](#), [122](#), [123](#), [144](#), [205](#), [222](#), [232](#)
- <allow-zonation-points-near-faults>, [133](#)
- alternative models, *see* [multiple models](#)
- ambiguous models, *see* [multiple models](#)
- <anonymize-output>, [122](#), [231](#)
- approximation
 - GLS vs WLS, [134](#), [135](#)
 - ignoring spatial correlation, [198](#)
 - independent uncertainties, [92](#)
 - interpolation, bilinear, [209](#)
 - neighbourhood in kriging algorithm, [138](#)
 - second order residual, [208](#)
- area name, [75](#), [167](#)
- area number, [75](#), [167](#)
- <area-file>, [74](#), [75](#), [166](#), [167](#)
- <area-names>, [40](#), [74](#), [75](#), [166](#), [167](#)
- argument in element, [24](#)
- ASCII text, [28](#), [29](#), [237](#)
- attribute, [24](#)
- attribute value, [24](#)
- average-statistics.csv, [27](#), [37](#), [37](#)
- azimuth, [35](#)
 - map, [35](#)
 - trend map, [35](#)
- <azimuth>, [35](#), [151](#), [156](#), [157](#), [162](#), [164](#)
- azimuth, variogram, [151](#), [162](#)
- <azimuth-trend>, [35](#), [156](#)

- base, [195](#)
 - HCC, [166](#)
 - hydrocarbon contact, [75](#)
 - surface of interval, [158](#)
 - surface of volume, [75](#), [166](#)
- <base>, [20](#), [35](#), [87](#), [94](#), [97](#), [98](#), [106](#), [158](#), [158](#), [159](#), [163](#), [164](#), [195](#)
- <base-contact>, [74](#), [75](#), [78](#), [94](#), [154](#), [166](#), [167](#)
- <base-help-points-on-simulated-surfaces>, [134](#)
- <base-surface>, [74](#), [75](#), [78](#), [166](#), [167](#)
- basement, [233](#)
- Bayesian estimation, [199](#)
- Bayesian kriging, [123](#)
- best linear unbiased estimator, [198](#)
- bias, in residuals, [38](#)
- bilinear interpolation, [45](#), [129](#), [209](#)
 - volume, [76](#)
- BLUE, best linear unbiased estimator, [198](#)
- branching point, [38](#), [51](#), [53](#), [55](#)
- branching-points.rxat, [53](#)
- branching-points/, [27](#), [53](#), [53](#)
- bugs, known, [234](#)

- caprock, [166](#)

Chebyshev polynomials, 100
 check-shot, 104
 <check-specified-residual-uncertainties>, 38, 124
 <check-zonation-in-branching-wells>, 140
 Cholesky decomposition, 134
 clay (onshore), 233
 close well points, 44, 57
 cluster files, 53
 cluster-large-mismatch-Num.rxat, 53, 225
 cluster-large-mismatch-Well.rxat, 53, 225
 cluster-Num-constraints.xyz, 53
 cluster-Num-wellpoints.xyz, 53
 clusters of surface constraints, 225
 clusters/, 27, 53, 53
 coefficient, *see* trend coefficient
 <coefficient-mean>, 20, 42, 96, 159, 159, 164, 199
 <coefficient-SD>, 20, 42, 132, 159, 159, 164, 199
 COHIBA
 input data, 11
 main features, 3
 methodology, 10
 name, 13
 QC, 12
 <cohiba>, 19, 25, 109
 COHIBA log file, 37
 detail level, 116
 name, 116
 specification of output, 116
 COHIBA model file, 24, 200
 as argument, 19
 editing, 24
 reference manual for elements, 109
 COHIBA well points file format, 29
 cohiba.exe, 19, 22, 110
 cohiba.log, 27, 37, 116
 cohiba_5.3.0_Linux64_RH6_CompanyName, 19
 cohiba_5.3.0_Win64_CompanyName.exe, 19
 cokriging, 10
 collinearity, 101, 105, 199
 column height, *see* rock column height
 column of reservoir volume, 168
 <column-map>, 35, 74–76, 82, 168
 comma-separated values, *see* CSV
 command line, 19, 20
 command line option
 -g, 22
 -m, 23
 -s, 22, 110
 -x, 23
 -y, 23
 <common-top-for-correlated-intervals>, 95, 97, 131, 148, 150, 232
 concepts, 14
 condition, 17
 <condition-to-spill-point-at-surface>, 77, 94, 154, 167
 <condition-to-surface-dip>, 52, 71, 124
 <condition-to-well-paths>, 27, 33, 40, 48, 56, 123, 123, 144, 219
 conditional simulation, 211
 conflict
 between well point and model, 12, 43
 between well points, 12, 44
 conjugate gradient, 134
 connected volume, 75
 <connected-volume>, 74, 75, 167, 167
 constant, 28
 <correlate-close-reflectors>, 92, 93, 134, 150, 206
 correlated intervals, 95
 <correlated-intervals>, 53, 96, 97, 121, 131
 <correlated-intervals-power-for-residuals>, 96, 131
 <correlated-intervals-power-for-trends>, 96, 131
 <correlated-intervals-range-for-residuals>, 96, 97, 131
 <correlated-intervals-range-for-trends>, 96, 131
 <correlated-intervals-ratios-for-trends>, 97, 132
 <correlated-intervals-simulations>, 96, 131
 correlation function, 151
 correlation matrix
 posterior, 53
 <correlations>, 132, 161, 164, 199
 correlations, trend coefficients, 161
 correlations/, 53, 53, 96
 <cp-q>, 162
 CPU time, 39, 89, 112, 119, 135, 145, 155
 stochastic simulation vs. prediction, 212
 cross validation, 46, 124
 <cross-validate-wells>, 27, 46, 124, 231
 cross-validation/, 27, 46, 124, 231
 CSV, 29, 237
 change file format, 122
 <csv-file-style>, 29, 122, 230
 Data Augmentation Algorithm, 220
 <data-loading>, 37, 116

- datum, 148
- DDR, 68, 233
- decimal mark, 29
- defining grid dimensions, 113
- depth
 - map, 35
 - order, 11
 - output flags, 155
 - reference surface, 148
 - residual, 197
 - residual map, 35
 - residual uncertainty map, 35
 - trend, 197
 - trend map, 35
 - trend uncertainty map, 35
 - uncertainty map, 35
 - unit, 113
- <depth>, 20, 35, 148, 155, 156
- depth conversion, 8, 17, 104, 159, 206
 - linear velocity model, 104
- <depth-residual>, 35, 155, 157
- <depth-residual-uncertainty>, 35, 155, 200
- <depth-trend>, 20, 35, 155, 156, 200
- <depth-trend-uncertainty>, 35, 155, 157, 200
- <depth-uncertainty>, 20, 35, 155, 157, 204
- design matrix, 197
- detail level, log file, 116
- detail level, screen, 120
- <detail-level>, 116, 120, 120
- deterministic, 3, 17, 123
- dip, 11, 35
 - map, 35
 - trend map, 35
- <dip>, 35, 156
- dip data, 71
 - file format, 30
 - uncertainty, 71
- dip point, 38, 71, 140
 - distance to well point, 140
 - number of, 140
 - uncertainty added, 141
- <dip-points>, 38, 118
- <dip-points-radius>, 71, 140, 228
- dip-points-Well.rxat, 50, 52
- dip-points.rxat, 50, 52
- dip-points/, 27, 33, 50
- dip-polylines.rxpot, 50
- <dip-trend>, 35, 156
- directory specification, 26
- directory structure, 26
- discarded well points, 145
- distance data, 68
 - example, 69
 - sign convention, 69
- distance point, 11
 - file, 146
- distance points, 68
 - <distance-points>, 38, 68, 117, 146, 228
 - distance-points-Well.rxat, 50
 - distance-points.csv, 50
 - distance-points.rxat, 50
 - distance-points/, 27, 50, 228
 - distance-polylines-Well.rxpot, 50
 - distance-polylines.rxpot, 50
- editing COHIBA model file, 24
- element, 24
 - list of all, 169
 - reference manual, 109
 - unknown, 25
 - XML syntax, 24
- Emacs, 24
- equiprobable realizations, 3
- <erode-and-onlap>, 129, 129, 130, 149
- erosive, 60
- <erosive>, 60, 92, 94, 129, 149, 156, 195
- error, 12, 43, 137, 200
 - extreme, 12, 137, 200
 - gridding, 129, 130
 - reading model file, 24
 - to small residual uncertainties, 58
- estimate
 - Bayesian, 199
 - GLS, 198
 - OLS, 198
 - WLS, 198
- estimation method, 200
- estimation mode, 123
- example
 - <top-of-zone> specification, 62
 - <interval> specification, 164
 - <surface> specification, 156
 - depth conversion, 8
 - fault, 93
 - getting started, 19
 - log file, 181
 - model file, 177
 - multiple models, 84
 - simulated residual, 16
 - spill point, 9
 - stochastic simulation, 215
 - variogram, 215
- Excel
 - analyze log file, 13

Excel, import of [CSV files](#), 29

excluded-wellpoints-pointfile-Well.xyz, 54

expert-log-files/, 27, 53, 53, 231

expert/, 27, 29, 33, 53, 53, 120, 231, 232

<extra-points>, 37, 117

<extrapolate-input-surfaces>, 54, 91, 126

<extrapolation-inverse-distance-weighting-power>, 127, 127

<extrapolation-kriging-range>, 126, 127, 127, 128

<extrapolation-kriging-thinning-correlation>, 127

<extrapolation-method>, 126, 127

<extrapolation-SD-factor>, 126, 127, 128

extrapolation/, 27, 53, 54, 126

fast Fourier transform, *see* [FFT](#)

fault indicator log, 44, 57, 61, 142, 143

 name, 143

<fault-log-name>, 57, 61, 143

faults, 60, 92, 94

 example, 93

 normal, 92

 reverse, 92

 zone transition, 57, 60

feet, 113

 U.S. (survey), 113

[FFT](#), 10, 211, 237

 simulation algorithm, 212

file

 distance points, 146

 ignore points, 146

 well path, 142

 well points, 145

file directory structure, 26

file format

[CSV](#), 29

 surface, 28

 well logs, 28

 well points, 28

 xyz, 29

<files>, 19, 28, 56, 68, 94, 142, 142, 143, 145, 146, 147

fillpath-Surface.rxat, 47

<first-log-entry-as-top>, 145

flat spot, 94

fluid contact, *see* [HCC](#)

<format>, 19, 113, 114, 115

free surface, 94, 134, 149, 166

 fault, 94

[HCC](#), 94

<free-surface>, 24, 56, 69, 94, 134, 148, 149, 154, 195, 232

Gaussian distribution, 15, 46

Gaussian random field, 10, 16, 196, 197

 stochastic simulation, 212

generalized least squares, *see* [GLS](#)

geological knowledge, 16

geophysical knowledge, 16

[GLS](#), 42, 198, 237

[GOC](#), 166, 237

grid

 dimension, 113

 file format, 28

 rotated, 28, 115

 trend, 159

<grid-azimuth>, 100, 114, 115, 115

gridding error, 45, 209

 remove, 129, 130

 well point, 129

 zonation point, 130

gridding mismatch, 209

 remove, 209

gridding mismatch, well point, 209

[GWC](#), 166, 237

hat matrix, 45, 201

[HCC](#), 74, 94, 149, 166, 237

[HCPV](#), 233

help point, *see* surface help point

<help-points>, 38, 118

help-points/, 27, 53, 54

helppoints-Surface.xyz, 54

helppoints-Well.xyz, 54

[HORIZON](#), 13, 207

horizontal wells, 5, 11, 17, 64

hydrocarbon contact, *see* [HCC](#)

hyper-threading, 112

ignore points, 61

<include-all-distance-points-in-kriging>, 124, 125

<include-all-well-points-in-kriging>, 124, 125

inequality constraint in kriging, 219

input directory, 111

 surfaces, 111

 well data, 111

<input-directory>, 26, 27, 111, 142, 145, 146

<input-directory-surfaces>, 26, 111

<input-directory-well-data>, 26, 111

input/, 26, 27, 48, 111

instantaneous velocity, 104

- integrated Ornstein-Uhlenbeck process, 66, 221, 224
 - definition, 222
 - illustration, 67
- interpolation
 - bilinear, 45, 209, 210
 - kriging, 202
 - nearest neighbor, 210
- interval, 14
 - base surface, 158
 - building block, 14
 - correlated, 95
 - example of specification, 164
 - linear velocity model, 159
 - name, 158
 - polynomial trend maps, 161
 - residual, 162, 196
 - thickness, 35, 158
 - top surface, 158
 - trend, 158, 196
 - trend specification, 158
 - type, 158
 - uncertainty, 162
 - uncertainty checking, 38
 - velocity, 158
- <interval>, 20, 25, 87, 94, 97, 99, 104, 109, 149, 158, 159, 161, 164, 195, 229
- interval thickness, 35, 196
 - map, 35
 - measurement units, 112
 - model, 11
 - residual, 35, 162
 - trend, 11, 35, 158
 - trend map, 35
 - uncertainty, 11, 162
 - variogram, 162
- interval velocity, 8, 35, 158
 - map, 35
 - measurement units, 112
 - model, 8, 11
 - output flag, 164
 - posterior trend, 164
 - residual, 16, 162
 - trend, 17, 158
 - trend map, 35
 - uncertainty, 11, 162
 - variogram, 162
- <interval-export>, 39, 119
- <interval-type>, 20, 87, 95, 131, 148, 150, 158, 164
- <intervals>, 20, 24, 25, 87, 97, 109, 158, 195, 229
- ISCWSA, wellbore survey accuracy, 66
- isochore map, 196
- isochores, 8
- Itô integral, 222
- iteration number, 39
- JIRA, project management system, 228
- k*, 104, 160
- k*-map, 105, 160
- <k-mean>, 104, 105, 160, 160, 231
- <k-SD>, 104, 105, 160, 160, 231
- <keep-all-pinchout-points>, 140
- kriging, 10, 202
 - Bayesian, 15, 123
 - dual, 203
 - neighborhood, 138
 - predictor, 203
 - simple, 15, 123
 - universal, 15, 123
 - weights, 204
- kriging error, *see* prediction uncertainty
- kriging matrix, 198
- <kriging-method>, 19, 43–45, 49, 99–101, 123, 132, 134, 135, 199, 200, 202, 203, 211
- LAS 2.0 well log file format, 28, 142
- lateral distance
 - measurement units, 112
- <lateral-threshold-for-well-grouping>, 141, 230
- Legendre polynomials, 100
- leverage point, 12, 43–46, 201
 - classification, 201
- linear regression, 10, 15, 42, 45, 198
- linear velocity model, 8, 104, 159
- linked intervals, *see* correlated intervals
- Linux operating system, 13
- LINVEL, *see* linear velocity model
- <linvel-expansion-type>, 107, 159, 160, 160
- <linvel-reference>, 104, 105, 107, 160, 160
- <linvel-trend>, 42, 104, 159, 231
- log file, *see* COHIBA log file
- log files, 37
 - COHIBA log file, 37
 - average-statistics.csv, 37
 - posterior-correlation-matrix.dat, 53
 - simulation.log, 40
 - tasks.log, 40
 - trend-estimation.csv, 40
 - wellpoints.csv, 43
 - prefix, 122
- log, along well path, 56

log-files/, 20, 27, 33, 37, 39, 116, 231, 232
 <logfile>, 37, 116

<make-average-of-crossing-surfaces>, 125, 129

<make-surfaces-interpolate-well-points>, 45, 129, 133, 209, 231

<make-time-surfaces-consistent>, 36, 125, 125, 232

Matérn covariance function, 151

<max-dxy-for-identical-well-points>, 57, 138

<max-dz-for-identical-well-points>, 57, 138

<max-generalized-eigenvalue-for-inequality-points>, 138

<max-gradient-for-surface-adjustment>, 130, 133

<max-iterations-to-avoid-broken-zonation>, 124, 134

<max-obs-direct-estim-trend-coef>, 134, 199

<max-obs-GLS-approx-extreme-outliers>, 135

<max-obs-GLS-approx-trend-coef>, 134, 198, 199

<max-obs-update-trend-coef-using-well-paths>, 135

<max-range-factor-for-neighbourhood>, 139

<max-rejection-rate>, 78, 79, 132, 153, 214

<max-residual-for-adjustment-at-zonation-points>, 130, 133

<max-residual-for-well-points-interpolation>, 130, 133

<max-SD-for-well-points-interpolation>, 129, 133

<max-slope-before-possible-conflict>, 138

maximum thickness map, 34

MD, 44, 237
 log name, 143
 measurement unit, 112, 113

<MD-log-name>, 143

mean sea level, *see* MSL

measured depth, *see* MD

measurement uncertainty, *see* pick uncertainty

measurement units, 112

<measurement-units>, 112

<messages>, 115

<min-dip-for-azimuth-calculation>, 35, 140, 156

<min-distance-from-surface-to-zonation-points>, 130, 133

<min-generalized-eigenvalue-for-residual-uncert>, 38, 139

<min-isochore-thickness>, 137

<min-range-factor-for-neighbourhood>, 139, 139

<min-SD-close-well-points>, 138

<min-uncertainty>, 68, 147

<minimize-broken-zonation>, 41, 51, 124, 134, 136

<minimum>, 152, 163

minimum thickness map, 34

<minimum-thickness>, 163, 214, 229

mismatch
 grid resolution, 36
 log, 39, 48
 prediction, 44, 45, 49

mismatch-data.csv, 46, 46, 124, 230

missing code, 29
 eroded area, 130
 file format, 29
 in zone log, 64, 136
 input maps, 54, 126
 output files, 29
 spill point, 153

<missing-as-wall>, 153, 156

mode
 estimation, 123
 prediction, 123
 simulation, 123

<mode>, 19, 27, 33, 35, 36, 39, 40, 42–45, 49, 54, 79, 96, 120, 121, 123, 132, 156, 163, 211, 214, 229, 232

model, 14
 interval, 196
 surface, 196

model file, *see* COHIBA model file

model weights, 84–86, 88–92
 example, 85, 86
 many zones, 90
 report, 88, 91

model-file.xml, 19, 22, 24, 26

<model-settings>, 19, 24, 25, 37, 96, 97, 109, 116, 123, 229

<model-weight-resolution>, 132

monomials, 100

Monte Carlo, 3, 10
 uncertainty, 212

MSL, 148, 196, 237

multilateral well, 38, 53, 66, 144, 223

multiple models, 7, 84, 89, 92
 example, 84
 model weights, 84

`<name>`, 19, 62, 63, 74, 87, 94, 97, **116**, **148**, **149**,
 153, 154, 156, **158**, 158, 164, 166
 name of interval, 158
 name, of log file, 116
 name, of reference surface, 148
 name, of surface, 149
 negative thickness, 129
 neighborhood in kriging algorithm, 138
 normal distribution, *see* Gaussian distribution
`<normalize-interval-weights-table>`, 37,
 140
`<number-of-dip-points>`, 71, **140**, 140, 228
`<number-of-realizations>`, 22, 33, 78, **123**,
 132, 211, 214
`<number-of-threads>`, **112**, 124, 237
 numerical stability, 58
OLS, 198, 237
`<onlapped>`, 60, 92, 94, 129, **149**, 156, 195
 onlapped surface, 60, 129, 149
`<only-trapped-volume>`, 74, 75, 94, **167**
 OpenMP, 112
 operating system, 13
 ordinary least squares, *see* OLS
 Ornstein-Uhlenbeck process, *see* integrated
 Ornstein-Uhlenbeck
 outlier, 12, 43, 44, 137, **200**, 200
 classification, 43, 46, 200
 figure, 12
 leverage point, 12, 201
 severe, 12, 137, 200
`<outliers>`, 38, **118**
`<output>`, 20, **155**, 156, **163**, 164, 230
 output flags, 155
 output flags, interval, 163
 output log file, 37
 output logging to screen, 120
`<output-directory>`, 26, 27, 33, **111**
`<output-grid>`, 19, 28, 75, 99, 100, **113**, 114, 115,
 129, 148, 159, 167, 204, 230
 output/, 26, 27, **33**, 37, 111
`<overall>`, **116**, 116–120
OWC, 166, 237
 parallel processes, 124, 139
 CPU time, 39
 number of threads, 112
 Petrel, 28
 Petrel Point Well Data format, 28
 pick uncertainty, 11, 12, 32, 202, 204, 209, 221
 from zone log, 59
 pinch out, 11, 43, 44, 59, 129
 deleted, 58
 flagged, 58
 isochore map, 11
 thickness residual, 16
 polynomial trends, 99
`<polynomial-degree>`, 99–101, 103, **161**, 161,
 231
`<polynomial-scaling-factor>`, 99, 100, **161**,
 161
`<polynomial-trend>`, 42, 99, 100, **161**, 231
`<polynomial-type>`, 100–103, **161**, 161
 polynomials
 Chebyshev, 100
 Legendre, 100
 two-dimensional, 100
 post process, 209
`<post-process-surfaces>`, 125, **129**, 195
`<post-processing>`, 39, **119**
 posterior correlation matrix, 53
 posterior-correlation-matrix.dat, **53**, 121,
 229
`<power>`, **152**, **163**, 216
 power, variogram, 152, 163
`<pre-process-surfaces>`, 91, **125**, 125
`<pre-processing>`, 37, **116**
 prediction, 3, **17**
 prediction error, *see* prediction uncertainty
 prediction mode, 123
 prediction uncertainty, 5, 15, 35, 155, **203**
 prediction versus stochastic simulation, 212
 predictor, 203
 prefix for surface maps, 35, 36
 prefix log files, 122
`<prefix-for-log-files>`, **122**
`<preprocess-range-factor-for-`
 neighbourhood>, **139**
 prior correlations, 162
 prior distribution, 16
 prior mean value (expectation), 159
 prior specification, 15
 prior uncertainty (SD), 159
`<project-description>`, **110**
`<project-directory>`, 19, 26, 27, **110**
`<project-settings>`, 19, 24, 25, 109, **110**
`<project-title>`, **110**
QC, 12, 37, 43, 237
 trend estimation, 200
 quality control, *see* QC
 random number generator, 110
 random seed, 17, 22, 110
 increment, 75
 unspecified, 110

random seed file, 110
 random walk
 well path uncertainty, 222
 random walk (almost), example, 67
 <range>, 20, 151, 151, 157, 162, 162, 164, 215
 range, variogram, 151, 162
 <read-from-file>, 113, 114
 realization, 17
 simulated, 215
 realization number, 39
 rectangular patches in output, 139
 reference
 common reference surface, 148
 <reference>, 25, 74, 95, 97, 104–106, 109, 148, 150, 160, 166, 195, 196
 reference manual, COHIBA model file elements, 109
 reference surface, 148
 depth, 148
 travel time, 148
 reflector, *see* seismic reflector
 <reflector>, 126, 129, 150, 155
 regression, 198
 regrid, 36, 113, 159
 rejection rate, 132
 rejection sampling, 132, 214
 acceptance criteria, 153
 rejection rate, 132
 <relative>, 152, 163, 164
 <relative-SD>, 132, 159, 159
 release notes, 228
 <remove-isolated-volumes-less-than>, 74, 75, 167
 reservoir
 name, 166
 volume, 166
 reservoir volume, *see* volume
 <reservoir-name>, 40, 74, 75, 166
 residual, 2, 10, 14, 16, 58, 196
 examples, 16
 interval thickness, 35, 162
 interval velocity, 162
 Studentized, 201
 travel time, 150
 uncertainty estimate, 38
 residual-correlation-matrix.dat, 53, 96, 121, 229
 <residual-uncertainties>, 38, 118
 RKB, 237
 RMS, 99, 237
 RMSE, 37, 46, 237
 formula, 47
 rmse-mismatch-surfaces.csv, 46, 46, 47, 124, 230
 rmse-mismatch-wells.csv, 46, 47, 124
 robust estimation, 13
 rock column height, 168
 map, 35, 75
 measurement units, 112
 root element (XML), 109
 rotated grids, 28, 115
 ROXAR ATTRIBUTES TEXT format, 28
 Roxar binary file format, 28
 Roxar patch binary file format, 28
 ROXAR RMS, 28
 Roxar RMS structural model, 28
 Roxar RMS WELL log file format, 28
 Roxar text file format, 28
 <sampling-distance>, 69, 145, 146, 229
 <sampling-type>, 69, 146, 146
 <scale-isochores-to-seismic-envelopes>, 36, 121, 125, 150
 <screen>, 120
 SD, 17, 237
 map from multiple realizations, 33
 prediction uncertainty map, 35
 trend coefficient, 42
 <SD>, 20, 151, 157, 162, 164, 196
 seawater, 145
 seed, *see* random seed
 <seed>, 22, 110, 215
 seed.dat, 22, 26, 110
 segment name, 167
 seismic reflector, 7, 8, 11, 14, 16, 17, 84, 89, 158
 coinciding, 134
 defining, 150
 erosive and overlapped, 92, 129
 fault example, 93
 faults, 92
 interval between two, 158
 make consistent, 125
 specify interval velocity, 158
 specify surface as, 150
 selected zonation point, *see* zonation point
 sequential Gaussian simulation, 212
 <set-eroded-nodes-to-undefined>, 125, 130
 SGS, 212
 SI units, 112
 side track, 38
 check zonation, 140
 inconsistent data, 43
 sill, 162
 simple kriging, 123, 132

`<simulate-simple-kriging-trends>`, 42, 132, 229
 simulated residual, 212
 simulated trend coefficient, 42
`<simulated-time>`, 36, 156, 230
 simulation, *see* stochastic simulation
 simulation algorithm, 212
 simulation example, 77
 simulation mode, 123
`simulation.log`, 27, 40, 232
 Slotnicks velocity model, 104
`<smoothing-factor-calculated-velocities>`, 36, 122, 131
`<smoothing-factor-SD-maps>`, 36, 121, 128
`<smoothing-factor-velocity-trends>`, 36, 121, 128, 128
`<solver-for-weights>`, 134
 sonic log, 104
 spatial clustering, 15
 spatial correlation, 8, 11, 42, 198
 spatial correlation function, 16, 150, 162
 spill point, 9, 152
 algorithm, 10
 command line, 22
 condition to, 154
 coordinates, 47
 output files, 47
 output trap, 156
 starting point, 23, 35, 153
 trap map, 35
 trapped area, 9
 undefined area, 153
 visited path, 47
`<spill-point>`, 22, 27, 75, 152, 154, 156, 167, 168, 214
`<spill-point-above>`, 78, 153, 214
`<spill-point-at>`, 78, 154, 214
`<spill-point-below>`, 77, 78, 153, 214
`<spill-point-tolerance>`, 78, 154
`<spill-points>`, 39, 119
`spill-points/`, 27, 33, 47, 47
`spillpoint-Surface.rxat`, 27, 47, 152
`spillpointgrid.rxb`, 22
 stacking velocities, 8
 standard deviation, *see* SD
 stochastic model, 14
 stochastic simulation, 2, 10, 15, 17, 110, 123, 211
 algorithm, 211
 rejection sampling, 132, 153
 stochastic simulation versus prediction, 3, 212
 STOOIP, 233
 Storm file format, 28
`<subrange>`, 151, 157, 162, 164
 subrange, variogram, 151, 162
 surface, 14
 azimuth map, 35
 azimuth trend map, 35
 base of interval, 158
 common top for correlated intervals, 150
 depth, 14
 deterministic, 3
 dip map, 35
 dip trend map, 35
 erosive, 60, 149
 example of specification, 156
 file format, 28
 free, 149
 map, 35
 most likely, 3
 name, 149
 onlapped, 60
 onlapped flag, 149
 ordering, 11, 195
 output, 33
 prediction, 3, 123
 prediction uncertainty, 3
 realization, 3
 reference depth, 148
 reflector flag, 150
 relation to zone log, 149
 seismic reflector, 17
 specify as seismic reflector, 150
 stochastic, 3
 stochastic simulation, 3, 123
 top of interval, 158
 travel time, 150
 trend map, 35
 trend uncertainty, 35
 uncertainty, 35
 weight isochore package above, 154
 zone log, 56
`<surface>`, 19, 24, 25, 62, 63, 74, 95, 97, 109, 148, 148, 156, 195
 surface constraint, 5, 38, 53, 137, 220, 221, 223
 in cluster, 225
 undefined zone log, 65
 surface depth
 measurement unit, 113
 surface help point, 38, 54, 64, 221, 224
 surface help point files, 54
 surface target point, 46, 48, 221, 224, 225
 in cluster, 53
`<surface-export>`, 39, 119
`<surface-models>`, 37, 117, 140

surface-targetpoints-Surface.rxat, [27](#), [48](#)
 surface-targetpoints-Well.rxat, [27](#), [48](#)
 surface-targetpoints.rxat, [27](#), [48](#)
 <surfaces>, [19](#), [24](#), [25](#), [97](#), [109](#), [148](#), [153](#), [154](#),
[195](#)
 surfaces/, [20](#), [26](#), [26](#), [27](#), [33](#), [33](#), [35](#), [36](#), [47](#), [75](#),
[111](#), [168](#)
 synthetic well point, *see* surface help point

 t-value, [40](#), [200](#)
 outlier classification, [200](#)
 trend coefficient, [42](#)
 well point, [46](#)
 <t-value-error>, [41](#), [46](#), [55](#), [125](#), [137](#), [200](#)
 <t-value-extreme-error>, [125](#), [135](#), [137](#), [200](#)
 <t-value-first-help-point>, [137](#), [220](#), [229](#)
 <t-value-outlier>, [46](#), [137](#), [200](#)
 <t-value-second-help-point>, [138](#)
 <t-value-severe-outlier>, [46](#), [124](#), [137](#), [200](#)
 target point, *see* surface target point
 <target-number-of-data-in-neighbourhood>,
[139](#)
 <target-point-qc>, [39](#), [118](#)
 target-points/, [27](#), [33](#), [48](#), [48](#), [53](#), [54](#)
 targetpoint-selection.csv, [27](#), [40](#), [41](#)
 targetpoints-Surface.xyz, [29](#), [54](#)
 targetpoints-Well.xyz, [54](#)
 targetpoints.csv, [27](#), [46](#)
 task list, [40](#)
 <tasks>, [39](#), [40](#), [120](#)
 tasks.log, [27](#), [40](#), [40](#), [232](#)
 terminology, [14](#)
 <thickness>, [35](#), [163](#), [165](#)
 thickness residual, [16](#)
 <thickness-residual>, [35](#), [164](#)
 <thickness-trend>, [35](#), [163](#), [165](#)
 threads, number of, [112](#)
 <threshold-for-branching-points>, [141](#), [230](#)
 <threshold-for-cluster-merging>, [53](#), [135](#),
[225](#)
 <threshold-for-conditioning-in-
 neighbourhood>, [138](#), [204](#)
 <threshold-for-help-point-deactivation>,
[41](#), [136](#)
 <threshold-for-high-correlation-wp-ep>,
[136](#)
 <threshold-for-high-correlation-wp-ip>,
[136](#)
 <threshold-for-high-correlation-wp-wp>,
[136](#)
 <threshold-for-mild-error>, [137](#)
 <threshold-for-removing-undefined-
 well-sections>, [65](#), [136](#)
 <threshold-for-special-help-point-
 deactivation>, [136](#)
 <threshold-for-trace-clustering>, [135](#), [225](#)
 <threshold-for-well-point-cluster-
 inclusion>, [135](#)
 <threshold-for-well-point-cluster-inclusion>,
[225](#)
 <time-unit>, [113](#)
 <timings>, [39](#), [119](#)
 top, [195](#)
 HCC, [166](#)
 hydrocarbon contact, [75](#)
 surface of interval, [158](#)
 surface of volume, [75](#), [166](#)
 surface of zone, [149](#)
 <top>, [20](#), [35](#), [87](#), [94](#), [95](#), [97](#), [98](#), [105](#), [106](#), [148](#),
[150](#), [158](#), [158–160](#), [163](#), [164](#), [195](#)
 <top-contact>, [74](#), [75](#), [166](#)
 <top-of-zone>, [56](#), [62](#), [63](#), [94](#), [149](#), [156](#)
 <top-surface>, [74](#), [75](#), [78](#), [166](#), [167](#)
 <tops-as-mean-values>, [144](#), [147](#)
 trajectory, *see* well path
 trap, [9](#), [35](#)
 map, [35](#)
 <trap>, [35](#), [82](#), [152](#), [156](#), [157](#)
 <trap-larger-than>, [154](#), [214](#)
 trapped volume, [167](#)
 travel time, [17](#), [150](#)
 correlated residual, [92](#), [134](#)
 interpretation uncertainty, [150](#)
 make consistent, [125](#)
 map, [8](#), [11](#)
 measurement units, [112](#)
 model, [206](#)
 reference surface, [148](#)
 residual, [16](#), [150](#), [206](#)
 stochastic simulation, [212](#)
 uncertainty, [92](#), [150](#)
 units, [113](#)
 variogram, [150](#)
 <travel-time>, [19](#), [36](#), [44](#), [49](#), [129](#), [148](#), [150](#), [150](#),
[157](#), [159](#), [212](#), [229](#)
 <treat-reflectors-as-eroding-and-
 onlapped>, [92](#), [93](#), [129](#)
 <treat-reflectors-as-eroding-and-onlapped>,
[125](#), [150](#)
 trend, [2](#), [15](#), [196](#)
 coefficient, [15](#), [159](#)
 important, [42](#)
 interval, [158](#)

- interval thickness, 158
- interval velocity, 158
- linear model, 196
- <trend>, 20, 42, 158, 159, 161, 163, 164, 196, 231
- trend coefficient, 11, 15, 134
 - checking estimates, 201
 - estimated mean value, 42
 - estimation, 197
 - expectation, 159
 - posterior mean value, 42
 - prior distribution, 16
 - prior mean value, 42
 - relative SD, 159
 - SD, 159
 - simulated value, 42
- trend map, 15, 16, 196
 - grid, 159
 - missing code, 126
 - polynomial, 99
 - specification, 159
 - value, 159
- trend uncertainty, 200
- <trend-coefficients>, 38, 39, 117
- trend-estimation.csv, 27, 29, 40, 40, 42, 53, 104, 107, 202, 203, 231
- true vertical depth, *see* TVD
- turning bands simulation, 212
- TVD, 2, 237
 - measurement unit, 112, 113
 - modified values, 48
 - well path uncertainty, 5, 65, 144
 - increase rate, 144
 - well point pick uncertainty, 11, 65
- <TVD-values-are-negative>, 145
- two-way travel time, *see* TWT
- <two-way-time>, 112, 113
- TWT, 86, 113, 237
- <type>, 20, 71, 150, 151, 157, 162, 164, 215
- type, variogram, 150, 162
- unbiased, 16
- uncertainty, 17
 - interval thickness, 162
 - interval velocity, 162
 - pick, 12
 - reduction, 42
 - SD, 17
 - travel time, 150
 - well path TVD, 66
- uncertainty studies, 3
- undefined section of zone log, 64
- units, *see* measurement units
- universal kriging, 15, 123
- <updated-well-paths>, 39, 119, 229
- V_0 , 104, 160
- V_0 -map, 105, 160
- <V0-mean>, 104, 105, 160, 160, 231
- <V0-SD>, 104, 105, 160, 160, 231
- <value>, 19, 20, 42, 150, 157, 159, 159, 164, 196
- variogram, 162
 - azimuth, 151, 162
 - example, 215
 - power, 152, 163
 - range, 151, 162
 - relative SD, 152, 163
 - SD, 151, 162
 - sill, 151
 - subrange, 151, 162
 - travel time, 150
 - type, 150, 162
- <variogram>, 19, 20, 25, 45, 150, 157, 162, 164, 196, 215
- <velocity>, 35, 164, 165
- velocity log, 105
- <velocity-trend>, 35, 164
- volume, 74, 166
 - area, 75, 166
 - area name, 167
 - base HCC, 166
 - base surface, 166
 - calculation, 76
 - caprock, 166
 - map of column, 168
 - report, 75
 - reservoir, 74
 - reservoir name, 74, 166
 - top HCC, 166
 - top surface, 166
 - trapped, 167
 - units, 74
- <volume>, 25, 74, 75, 109, 149, 154, 166
- <volume-calculation-method>, 76, 139, 210
- <volume-calculations>, 39, 119
- <volumes>, 24, 25, 27, 74, 109, 166
- volumes.csv, 27, 40, 75, 166
- <weight-isochore-package-above>, 36, 90, 121, 150, 154
- weighted least squares, *see* WLS
- well data, 17, 48, 56
- well log, 142
 - fault log name, 143
 - input files, 142
 - LAS 2.0, 28, 142

- modified TVD values, 48
- RMS WELL, 28
- TVD uncertainty log, 143, 144
- zone log name, 143
- zone log specification, 142
- well marker, *see* well point
- well name, 32, 56, 142
- well path, 11, 17, 56, 219
 - input files, 142
 - TVD prediction uncertainty, 48, 66, 222
 - TVD uncertainty, 5, 11, 65, 67, 94, 142, 144, 204, 221, 223
 - TVD uncertainty log, 143, 144
- well pick, *see* well point
- well planning, 3
- well point, 11, 17, 56
 - automatically removed, 43
 - close, 57
 - conflict, 43, 44
 - file, 145
 - from zone logs, 58
 - horizontal well, 64
 - identical, 57
 - in cluster, 53
 - outside grid, removed, 43, 44
 - pick uncertainty, 58, 144, 204
 - pinch out, 43, 58
 - potentially conflicting, 58
 - similar, 58
 - surface help point, 64
 - TVD pick uncertainty, 11, 12, 32, 43, 45
- well target point, 48
- well trajectory, *see* well path
- <well-branching>, 38, 117
- <well-data>, 19, 24, 25, 56, 109, 142, 147, 228, 229
- well-logs/, 27, 28, 33, 39, 48, 48, 66, 122, 123, 144
- <well-path-conditioning>, 39, 118
- <well-paths>, 38, 117
- <well-point-conditioning>, 38, 118
- <well-points>, 19, 29, 37, 56, 94, 117, 142, 145, 145, 147, 149
- <well-points-to-ignore>, 43, 54, 61, 145
- well-points/, 20, 27, 33, 48, 48, 53, 54
- well-targetpoints-Well.rxat, 27, 48
- well-targetpoints.rxat, 27, 48
- Well.las, 48
- Well.rmswell, 27, 48
- welldata/, 26, 26, 48, 111
- <wellpath-TVD-SD-increase-rate>, 66, 123, 142, 144, 144, 223, 230
- <wellpath-TVD-SD-log-name>, 48, 66, 67, 94, 123, 142, 144, 144, 147, 222, 223
- <wellpath-TVD-SD-range>, 66, 67, 94, 142, 144, 145, 205, 222
- <wellpoint-TVD-pick-SD-log-name>, 143, 204
- wellpoints-before-processing.dat, 54, 54
- wellpoints-excluded-surface-Surface.xyz, 54
- wellpoints-excluded-zonelog-Well.xyz, 54
- wellpoints-Surface.rxat, 27, 48, 49
- wellpoints-Well.rxat, 27, 48, 49
- wellpoints.csv, 12, 27, 29, 40, 43, 43–45, 48, 50, 52, 58, 201, 202, 209, 229, 231
- wellpoints.dat, 54, 54
- wellpoints.rxat, 27, 48, 49, 52, 231, 234
- <wells>, 28, 56, 57, 61, 142, 142, 143, 146, 147, 229
- <width-of-smoothing-kernel>, 69, 146
- Wiener process, 222
- Wikipedia, 137
- wild card in file path, 142, 145, 146
- Windows operating system, 13
- WLS, 198, 237
 - estimate, 198
- Word, 24
- <write-all-logfiles>, 120
- <write-correlation-files>, 53, 96, 121, 229
- <write-expert-files>, 27, 53, 120, 126
- <write-filtered-SD-maps>, 121
- <write-filtered-velocity-trends>, 121
- <write-realization-maps>, 33, 36, 120, 156, 230
- <write-regridded-input-maps>, 121
- <write-scaled-input-isochores>, 121, 126
- <write-scaled-input-SD-isochores>, 121, 155
- <write-unfiltered-output-velocities>, 122
- <write-wells>, 48, 122, 230
- <write-xyz-point-files>, 29, 53–55, 121
- <xinc>, 19, 114, 114, 115, 145
- <xlength>, 19, 114, 115, 115
- XML, 24, 109, 237
 - error, 24
 - syntax, 24
 - text editor, 24
- XML element, *see* element
- xstart
 - grid reference point, 114
 - point in connected volume, 168
 - spill point algorithm, 153

<xstart>, 19, 74, 75, 114, 114, 115, 153, 154, 156, 167, 167, 168
 xyz-point files, write, 121
 <xyz-unit>, 112, 113

 <yinc>, 19, 114, 115, 115, 145
 <ylength>, 19, 114, 115, 115
 ystart
 grid reference point, 114
 point in connected volume, 168
 spill point algorithm, 153
 <ystart>, 19, 74, 75, 114, 114, 115, 153, 154, 156, 167, 168, 168

 <z-unit>, 35, 113, 143, 144
 zonation point, 64, 219, 223, 226
 at edges of zonation, 55, 65
 branching point, 38, 55
 broken, 55, 124
 distance between, 145
 failed, 55
 gridding error, 130
 non-correctable, 55
 output file, 50
 selected, 124, 220, 224
 thin zones, 137
 zonation status, classification, 41
 zonation-broken-Well.xyz, 55
 <zonation-checking>, 39, 119

 zonation-failed-Well.xyz, 55
 zonation-noncorrectable-Well.xyz, 55
 zonation-points/, 27, 33, 50, 50, 53, 55
 zonation-statistics-detailed.csv, 27, 39, 40, 40
 zonation-statistics.csv, 27, 39, 40
 zonation-Status-Well.xyz, 55, 55
 zonation-status.csv, 27, 39, 40, 41
 zonation-undefined-Well.xyz, 55
 zonationpoints-special.xyz, 29, 55
 zonationpoints-Well.rxat, 27, 50, 51, 55
 zonationpoints.dat, 55
 zonationpoints.rxat, 27, 50
 zone log, 17, 56, 142, 143, 219
 file header, 56
 name, 56
 surface constraint, 64
 undefined section, 64
 well format, 56
 zone name, 56, 62, 63, 149
 non-unique, 61
 zone numbers, 149
 zone transition, 58, 60, 144
 caused by fault, 60
 zone, top of, 149
 <zone-log-name>, 56, 142, 143, 143, 147
 <zone-log-specification>, 56, 142, 142
 <zone-log-specification-file>, 143, 143